



# **SE878Kx-Ax Family Product User Guide**

1VV0301402 Rev. 2  
2018-06-20

**TELIT**  
**TECHNICAL**  
**DOCUMENTATION**

## **SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE**

### **NOTICES**

While reasonable efforts have been made to ensure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be reliable, however no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

### **COPYRIGHTS**

This manual and the Telit products described herein may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

### **COMPUTER SOFTWARE COPYRIGHTS**

The Telit and Third Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other Third Party supplied computer programs stored in semiconductor memories or other media. Laws in Italy and other countries preserve for Telit and other Third Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other Third Party supplied SW computer programs contained in the Telit products described in this manual may not be copied, reverse engineered or reproduced in any manner without the express written permission of Telit or the third-party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other Third Party supplied SW, except for the normal non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

## USAGE AND DISCLOSURE RESTRICTIONS

### I. License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

### II. Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

### III. High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such high-risk Activities.

### IV. Trademarks

TELIT and the Stylized T Logo are registered in the Trademark Office. All other product or service names are the property of their respective owners.

### V. Third Party Rights

The software may include Third Party Right software. In this case you agree to comply with all terms and conditions imposed on you in respect of such separate software. In addition to Third Party Terms, the disclaimer of warranty and limitation of liability provisions in this License shall apply to the Third Party Right software.

TELIT HEREBY DISCLAIMS ANY AND ALL WARRANTIES EXPRESS OR IMPLIED FROM ANY THIRD PARTIES REGARDING ANY SEPARATE FILES, ANY THIRD-PARTY MATERIALS INCLUDED IN THE SOFTWARE, ANY THIRD-PARTY MATERIALS FROM WHICH THE SOFTWARE IS DERIVED (COLLECTIVELY "OTHER CODE"), AND THE USE OF ANY OR ALL THE OTHER CODE IN CONNECTION WITH THE SOFTWARE, INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE.

NO THIRD PARTY LICENSORS OF OTHER CODE SHALL HAVE ANY LIABILITY FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOST PROFITS), HOWEVER CAUSED AND WHETHER MADE UNDER CONTRACT, TORT OR OTHER LEGAL THEORY, ARISING IN ANY WAY OUT OF THE USE OR DISTRIBUTION OF THE OTHER CODE OR THE EXERCISE OF ANY RIGHTS GRANTED UNDER EITHER OR BOTH THIS LICENSE AND THE LEGAL TERMS APPLICABLE TO ANY SEPARATE FILES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## PRODUCT APPLICABILITY

| PRODUCT   |
|-----------|
| SE878K3-A |
| SE878K7-A |

***Table 0-1 Product Applicability Table***

# **CONTENTS**

|                                                                  |           |
|------------------------------------------------------------------|-----------|
| <b>NOTICES</b>                                                   | <b>2</b>  |
| <b>COPYRIGHTS</b>                                                | <b>2</b>  |
| <b>COMPUTER SOFTWARE COPYRIGHTS</b>                              | <b>2</b>  |
| <b>USAGE AND DISCLOSURE RESTRICTIONS</b>                         | <b>3</b>  |
| <b>PRODUCT APPLICABILITY</b>                                     | <b>4</b>  |
| <b>CONTENTS</b>                                                  | <b>5</b>  |
| <b>TABLES</b>                                                    | <b>8</b>  |
| <b>FIGURES</b>                                                   | <b>9</b>  |
| <b>1 INTRODUCTION</b>                                            | <b>10</b> |
| 1.1 Purpose                                                      | 10        |
| 1.2 Contact and Support Information                              | 10        |
| 1.3 Related Documents and Downloads                              | 10        |
| 1.3.1 Related Documents and downloads                            | 10        |
| 1.3.2 Related Documents Requiring a Non-Disclosure Agreement     | 10        |
| 1.4 Text Conventions                                             | 11        |
| <b>2 PRODUCT DESCRIPTION</b>                                     | <b>12</b> |
| 2.1 Product Overview                                             | 12        |
| 2.2 SE878Kx-Ax Product Naming                                    | 13        |
| 2.3 Product Variants                                             | 13        |
| 2.3.1 Multi-constellation modules (MT3333-based) features        | 14        |
| 2.3.2 GPS-only modules (MT3337E-based) features                  | 14        |
| 2.4 Block Diagrams                                               | 15        |
| 2.5 Module Photos                                                | 16        |
| <b>3 EVALUATION BOARD (EVB)</b>                                  | <b>17</b> |
| <b>4 PRODUCT FEATURES</b>                                        | <b>18</b> |
| 4.1 Onboard (built-in) Antenna and RF switch (Built-in/External) | 18        |
| 4.2 Multi-Constellation Navigation (MT3333-based modules only)   | 18        |
| 4.3 Quasi-Zenith Satellite System (QZSS)                         | 18        |
| 4.4 Satellite-Based Augmentation System (SBAS)                   | 18        |
| 4.4.1 SBAS Corrections                                           | 18        |
| 4.4.2 SBAS Ranging                                               | 18        |
| 4.5 Differential GPS (DGPS)                                      | 18        |
| 4.6 Assisted GPS (AGPS)                                          | 19        |
| 4.6.1 Locally-generated AGPS - Embedded Assist System (EASY)     | 19        |
| 4.6.2 Server-generated AGPS - Extended Prediction Orbit (EPO)    | 19        |

|          |                                                                  |           |
|----------|------------------------------------------------------------------|-----------|
| 4.6.3    | Host EPO .....                                                   | 19        |
| 4.7      | Elevation Mask Angle .....                                       | 19        |
| 4.8      | Static Navigation .....                                          | 20        |
| 4.9      | Jamming Rejection – Active Interference Cancellation (AIC) ..... | 20        |
| 4.10     | Internal LNA .....                                               | 21        |
| 4.11     | 10 Hz Navigation .....                                           | 21        |
| 4.12     | 1PPS .....                                                       | 21        |
| 4.13     | Serial I/O Ports .....                                           | 21        |
| 4.14     | Power Management Modes .....                                     | 22        |
| 4.14.1   | Full Power Continuous Mode .....                                 | 22        |
| 4.14.2   | Backup Mode (Perpetual) (MT3333-based modules only) .....        | 23        |
| 4.14.3   | Standby Modes .....                                              | 23        |
| 4.14.4   | GLP Mode (MT3333-based modules only) .....                       | 23        |
| 4.14.5   | Periodic Modes (MT3333-based modules only) .....                 | 24        |
| 4.14.6   | AlwaysLocate™ Mode (MT3333-based modules only) .....             | 25        |
| <b>5</b> | <b>DATA RETENTION .....</b>                                      | <b>26</b> |
| <b>6</b> | <b>PRODUCT PERFORMANCE .....</b>                                 | <b>27</b> |
| 6.1      | Horizontal Position Accuracy .....                               | 27        |
| 6.2      | Time to First Fix .....                                          | 27        |
| 6.3      | Sensitivity .....                                                | 28        |
| 6.4      | Jamming Mitigation Performance example .....                     | 29        |
| <b>7</b> | <b>MESSAGE INTERFACE .....</b>                                   | <b>30</b> |
| 7.1      | NMEA Output Messages .....                                       | 30        |
| 7.1.1    | Standard Messages .....                                          | 30        |
| 7.1.2    | Proprietary Output Messages .....                                | 31        |
| 7.2      | NMEA Input Commands .....                                        | 32        |
| 7.2.1    | NMEA Commands List .....                                         | 33        |
| <b>8</b> | <b>FLASH UPGRADABILITY .....</b>                                 | <b>34</b> |
| <b>9</b> | <b>ELECTRICAL INTERFACE .....</b>                                | <b>35</b> |
| 9.1      | SE878Kx-Ax Family Pinout Diagram .....                           | 35        |
| 9.2      | SE878Kx-Ax Module Pinout Tables .....                            | 36        |
| 9.2.1    | SE878K3-Ax Pinout Table .....                                    | 36        |
| 9.2.2    | SE878K7-Ax Pinout Table .....                                    | 37        |
| 9.3      | Signal Levels .....                                              | 38        |
| 9.3.1    | Logic Levels – Inputs .....                                      | 38        |
| 9.3.2    | Logic Levels – Outputs .....                                     | 38        |
| 9.4      | DC Power Supply .....                                            | 39        |
| 9.4.1    | VCC .....                                                        | 39        |
| 9.4.2    | VBATT .....                                                      | 39        |
| 9.4.3    | DC Power Requirements .....                                      | 39        |
| 9.4.4    | DC Power Consumption: SE878K3-Ax .....                           | 40        |

|           |                                                                   |           |
|-----------|-------------------------------------------------------------------|-----------|
| 9.4.5     | DC Power Consumption: SE878K7-Ax.....                             | 40        |
| 9.5       | Control Signals .....                                             | 41        |
| 9.5.1     | Input Signals .....                                               | 41        |
| 9.5.2     | Output Signals.....                                               | 42        |
| 9.6       | I/O Ports .....                                                   | 43        |
| 9.6.1     | Port Usage .....                                                  | 43        |
| 9.6.2     | UART Port Operation .....                                         | 43        |
| 9.6.3     | I <sup>2</sup> C Port Operation (MT3333-based modules only) ..... | 44        |
| 9.6.4     | SPI Port Operation (MT3333-based modules only) .....              | 44        |
| <b>10</b> | <b>RF FRONT-END DESIGN .....</b>                                  | <b>45</b> |
| 10.1      | RF Signal Requirements.....                                       | 45        |
| 10.2      | External GNSS Antenna .....                                       | 46        |
| 10.3      | Onboard GNSS Antenna (included in the module).....                | 46        |
| 10.4      | Ground Plane.....                                                 | 47        |
| 10.5      | System Noise Floor.....                                           | 48        |
| 10.6      | RF Interference.....                                              | 48        |
| 10.7      | Shielding.....                                                    | 48        |
| <b>11</b> | <b>REFERENCE DESIGN.....</b>                                      | <b>49</b> |
| <b>12</b> | <b>MECHANICAL DRAWING .....</b>                                   | <b>50</b> |
| <b>13</b> | <b>PCB FOOTPRINT .....</b>                                        | <b>51</b> |
| <b>14</b> | <b>PACKAGING AND HANDLING .....</b>                               | <b>52</b> |
| 14.1      | Product Marking and Serialization.....                            | 52        |
| 14.2      | Product Packaging.....                                            | 53        |
| 14.3      | Moisture Sensitivity .....                                        | 55        |
| 14.4      | ESD Sensitivity .....                                             | 57        |
| 14.5      | Assembly Considerations.....                                      | 57        |
| 14.6      | Washing Considerations .....                                      | 57        |
| 14.7      | Reflow.....                                                       | 58        |
| 14.8      | Safety .....                                                      | 59        |
| 14.9      | Disposal.....                                                     | 59        |
| <b>15</b> | <b>ENVIRONMENTAL REQUIREMENTS.....</b>                            | <b>60</b> |
| 15.1      | Operating Environmental Limits .....                              | 60        |
| 15.2      | Storage Environmental Limits .....                                | 60        |
| <b>16</b> | <b>COMPLIANCES.....</b>                                           | <b>61</b> |
| 16.1      | CE Declarations of Conformity .....                               | 62        |
| <b>17</b> | <b>SAFETY RECOMMENDATIONS .....</b>                               | <b>64</b> |
| <b>18</b> | <b>GLOSSARY AND ACRONYMS.....</b>                                 | <b>65</b> |
| <b>19</b> | <b>DOCUMENT HISTORY .....</b>                                     | <b>68</b> |

## **TABLES**

|                                                            |    |
|------------------------------------------------------------|----|
| Table 0-1 Product Applicability Table .....                | 4  |
| Table 2-1 Product Variants.....                            | 13 |
| Table 4-1 Power Management command summary .....           | 22 |
| Table 5-1 Data Retention .....                             | 26 |
| Table 6-1 SE878Kx-Ax Horizontal Position Accuracy.....     | 27 |
| Table 6-2 SE878Kx-Ax Time to First Fix .....               | 27 |
| Table 6-3 SE878Kx-Ax Sensitivity.....                      | 28 |
| Table 7-1 Default NMEA output messages .....               | 30 |
| Table 7-2 Available Messages .....                         | 31 |
| Table 7-3 NMEA Talker IDs .....                            | 31 |
| Table 7-4 Proprietary Output Messages.....                 | 31 |
| Table 7-5 NMEA Input commands .....                        | 33 |
| Table 9-1 SE878K3-Ax Pinout Table.....                     | 36 |
| Table 9-2 SE878K7-Ax Pinout Table.....                     | 37 |
| Table 9-3 Input Logic Levels .....                         | 38 |
| Table 9-4 Output Logic Levels .....                        | 38 |
| Table 9-5 DC Supply Voltage.....                           | 39 |
| Table 9-6 SE878K3-Ax Power Consumption.....                | 40 |
| Table 9-7 Antenna Status .....                             | 41 |
| Table 14-1 Product Label Description .....                 | 52 |
| Table 15-1 SE878Kx-Ax Operating Environmental Limits ..... | 60 |
| Table 15-2 SE878Kx-Ax Storage Environmental Limits.....    | 60 |

## **FIGURES**

|                                                          |    |
|----------------------------------------------------------|----|
| Figure 2-1 Product Naming .....                          | 13 |
| Figure 2-2 SE878K3-Ax Block Diagram .....                | 15 |
| Figure 2-3 SE878K7-Ax Block Diagram .....                | 15 |
| Figure 2-4 SE878Kx-Ax Top View.....                      | 16 |
| Figure 2-5 SE878Kx-Ax 3D Views.....                      | 16 |
| Figure 4-1 Jamming Rejection .....                       | 20 |
| Figure 4-2 GNSS Low Power (GLP) mode diagram .....       | 23 |
| Figure 4-3 Periodic Modes diagram .....                  | 24 |
| Figure 4-4 Periodic Mode example 1.....                  | 24 |
| Figure 4-5 Periodic Mode example 2.....                  | 24 |
| Figure 6-1 Jamming with AIC Disabled .....               | 29 |
| Figure 6-2 Jamming with AIC Enabled .....                | 29 |
| Figure 9-1 SE878Kx-Ax Family Pinout Diagram.....         | 35 |
| Figure 9-2 1PPS NMEA synchronization.....                | 42 |
| Figure 10-1 SE878Kx-Ax Ground Plane.....                 | 47 |
| Figure 11-1 SE878Kx-Ax Reference Design .....            | 49 |
| Figure 12-1 SE878Kx-A Mechanical Drawing .....           | 50 |
| Figure 13-1 SE878Kx-Ax PCB Footprint .....               | 51 |
| Figure 14-1 Product Label.....                           | 52 |
| Figure 14-2 SE878Kx-Ax Tape & Reel Packaging .....       | 53 |
| Figure 14-3 SE878Kx-Ax Tray Packaging.....               | 54 |
| Figure 14-4 Moisture Sensitive Device Label .....        | 56 |
| Figure 14-5 Recommended Reflow Profile.....              | 58 |
| Figure 16-1 SE878K3-A CE Declaration of Conformity ..... | 62 |
| Figure 16-2 SE878K7-A CE Declaration of Conformity ..... | 63 |

# 1 INTRODUCTION

## 1.1 Purpose

The purpose of this document is to provide information regarding the function, features, and usage of the Telit products listed in **Table 0-1 Product Applicability Table**.

Please refer to section **2 Product Description** for details of the members of the product family.

## 1.2 Contact and Support Information

For general contact, technical support services, technical questions, and to report documentation errors contact Telit Technical Support at:

- [TS-EMEA@telit.com](mailto:TS-EMEA@telit.com)
- [TS-AMERICAS@telit.com](mailto:TS-AMERICAS@telit.com)
- [TS-APAC@telit.com](mailto:TS-APAC@telit.com)

Alternatively, use:

- <http://www.telit.com/support>

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

- <http://www.telit.com>

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.

## 1.3 Related Documents and Downloads

Please refer to <http://www.telit.com/gnss/> for current documentation and downloads

### 1.3.1 Related Documents and downloads

- Datasheets
- Product User Guides
- EVK User Guides
- Software User Guides
- Application Notes
- TelitView installation and documentation

### 1.3.2 Related Documents Requiring a Non-Disclosure Agreement

- Authorized Software User Guides
- Product firmware

## 1.4 Text Conventions

All dates are in ISO 8601 format, i.e. YYYY-MM-DD.



**Danger – This information MUST be followed or catastrophic equipment failure or bodily injury may occur.**

---



**Caution or Warning – Alerts the user to important points about integrating the module, if these points are not followed, the module and end user equipment may fail or malfunction.**

---



**Tip or Information – Provides advice and suggestions that may be useful when integrating the module.**

---

## 2 PRODUCT DESCRIPTION

The SE878Kx-Ax GNSS antenna module family provides complete multi-constellation position, velocity, and time (PVT) engines featuring high performance, high sensitivity, and low power consumption.

All modules compute a navigation solution using GPS signals. Multi-constellation modules add GLONASS and Galileo signals to yield better coverage, greater accuracy, and improved availability.

- Multi-constellation (MT3333): SE878K3-A
- GPS-only (MT3337): SE878K7-A

### **Special features -**

- Built-in SMT patch antenna
- Switch to allow an external antenna to be selected for RF input


### 2.1 Product Overview

- Complete GNSS receiver module including memory, LNA, TCXO, and RTC plus a built-in patch antenna and an RF input switch for an external antenna
- MT3333-based: GPS L1 C/A, Glonass L1, BeiDou B1, Galileo E1, QZSS simultaneous ranging with 99 search and 33 tracking channels. Galileo.
- MT3337-based: GPS(L1) and QZSS ranging with 66 search and 22 tracking channels
- MT3333-based: SBAS capable (WAAS, EGNOS, MSAS, GAGAN), including ranging
- DGPS capable using the RTCM SC-104 protocol
- AGPS support for extended ephemeris using local or server-based solutions:
  - Local: Embedded Assist System (EASY)
  - Server: Extended Prediction Orbit (EPO)
- Jamming Rejection: Active Interference Cancellation (AIC)
- 1PPS output
- Fix reporting at 1 Hz (default). Maximum: 10Hz
- NMEA command input and data output
- Two serial ports for input commands and output messages:
  - MT3333-based: The secondary serial port is I<sup>2</sup>C and is configurable for SPI or UART interface
  - MT3337-based: The secondary port is UART
- MT3333-based: 8 Megabit built-in flash memory
- MT3337-based: ROM memory
- Less than 80 mW total power consumption (Full Power mode - typical)
- Power management modes for extended battery life
- Supported by evaluation kits
- -40°C to +85°C industrial temperature range
- (-A) 18 x 18 x 6.2 mm (nominal) 32-pad LGA package.
- Surface mountable by standard SMT equipment
- RoHS compliant design

## 2.2 SE878Kx-Ax Product Naming

**Figure 2-1 Product Naming**

**SE878Kx-Ax Product Naming**

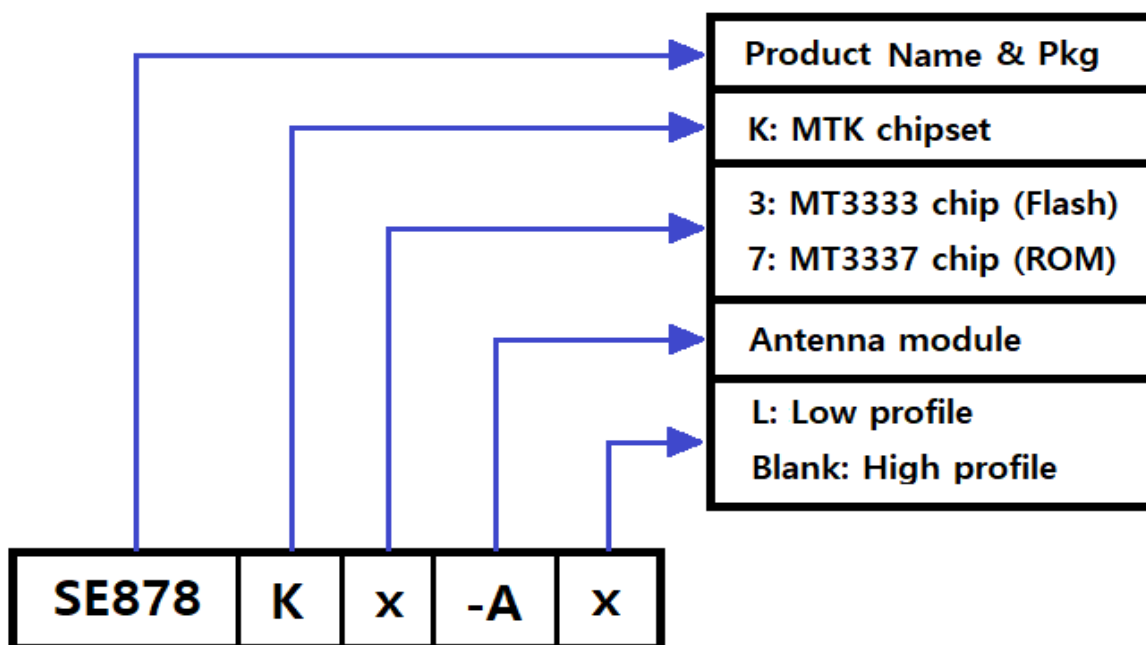

## 2.3 Product Variants

| Module    | Chipset | Constellations | Memory | Antenna | Notes |
|-----------|---------|----------------|--------|---------|-------|
| SE878K3-A | MT3333  | Multi          | Flash  | High    |       |
| SE878K7-A | MT3337E | GPS only       | ROM    | High    |       |

**Table 2-1 Product Variants**


### 2.3.1 Multi-constellation modules (MT3333-based) features

- MediaTek MT3333 engine
- GPS, GLONASS BeiDou, Galileo, and QZSS satellite signals
- Low noise amplifier (LNA) on patch antenna interface
- RF switch for external antenna interface
- Flash memory with upgradable firmware
- AGPS: Local (EASY) and server-based (EPO)
- Force-On pin
- I<sup>2</sup>C (default) on the 2<sup>nd</sup> port. May be configured for UART or SPI


### 2.3.2 GPS-only modules (MT3337E-based) features

- MediaTek MT3337E (enhanced) engine
- GPS and QZSS satellite signals
- Low noise amplifier (LNA) on patch antenna interface
- RF switch for external antenna interface
- ROM memory
- AGPS: Local (EASY) and host-based (EPO)
- No Force-On pin
- Only UART on the 2<sup>nd</sup> port

## 2.4 Block Diagrams

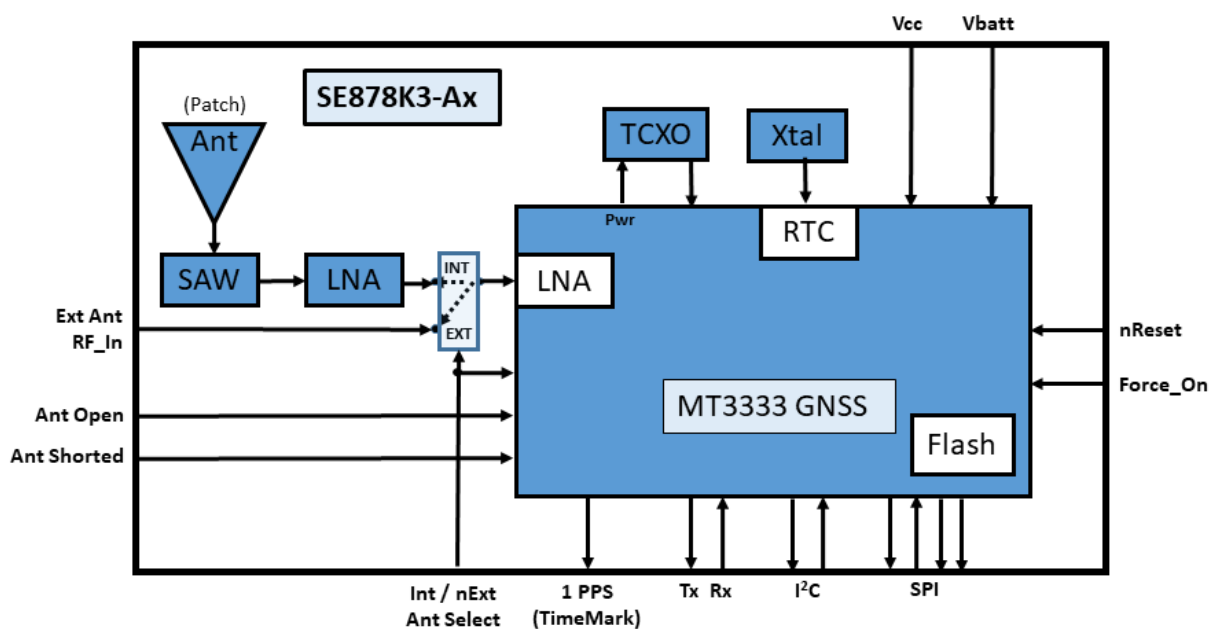

**Figure 2-2 SE878K3-Ax Block Diagram**

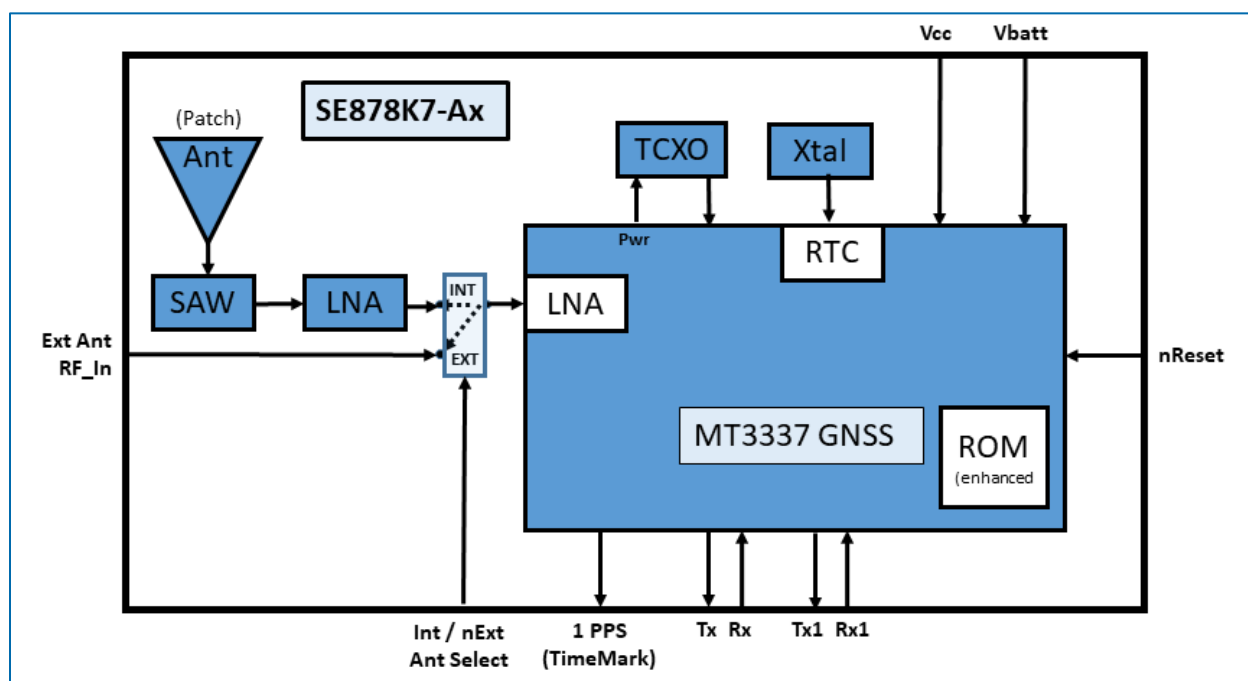


**Figure 2-3 SE878K7-Ax Block Diagram**


## 2.5 Module Photos



*Figure 2-4 SE878Kx-Ax Top View*

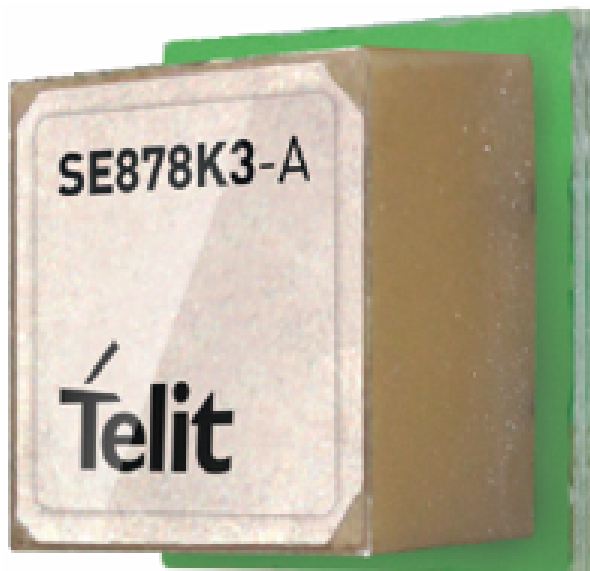

TOP

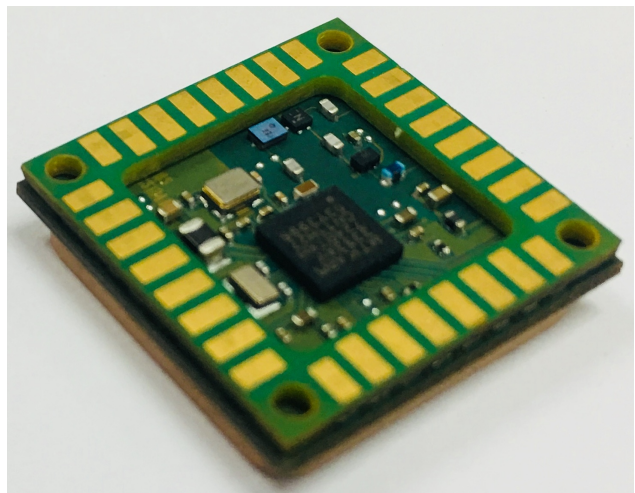

BOTTOM

*Figure 2-5 SE878Kx-Ax 3D Views*

### 3 EVALUATION BOARD (EVB)

The EVB contains the module mounted on a PC Board to facilitate development and testing.

Please refer to the product Evaluation Board User Guide for detailed information.



**Figure 3-2 SE878Kx-Ax Evaluation Board**

## 4 PRODUCT FEATURES

### 4.1 Onboard (built-in) Antenna and RF switch (Built-in/External)

The module includes an RF switch which allows the user to select the onboard antenna or an external antenna as the GNSS signal source. See section **2.4 Block Diagrams**.

### 4.2 Multi-Constellation Navigation (**MT3333-based modules only**)

The GPS and GLONASS constellations are enabled by default. BeiDou and Galileo are also supported. If BeiDou is enabled, GLONASS and Galileo are disabled.

The user may enable or disable constellations via the **\$PMTK353** command.

### 4.3 Quasi-Zenith Satellite System (QZSS)

The satellites of the Japanese regional system are in a highly inclined, elliptical geosynchronous orbit, allowing continuous high-elevation coverage over Japan using only three satellites plus one geostationary satellite. SV IDs 193, 194, & 195 are supported. They provide ranging signals to augment the GPS system.

QZSS constellation usage is controlled by the **\$PMTK352** command and is disabled by default. NMEA reporting for QZSS may be enabled/disabled by the **\$PMTK351** command.

### 4.4 Satellite-Based Augmentation System (SBAS)

**SBAS is not supported on MT3337E-based modules.**

The receiver is capable of using SBAS satellites as a source of both differential corrections and satellite ranging measurements. These systems (WAAS, EGNOS, GAGAN and MSAS) use geostationary satellites to transmit signals similar to those of GPS and in the same L1 band.

Enabling SBAS limits the maximum fix rate to 5 Hz. If disabled, the maximum is 10 Hz.

The module is enabled for SBAS by default, but can be disabled by command **PTMK313**.

Either SBAS or DGPS corrections can be used and are set by the **PMTK301** command.

#### 4.4.1 SBAS Corrections

The SBAS satellites transmit a set of differential corrections to their respective regions. The use of SBAS corrections can improve positioning accuracy

#### 4.4.2 SBAS Ranging

The use of SBAS satellites can augment the number of measurements available for the navigation solution, thus improving availability and accuracy.

### 4.5 Differential GPS (DGPS)

DGPS is a Ground-Based Augmentation System (GBAS) for reducing position errors by applying corrections from a set of accurately-surveyed ground stations located over a wide area. These reference stations measure the range to each satellite and compare it to the known-good range. The differences can then be used to compute a set of corrections which are transmitted to a DGPS receiver, either by radio or over the internet.

The DGPS receiver can then send them to the module's serial port using RTCM SC-104 protocol. Message types 1, 2, 3, and 9 are accepted.

The corrections can significantly improve the accuracy of the position reported to the user.

The receiver can accept either the RTCM SC-104 messages or SBAS differential data via command **PMTK301**.

## 4.6 Assisted GPS (AGPS)

Assisted GPS (or Aided GPS) is a method by which information from a source other than broadcast GPS signals is used to improve (i.e. reduce) TTFF.

The necessary ephemeris data is calculated either by the receiver itself (locally-generated ephemeris) or a server (server-generated ephemeris) and is then stored in the module.

### 4.6.1 Locally-generated AGPS - Embedded Assist System (EASY)

Proprietary algorithms within the module perform GPS ephemeris prediction locally from stored broadcast ephemeris data (received from tracked satellites). The algorithms predict orbital parameters for up to three days. The module must operate in Full Power mode for at least 5 minutes to collect ephemeris data from visible satellites, or 12 hours for the full constellation. EASY is disabled if the fix rate is > 1 Hz.

EASY is on by default, but can be disabled by command **PMTK869**.

### 4.6.2 Server-generated AGPS - Extended Prediction Orbit (EPO) (MT3333-based modules only)

Server-generated ephemeris predictions are maintained on Telit AGPS servers. The predicted ephemeris file is obtained from the AGPS server and is transmitted to the module over a serial port. These predictions do not require local broadcast ephemeris collection, and are valid for up to 14 days.

The MT3333-based modules support server-based AGPS as a standard feature.

Please refer to the next section regarding EPO support (Host EPO) on the SE878K7-Ax modules.

Note that the EPO data stream does not conform to the NMEA-0183 standard.

Please refer to the Telit EPO Application Note for details. Example source code is available under NDA.

Contact TELIT for support regarding this service.

See the next section regarding EPO support (Host EPO) on the MT3337-based modules.

### 4.6.3 Host EPO

The MT3337-based modules do not have flash memory. However, they can still make use of Assisted GPS. If the system design includes a host processor, it can access server-generated EPO data and send it to the module over the serial port. This data is valid for six hours.

Note that the EPO data stream does not conform to the NMEA-0183 standard.

Please refer to the MT333x Host EPO Application Note.

Contact Telit support for further details.

## 4.7 Elevation Mask Angle

The default elevation mask angle is 5°. It can be changed via the **PMTK311** command.

## 4.8 Static Navigation

Static Navigation is an operating mode in which the receiver will freeze the position fix when the speed falls below a set threshold (indicating that the receiver is stationary).

The course and altitude are also frozen, and the speed is reported as “0”.

The navigation solution is unfrozen when the speed increases above a threshold or when the computed position exceeds a set distance (10 m) from the frozen position (indicating that the receiver is again in motion). The speed threshold can be set via the **PMTK386** command.

Set the threshold to zero to disable static navigation.


This feature is useful for applications in which very low dynamics are not expected, the classic example being an automotive application.

Static Navigation is disabled by default, but can be enabled by command.

## 4.9 Jamming Rejection – Active Interference Cancellation (AIC)

The receiver module detects and removes narrow-band interfering signals (jamming signals) without the need for external components or tuning. It rejects up to 12 CW (Continuous Wave) type signals of up to  $-80$  dBm (total power signal levels). This feature is useful both in the design stage and during the production stage for uncovering issues related to unexpected jamming. When enabled, Jamming Rejection will increase current drain by about 1 mA, and impact on GNSS performance is low at modest jamming levels. However, at high jamming levels (e. g.  $-90$  to  $-80$  dBm), the RF signal sampling ADC starts to become saturated after which the GNSS signal levels start to diminish.

Jamming rejection is enabled by default, but can be disabled with the **PMTK286** command.

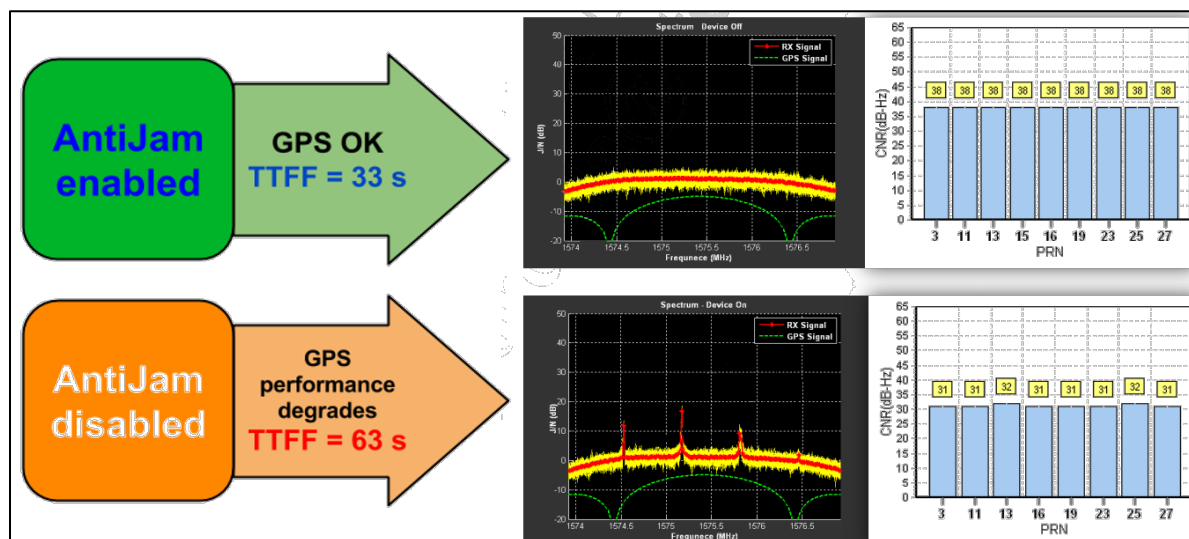

**Figure 4-1 Jamming Rejection**

## 4.10 Internal LNA

The modules include a built-in LNA and SAW filter to improve sensitivity when using the integrated patch antenna.

## 4.11 10 Hz Navigation

The default rate of 1 Hz can be changed by command **PMTK500** to a maximum of 10 Hz. MT3337-based receivers have a maximum of 5 Hz. Enabling the SBAS feature limits the maximum fix rate to 5 Hz.

## 4.12 1PPS

1PPS is a one pulse per second signal.

Please refer to Section **9.5.2.1 1PPS** for details.

## 4.13 Serial I/O Ports

### Port 0:

All modules include a primary UART serial port.

### Port 1:

The secondary port on MT3333-based modules is I<sup>2</sup>C by default, but can be changed to UART or SPI via command.

The secondary port on MT3337-based modules is UART and cannot be changed.

Please refer to Section **9.6 I/O Ports** for details.

## 4.14 Power Management Modes

The receiver supports operating modes that reduce overall current consumption with less frequent position fixes. Availability of GNSS signals in the operating environment will be a factor in choosing power management modes. The designer can choose a mode that provides the best trade-off of navigation performance versus power consumption.

The various power management modes can be enabled by sending the desired command:

| Power Management - Command Summary     |      |                             |
|----------------------------------------|------|-----------------------------|
| \$PMTK Cmd                             | Type | State                       |
| <b>Full Power</b>                      |      |                             |
| 225                                    | 0    | Full                        |
| <b>Perpetual Backup</b>                |      |                             |
| To wake: Force_On signal (MT3333 only) |      |                             |
| 225                                    | 4    | Backup                      |
| <b>Standby</b>                         |      |                             |
| To wake: Character to RX               |      |                             |
| 161                                    | 0    | Stop                        |
| 161                                    | 1    | Backup                      |
| <b>Periodic (MT3333 only)</b>          |      |                             |
| 223                                    | -    | Specify Extended Parameters |
| 225                                    | 1    | Backup                      |
| 225                                    | 2    | Standby                     |
| <b>Always Locate (MT3333 only)</b>     |      |                             |
| 223                                    | -    | Specify Extended Parameters |
| 225                                    | 8    | Standby                     |
| 225                                    | 9    | Backup                      |
| <b>GLP (MT3333 only)</b>               |      |                             |
| 262                                    | 0    | Disable                     |
| 262                                    | 3    | Enable                      |

**Table 4-1 Power Management command summary**

### 4.14.1 Full Power Continuous Mode

The receiver starts in full power continuous mode when powered up. This mode uses the acquisition engine to search for all possible satellites at full performance, resulting in the highest sensitivity and the shortest possible TTFF.

The receiver then switches to the tracking engine to lower the power consumption when:

- A valid GPS/GNSS position is obtained
- The ephemeris for each satellite in view is valid

To return to Full Power mode from a low power mode, send the NMEA command: **\$PMTK225,0\*2B** just after the module wakes up from its previous sleep cycle.

If power is removed from Vbatt, then Time, Ephemeris, Almanac, EASY, EPO data, and PMTK configuration data will be lost. If Vbatt is maintained, no data will be lost.

#### 4.14.2 Backup Mode (Perpetual) (MT3333-based modules only)

In the backup mode, the internal Power Management Unit is turned off, leaving only BBRAM and the RTC powered up. This reduces power consumption to the minimum required that still provides data retention to enable hot and warm starts.

To enter the Perpetual Backup mode, use the NMEA command: **\$PMTK225,4**.



Only the MT3333-based modules have a Force\_On pin.

This command will be rejected on MT3337-based modules.

To exit the Perpetual Backup mode, bring the Force\_On signal high, then return to low.

Please refer to Section **9.5.1.2 FORCE\_ON** for details.

#### 4.14.3 Standby Modes

In these modes, the receiver stops navigation, the internal processor enters the standby state, and the current drain at main supply VCC\_IN is substantially reduced.

STOP: ARM baseband, RF, and TCXO are powered down

SLEEP: ARM baseband and RF are powered down

Standby mode is entered by sending the following NMEA command:

**\$PMTK161,0\*28** (STOP Mode)

**\$PMTK161,1\*29** (SLEEP Mode)

To exit a Standby mode, send any byte to the host port (RX).


#### 4.14.4 GLP Mode (MT3333-based modules only)

In the GNSS Low Power (GLP) mode, power consumption is reduced for some time during a one second period. The module will alternate this cycling with periods of full power when necessary, for example weak signals or decoding the navigation message.

A typical current draw is 10 to 14 mA, depending on conditions.

Note that position accuracy will be reduced during GLP operation, therefore the user must determine the tradeoff between power consumption and desired accuracy.

A timeline is shown below:

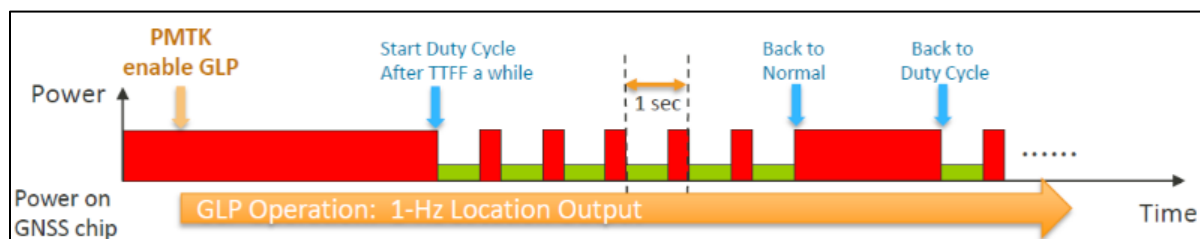

**Figure 4-2 GNSS Low Power (GLP) mode diagram**

To enter the GLP mode, send the command:

**\$PMTK262,3**


To exit the GLP mode and return to full-power mode, send the command:

**\$PMTK262,0**


#### 4.14.5 Periodic Modes (MT3333-based modules only)

These modes allow autonomous power on/off control with reduced fix rate to decrease average power consumption. The main power supply pin VCC\_ON is still powered, but power distribution to internal circuits is controlled by the receiver firmware.


- STANDBY(SLEEP): ARM baseband and RF are powered down.
- BACKUP: ARM baseband, RF, and TCXO are powered down. RTC is powered up.

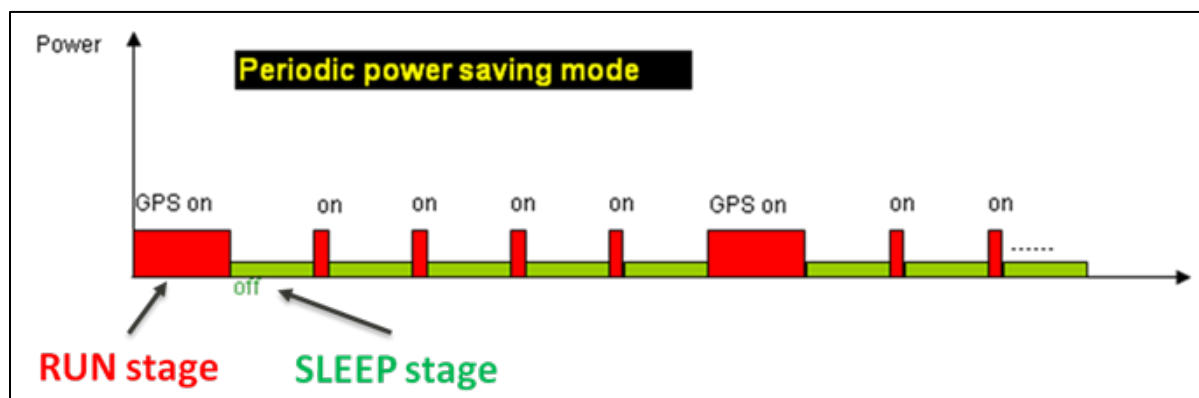

**Figure 4-3 Periodic Modes diagram**

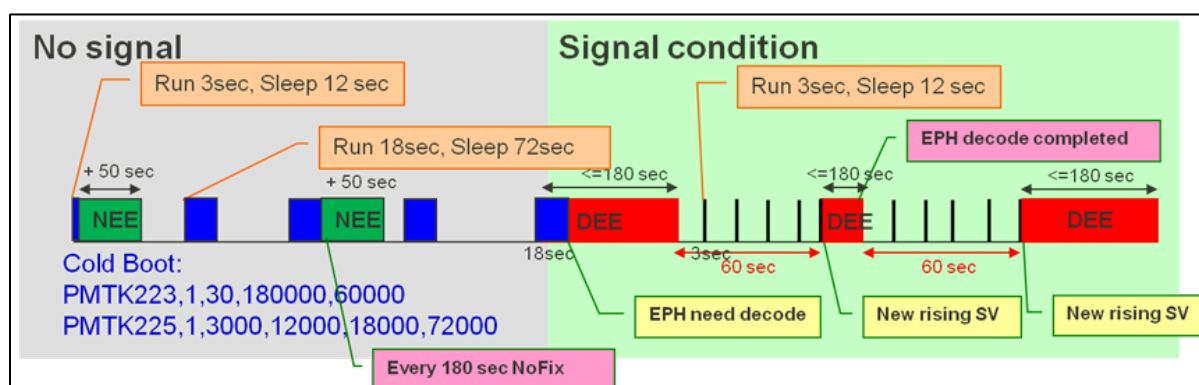

**Figure 4-4 Periodic Mode example 1**

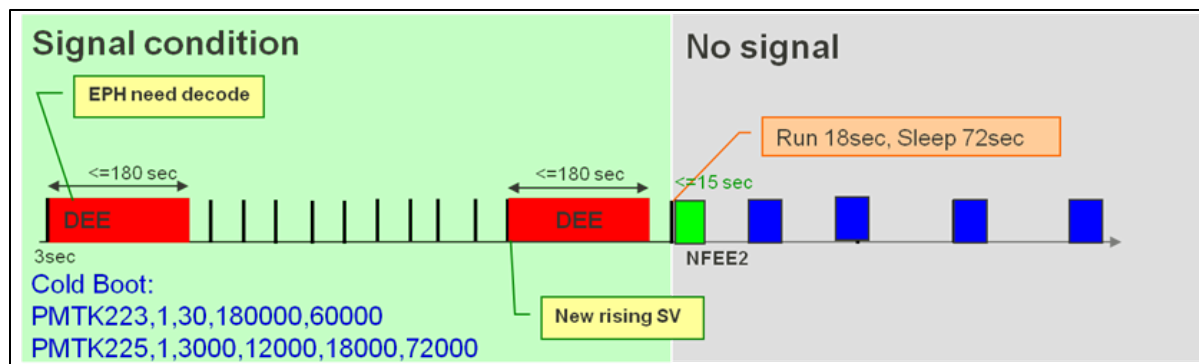

**Figure 4-5 Periodic Mode example 2**

To enter a Periodic mode, send the following NMEA command(s):

**\$PMTK223,<SV>,<SNR>,<Extension threshold>,<Extension gap>\*<checksum>** (Optional)

Where:

SV = 1 to 4, default = 1

SNR = 25 to 30, default = 28

Ext. threshold = 40 000 to 180 000 ms, default = 180 000

Ext. gap = 0 to 3 600 000 ms, default = 180 000

This is the limit between successive DEE

**\$PMTK225,<Type>,<Run\_time>,<Sleep\_time>,<2<sup>nd</sup>\_run\_time>,<2<sup>nd</sup>\_sleep\_time>\*<checksum>**

Where:

Type = 1 for Periodic (backup) mode or 2 for Periodic (standby) mode

Run\_time = Full Power period (ms)

Sleep\_time = Standby period (ms)

2<sup>nd</sup>\_run\_time = Full Power period (ms) for extended acquisition if GNSS acquisition fails during Run\_time

2<sup>nd</sup>\_sleep\_time = Standby period (ms) for extended sleep if GNSS acquisition fails during Run\_time

Example: \$PMTK225,1,3000,12000,18000,72000\*16  
for periodic mode with 3 s navigation and 12 s sleep in backup state.

The acknowledgement response for the command is:

\$PMTK001,225,3\*35

To exit Periodic Sleep mode, send the NMEA command

**\$PMTK225,0\*2B**

just after the module wakes up from a previous sleep cycle.

#### 4.14.6 AlwaysLocate™ Mode (MT3333-based modules only)

AlwaysLocate™ is an intelligent controller of the Periodic mode where the main supply pin VCC\_IN is still powered, but power distribution is controlled internally. Depending on the environment and motion conditions, the module can autonomously and adaptively adjust the parameters of the Periodic mode (e.g. RF on/off ratio and fix rate) to achieve a balance in positioning accuracy and power consumption. The average current drain will vary based on conditions.

To enter an AlwaysLocate mode, send the following NMEA command:

**\$PMTK225,<mode>\*<checksum><CR><LF>**

Where mode = 8 for AlwaysLocate (standby) mode or 9 for AlwaysLocate (backup) mode

Example: \$PMTK225,9\*22

The acknowledgement response for the command is:

\$PMTK001,225,3\*35

To exit AlwaysLocate mode, send the NMEA command:

**\$PMTK225,0\*2B**

just after the module wakes up from its previous sleep cycle.

## 5 DATA RETENTION

(MT3333-based modules only)

The receiver is capable of retaining certain data elements under the various initialization types.

If Vbatt is maintained, no data will be lost.

The following table shows which data elements are saved under each type of initialization if both Vcc and Vbatt are removed.

To erase EPO data, use the **\$PMTK127** command.

| Data Retention (1)                                                                                                                                                                                                                                              |         |           |       |          |      |          |       |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|-----------|-------|----------|------|----------|-------|
| Initialization                                                                                                                                                                                                                                                  | Almanac | Ephemeris | EPO   | Host EPO | EASY | Position | Time  |
| Power Cycle                                                                                                                                                                                                                                                     |         |           | Y (2) |          |      |          |       |
| Reset (signal)                                                                                                                                                                                                                                                  |         |           | Y     |          |      |          |       |
| Full Cold Start                                                                                                                                                                                                                                                 |         |           | Y     |          |      |          | (3)   |
| Cold Start                                                                                                                                                                                                                                                      |         |           | Y     | Y        | Y    |          | Y (3) |
| Warm Start                                                                                                                                                                                                                                                      | Y       |           | Y     | Y        | Y    | Y        | Y     |
| Hot Start                                                                                                                                                                                                                                                       | Y       | Y         | Y     | Y        | Y    | Y        | Y     |
| Reacquisition                                                                                                                                                                                                                                                   | Y       | Y         | Y     | Y        | Y    | Y        | Y     |
| Note 1: Commanded parameters (e.g. UART speed, feature enables, etc.) are not preserved over a power cycle.                                                                                                                                                     |         |           |       |          |      |          |       |
| Note 2: EPO is not available on the MT3337 (ROM-based modules). Use Host EPO.                                                                                                                                                                                   |         |           |       |          |      |          |       |
| <b>Note 3:</b> The standard definition of “Cold Start” does not allow time to be preserved.<br> Use “Full Cold Start” to compare with other vendor’s products’ “Cold Start”. |         |           |       |          |      |          |       |

**Table 5-1 Data Retention**

## 6 PRODUCT PERFORMANCE

### 6.1 Horizontal Position Accuracy

| Constellation                                                | CEP (m) |
|--------------------------------------------------------------|---------|
| GPS                                                          | 1.3     |
| GPS + Glonass                                                | 1.8     |
| Test Conditions: 24-hr Static, Live signals, Full Power mode |         |
| Note: MT3337-based modules support GPS only                  |         |

**Table 6-1 SE878Kx-Ax Horizontal Position Accuracy**

### 6.2 Time to First Fix

| Constellations(s)                                           | Start Type | Max TTFF (s) |
|-------------------------------------------------------------|------------|--------------|
| GPS                                                         | Hot        | 1.3          |
|                                                             | Warm AGPS  | 2.5          |
|                                                             | Warm       | 26           |
|                                                             | Cold       | 31           |
|                                                             |            |              |
| GPS + GLO                                                   | Hot        | 1.3          |
|                                                             | Warm AGPS  | 3.1          |
|                                                             | Warm       | 26           |
|                                                             | Cold       | 33           |
| Test Conditions: Static scenario, -130 dBm, Full Power mode |            |              |


**Table 6-2 SE878Kx-Ax Time to First Fix**

## 6.3 Sensitivity


| System                                                               | State       | Minimum Signal Level (dBm) |
|----------------------------------------------------------------------|-------------|----------------------------|
| GPS                                                                  | Acquisition | -148                       |
|                                                                      | Navigation  | -163                       |
|                                                                      | Tracking    | -165                       |
| GPS + GLO                                                            | Acquisition | -148                       |
|                                                                      | Navigation  | -162                       |
|                                                                      | Tracking    | -165                       |
| Test conditions: Conducted signal. Static scenario. Full power mode. |             |                            |
| Note: MT3337-based modules support GPS only.                         |             |                            |

**Table 6-3 SE878Kx-Ax Sensitivity**

## 6.4 Jamming Mitigation Performance example

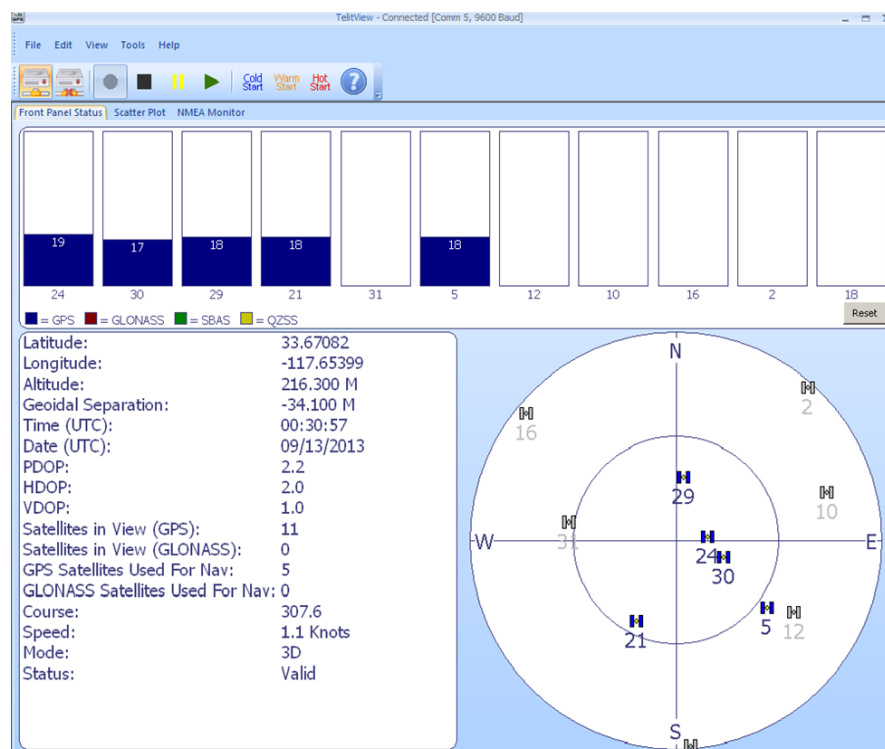

**Figure 6-1 Jamming with AIC Disabled**

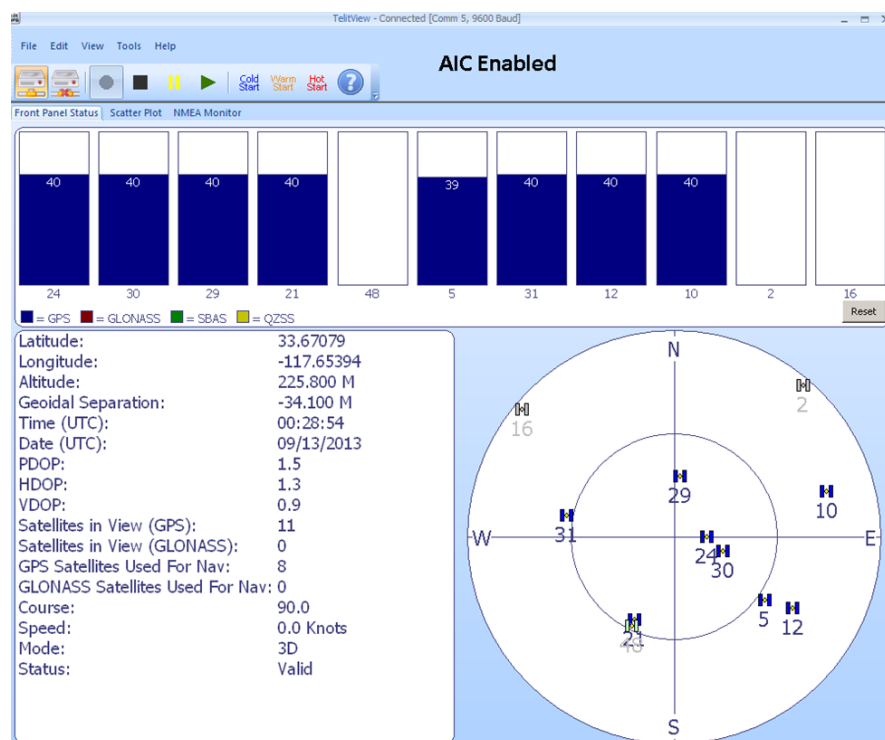

**Figure 6-2 Jamming with AIC Enabled**

## 7 MESSAGE INTERFACE

Data streams supported by the serial ports:

- NMEA messages (output) and commands (input)
- DGPS (RTCM SC-104) Version 2.3 protocol message types 1, 2, 3, and 9 (input)
- Server-based AGPS (Extended Prediction Orbit) I/O

More information regarding the software interface can be found in the **Telit MT Software User Guide**.



Customers that have executed a Non-Disclosure Agreement (NDA) with Telit may obtain the **Telit MT-GNSS Authorized Software User Guide**, which contains additional proprietary information.

### 7.1 NMEA Output Messages

Message protocol is NMEA-0183.

Default: GPS constellation is enabled.

GLONASS is also enabled for MT3333-based modules.

Default fix rate: 1 Hz. Maximum rate is 10 Hz.

Multiple GSA and GSV messages may be output on each cycle.



Some sentences may exceed the NMEA length limitation of 80 characters.

#### 7.1.1 Standard Messages

| Message ID | Description                                            |
|------------|--------------------------------------------------------|
| RMC        | GNSS Recommended minimum navigation data               |
| GGA        | GNSS position fix data                                 |
| GSA        | GNSS Dilution of Precision (DOP) and active satellites |
| GSV        | GNSS satellites in view.                               |

**Table 7-1 Default NMEA output messages**

The following messages can be enabled by command:

| Message ID | Description                                |
|------------|--------------------------------------------|
| GLL        | Geographic Position – Latitude & Longitude |
| VTG        | Course Over Ground & Ground Speed          |
| ZDA        | Time & Date                                |

**Table 7-2 Available Messages**

The following table shows the Talker IDs used:

| Talker ID | Constellation |
|-----------|---------------|
| BD        | BeiDou        |
| GA        | Galileo       |
| GL        | GLONASS       |
| GP        | GPS           |
| QZ        | QZSS          |

**Table 7-3 NMEA Talker IDs**

### 7.1.2 Proprietary Output Messages

The receivers support several proprietary NMEA output messages which contain additional receiver data and status information.

| Message ID | Description                                    |
|------------|------------------------------------------------|
| \$PMTK010  | System messages (e.g. to report startup, etc.) |

**Table 7-4 Proprietary Output Messages**

## 7.2 NMEA Input Commands

The modules use NMEA proprietary messages for commands and command responses. This interface provides configuration and control over selected firmware features and operational properties of the module. Wait time is about 50 to 100 ms.

The format of a command is: `$<command-ID>[,<parameters>]*<cr><lf>`

Commands are NMEA proprietary format and begin with “**\$PMTKxxx**”.  
Parameters, if present, are comma-delimited as specified in the NMEA protocol.

Unless otherwise noted in the Software User Guide, commands are echoed back to the user after the command is executed.

### 7.2.1 NMEA Commands List

Please refer to **Table 4-1 Power Management command summary** for power management commands.

| Command ID                                                                       | Description                                                                                 |
|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| \$PMTK000                                                                        | Test. This command will be echoed back to the sender (for testing the communications link). |
| \$PMTK101                                                                        | Perform a HOT start                                                                         |
| \$PMTK102                                                                        | Perform a WARM start                                                                        |
| \$PMTK103                                                                        | Perform a COLD start. However, Time is preserved.                                           |
| \$PMTK104                                                                        | Perform a FULL COLD start, erasing time and any stored almanac data                         |
| \$PMTK120                                                                        | Erase aiding data stored in flash memory                                                    |
| \$PMTK127                                                                        | Erase EPO data stored in flash memory                                                       |
| \$PMTK251,Baudrate                                                               | Set NMEA Baud rate                                                                          |
| \$PMTK313,0                                                                      | Disable SBAS feature                                                                        |
| \$PMTK313,1                                                                      | Enable SBAS feature                                                                         |
| \$PMTK353,1,0,0,0,0                                                              | Enable GPS only                                                                             |
| \$PMTK353,0,1,0,0,0                                                              | Enable GLO only                                                                             |
| \$PMTK353,0,0,1,0,0                                                              | Enable GAL only                                                                             |
| \$PMTK353,0,0,0,0,1                                                              | Enable BDS only                                                                             |
| \$PMTK353,1,1,0,0,0                                                              | Enable GPS and GLO                                                                          |
| \$PMTK353,1,0,0,0,1                                                              | Enable GPS and BDS                                                                          |
| \$PMTK353,1,1,1,0,0                                                              | Enable GPS, GLO, and GAL                                                                    |
| NOTE: Multi-constellation commands are not supported by the MT3337-based modules |                                                                                             |

**Table 7-5 NMEA Input commands**

## 8 FLASH UPGRADABILITY

(MT3333-based modules only)



**The MT3337-based modules use ROM memory and therefore are not upgradable.**

**Please refer to the product EVK User Guide for more detailed information.**


The firmware stored in the internal Flash memory may be upgraded via the port 0 TX/RX pins.

In order to update the FW, the following steps should be performed to re-program the module.

1. Remove all power to the module.
2. Connect serial port USB cable to a PC.
3. Apply main power.
4. Clearing the entire flash memory is strongly recommended prior to programming.
5. Run the software utility to re-flash the module.
6. Upon successful completion of re-flashing, remove main power to the module for a minimum of 10 seconds.
7. Apply main power to the module.
8. Verify the module has returned to the normal operating state.

## 9 ELECTRICAL INTERFACE

### 9.1 SE878Kx-Ax Family Pinout Diagram

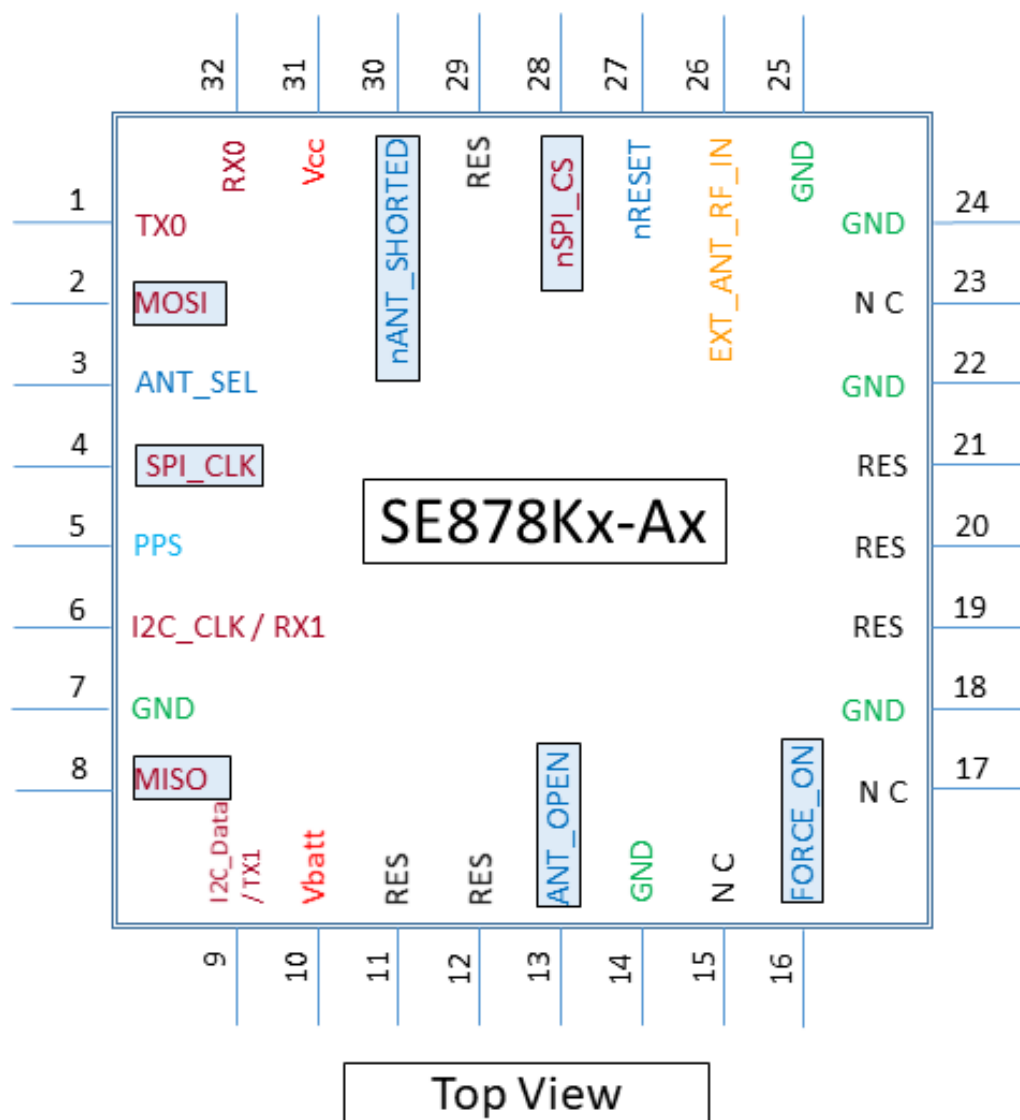

 These pins are not available on the SE878K7-Ax.

**Figure 9-1 SE878Kx-Ax Family Pinout Diagram**



1. FORCE\_ON is available only on the SE878K3-Ax. It is not connected on the SE878K7-Ax.
2. I<sup>2</sup>C and SPI are available only on the SE878K3-Ax. The SE878K7-Ax second port is UART.
3. The SE878K3-Ax second port is switched between I<sup>2</sup>C (default) and UART or SPI via command.
4. nANT\_SHORTED and ANT\_OPEN are not available on the SE878K7-Ax

## 9.2 SE878Kx-Ax Module Pinout Tables

### 9.2.1 SE878K3-Ax Pinout Table

| PIN                                 | NAME                         | TYPE | DESCRIPTION                        | NOTE |
|-------------------------------------|------------------------------|------|------------------------------------|------|
| <b>Power and Ground</b>             |                              |      |                                    |      |
| 31                                  | VCC                          | PWR  | Main power supply                  |      |
| 10                                  | VBATT                        | PWR  | Backup Power supply                |      |
| 7, 14, 18, 22, 24, 25               | Ground                       | GND  | Ground (all pins must be grounded) |      |
| <b>RF &amp; Antenna</b>             |                              |      |                                    |      |
| 26                                  | EXT_ANT_RF_IN                | RF   | External Antenna RF Input          |      |
| 3                                   | ANT_SEL                      | I    | Antenna Select (High = Onboard)    |      |
| 30                                  | nANT_Shorted                 | I    | Antenna Shorted (input) true low   | 1    |
| 13                                  | ANT_Open                     | I    | Antenna Open (input) true high     | 1    |
| <b>Control &amp; Output</b>         |                              |      |                                    |      |
| 27                                  | nRESET                       | I    | System Reset – Active Low          |      |
| 16                                  | FORCE_ON                     | I    | Force full-power mode              | 2    |
| 5                                   | PPS                          | O    | Pulse Per Second                   |      |
| <b>I / O</b>                        |                              |      |                                    |      |
| 1                                   | TX0                          | O    | UART0 Serial Output (Transmit)     |      |
| 32                                  | RX0                          | I    | UART0 Serial Input (Receive)       |      |
| 9                                   | I <sup>2</sup> C Data / TX1  | I/O  | I <sup>2</sup> C Data / UART1 Tx   | 3, 4 |
| 6                                   | I <sup>2</sup> C Clock / RX1 | I/O  | I <sup>2</sup> C Clock / UART1 Rx  | 3, 4 |
| 8                                   | SPI_MISO                     | I/O  | SPI Data MISO                      | 4    |
| 2                                   | SPI_MOSI                     | I/O  | SPI Data MOSI                      | 4    |
| 4                                   | SPI_CLK                      | I    | SPI Clock                          | 4    |
| 28                                  | nSPI_CS                      | I    | SPI_CS (active low)                | 4    |
| <b>Reserved &amp; No Connection</b> |                              |      |                                    |      |
| 11, 12, 19, 20, 21, 29              | Reserved                     | Res  | Do not connect                     |      |
| 15, 17, 23,                         | No Connection                | NC   | Not connected internally           |      |



1. nANT\_SHORTED and ANT\_OPEN are not connected on the SE878K7-Ax
2. FORCE\_ON is available only on the SE878K3-Ax. It is not connected on the SE878K7-Ax
3. I<sup>2</sup>C and SPI are available only on the SE878K3-Ax. The SE878K7-Ax second port is UART.
4. The SE878K3-Ax second port is switched between I<sup>2</sup>C (default) and UART or SPI via command

**Table 9-1 SE878K3-Ax Pinout Table**

### 9.2.2 SE878K7-Ax Pinout Table

| PIN                                 | NAME          | TYPE | DESCRIPTION                                  | NOTE    |
|-------------------------------------|---------------|------|----------------------------------------------|---------|
| <b>Power and Ground</b>             |               |      |                                              |         |
| 31                                  | VCC           | PWR  | Main power supply                            |         |
| 10                                  | VBATT         | PWR  | Backup Power supply                          |         |
| 7, 14, 18, 22, 24, 25               | Ground        | GND  | Ground (all pins to be grounded)             |         |
| <b>RF &amp; Antenna</b>             |               |      |                                              |         |
| 26                                  | EXT_ANT_RF_IN | RF   | External Antenna RF Input                    |         |
| 3                                   | ANT_SEL       | I    | Antenna Select (High = Onboard)              |         |
| <b>Control &amp; Output</b>         |               |      |                                              |         |
| 27                                  | nRESET        | I    | System Reset – Active Low                    |         |
| 5                                   | PPS           | O    | Pulse Per Second                             |         |
| <b>I / O</b>                        |               |      |                                              |         |
| 1                                   | TX0           | O    | UART0 Serial Output (Transmit)               |         |
| 32                                  | RX0           | I    | UART0 Serial Input (Receive)                 |         |
| 9                                   | TX1           | I/O  | UART1 Tx                                     | 3       |
| 6                                   | RX1           | I/O  | UART1 Rx                                     | 3       |
| <b>Reserved &amp; No Connection</b> |               |      |                                              |         |
| 2, 4, 8, 13, 16, 28, 30             | Reserved      | Res  | See the SE878K3-Ax pinout for compatibility. | 1, 2, 3 |
| 11, 12, 19, 20, 21, 29              | Reserved      | Res  | Do not connect                               |         |
| 15, 17, 23                          | No Connection | NC   | Not connected internally                     |         |



1. nANT\_SHORTED and ANT\_OPEN are not connected on the SE878K7-Ax
2. FORCE\_ON is available only on the SE878K3-Ax. It is not connected on the SE878K7-Ax
3. I<sup>2</sup>C and SPI are available only on the SE878K3-Ax. The SE878K7-Ax second port is UART.

**Table 9-2 SE878K7-Ax Pinout Table**

## 9.3 Signal Levels



Note that I/O voltage ranges are different from supply voltages  $V_{CC}$  and  $V_{BATT}$ .



Several different logic levels are utilized by the digital signal interfaces of the module:

### 9.3.1 Logic Levels – Inputs

| RX0, RX1, Reset-N, Ant_Open, Ant-Short, Ant_Sel                                                                                                                                                          |          |       |     |       |       |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|-------|-----|-------|-------|
| Signal                                                                                                                                                                                                   | Symbol   | Min   | Typ | Max   | Units |
| Input Voltage (L)                                                                                                                                                                                        | $V_{il}$ | 0     |     | 0.5   | V     |
| Input Voltage (H)                                                                                                                                                                                        | $V_{ih}$ | 1.9   |     | 3.4   | V     |
| Note: These inputs have an internal pullup of 40 k $\Omega$ to 190 k $\Omega$ .<br> Do not drive the Reset-N line high. |          |       |     |       |       |
| Force_On                                                                                                                                                                                                 |          |       |     |       |       |
| Signal                                                                                                                                                                                                   | Symbol   | Min   | Typ | Max   | Units |
| Input Voltage (L)                                                                                                                                                                                        | $V_{il}$ | 0     |     | 0.275 | V     |
| Input Voltage (H)                                                                                                                                                                                        | $V_{ih}$ | 0.825 |     | 3.4   | V     |
| Note: Force_On has no pullup or pulldown.<br> For typical applications, use a pulldown of 10k $\Omega$ .              |          |       |     |       |       |

**Table 9-3 Input Logic Levels**

### 9.3.2 Logic Levels – Outputs

| TX0, TX1, and 1PPS |          |      |     |      |       |
|--------------------|----------|------|-----|------|-------|
| Signal             | Symbol   | Min  | Typ | Max  | Units |
| Output Voltage (L) | $V_{ol}$ |      |     | 0.4  | V     |
| Output Voltage (H) | $V_{oh}$ | 2.14 |     | 2.89 | V     |
| Normal Current (L) | $I_{ol}$ |      | -2  |      | mA    |
| Output Current (H) | $I_{oh}$ |      | -2  |      | mA    |

**Table 9-4 Output Logic Levels**

## 9.4 DC Power Supply

The modules have two power supply pins  $V_{CC}$  and  $V_{BATT}$ .



Note that I/O voltage ranges are different from supply voltages  $V_{CC}$  and  $V_{BATT}$ .

### 9.4.1 VCC

This is the main power input. The supply voltage must be in the range specified in **Table 9-5 DC Supply Voltage** below.



$V_{CC}$  does not supply the RTC domain, therefore  $V_{batt}$  must be supplied any time that  $V_{CC}$  is powered. This may be accomplished by tying  $V_{BATT}$  to  $V_{CC}$ .

When power is first applied, the module will start up in full power continuous operation mode. During operation, the current drawn by the module can vary greatly, especially if enabling low-power operation modes. The supply must be able to handle the current fluctuation including any inrush surge current.

GPS/GNSS receiver modules require a clean and stable power supply. In designing such a supply, any resistance in the  $V_{CC}$  line can negatively influence performance. Consider the following points: All supplies should be within the rated requirements. At the module input, use low ESR capacitors that can deliver the required current for switching from backup mode to normal operation. Keep the rail short and away from any noisy data lines or switching supplies, etc. Wide power lines and power planes are preferred.

### 9.4.2 VBATT



Battery backup power input (as specified in the table below) must be supplied any time that  $V_{CC}$  is powered up.

$V_{BATT}$  supplies power to the following:

- real-time clock (RTC)
- battery backed RAM (BBRAM)
- EASY data
- Default configuration options (not commanded options)

This allows the module to retain time and ephemeris information, thus enabling hot and warm starts, which will improve (decrease) TTFF.

### 9.4.3 DC Power Requirements

| Main Supply Voltage & Backup Voltage                                                                                                                                                                      |                       |     |     |     |       |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|-----|-----|-----|-------|
| Supply                                                                                                                                                                                                    | Name                  | Min | Typ | Max | Units |
| <b>Vcc and Vbatt</b>                                                                                                                                                                                      | $V_{CC}$ & $V_{batt}$ | 2.8 | 3.3 | 4.3 | V     |
|  <p>The drop from 2.7 V to 0 V must be &gt; 1 ms.<br/>Also, keep the supply ripple as low as possible (&lt; 50 mV)</p> |                       |     |     |     |       |

**Table 9-5 DC Supply Voltage**

#### 9.4.4 DC Power Consumption: SE878K3-Ax

| State & Constellation                                                                                                                       | Typ | Max | Units |
|---------------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-------|
| Acquisition                                                                                                                                 |     |     |       |
| GPS Only                                                                                                                                    | 66  | 86  | mW    |
| GPS and Glonass                                                                                                                             | 89  | 115 | mW    |
| Navigation/Tracking                                                                                                                         |     |     |       |
| GPS Only                                                                                                                                    | 56  | 76  | mW    |
| GPS and Glonass                                                                                                                             | 72  | 96  | mW    |
| Low Power Mode (GLP)                                                                                                                        |     |     |       |
| GPS Only                                                                                                                                    | 50  | 79  | mW    |
| GPS and Glonass                                                                                                                             | 52  | 105 | mW    |
| Vbatt                                                                                                                                       | 50  | 99  | μW    |
| Operating temperature: 25°C<br>Supply voltages: 3.3 VDC nominal<br>Low Power mode: 500 ms duty cycle<br>SBAS: enabled<br>1PPS sync: enabled |     |     |       |

**Table 9-6 SE878K3-Ax Power Consumption**

#### 9.4.5 DC Power Consumption: SE878K7-Ax

| State (GPS only)                                                                                                                              | Typ | Max | Units |
|-----------------------------------------------------------------------------------------------------------------------------------------------|-----|-----|-------|
| Acquisition                                                                                                                                   | 66  | 88  | mW    |
| Navigation/Tracking                                                                                                                           | 52  | 86  | mW    |
| Vbatt                                                                                                                                         | 25  | 66  | μW    |
| Operating temperature: 25°C<br>Supply voltages: 3.3 VDC nominal<br>Low Power mode: 500 ms duty cycle<br>SBAS: disabled<br>1PPS sync: disabled |     |     |       |

**Table 9-13 SE878K7-Ax Power Consumption**

## 9.5 Control Signals



Note that I/O voltage ranges are different from supply voltages  $V_{CC}$  and  $V_{BATT}$ .

### 9.5.1 Input Signals

#### 9.5.1.1 RESET-N

The Reset-N input is an active low input to reset the receiver to the default starting state. This signal is not required for the module to operate properly, so this pin may be left unconnected. However, it is recommended to bring it out to a test point. If used, the signal can only be driven low, never high since it has an internal pullup. For logic levels, see **Table 9-3 Input Logic Levels**.

#### 9.5.1.2 FORCE\_ON (MT3333-based modules only)

For typical operation, connect this pin through a 10 K $\Omega$  resistor to ground to create a pulldown (which will prevent noise from accidentally activating this pin).

Upon command, the module will enter the backup (low power) state. To exit this state, drive the Force-on signal high (true) to force the module to return to the full power state.

Force-on should be held high until the **PMTK101** message is received (about 1 second), then released to logic low.

If Force-on is high when a low-power command is received, the module will enter the Standby (stop) state rather than the Backup state, since the PMU is still on.

This signal is only available on the MT3333-based modules.



Note that this pin has a maximum input voltage of 3.4 V. This is lower than the max for  $V_{CC}$  or  $V_{BATT}$ .

For logic levels, see **Table 9-3 Input Logic Levels**

#### 9.5.1.3 ANT\_SEL

The Antenna Select pin determines which antenna will provide the RF signal to the module.

If HIGH, the onboard antenna will be used.

If LOW, the external antenna will be used.

For logic levels, see **Table 9-3 Input Logic Levels**

#### 9.5.1.4 ANT\_OPEN and ANT\_SHORTED

These inputs inform the module if the antenna current is too low (open) or too high (shorted). The antenna status message will indicate the status to the user:

| Antenna Status Message |                             |             |                               |             |
|------------------------|-----------------------------|-------------|-------------------------------|-------------|
|                        | Ant_Shorted Pin: Low (true) |             | Ant_Shorted Pin: High (false) |             |
| Ant_Open Pin           | High (true)                 | Low (false) | High (true)                   | Low (false) |
| Message                | INVALID                     | SHORTED     | OPEN                          | OK          |

**Table 9-7 Antenna Status**

## 9.5.2 Output Signals

### 9.5.2.1 1PPS

1PPS is a one pulse per output second signal. Its default characteristics are:


- Pulse duration: 100 ms
- Active: during 3D navigation.

The pulse availability and duration can be configured via the **\$PMTK285** command.

Options for availability are:

- Disable
- After 1<sup>st</sup> fix
- 3D Fix only
- 2D/3D Fix only
- Always.

NMEA output (timestamp) can be configured to have a fixed latency behind the 1PPS pulse of 460 to 485 ms via the **\$PMTK255** command. Default is variable latency.

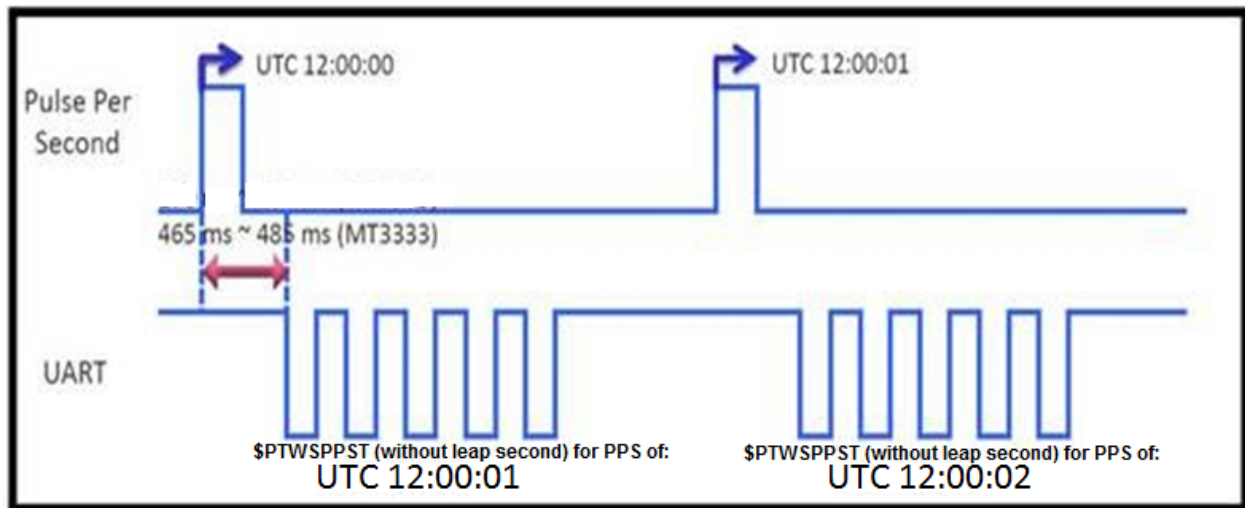

**Figure 9-2 1PPS NMEA synchronization**

These configurations will not be preserved across a power cycle or reset.

1PPS is disabled if the fix rate > 1 Hz.

Variation is  $\approx 30$  ns (1  $\sigma$ ).

## 9.6 I/O Ports

### Port 0:

All modules include a primary UART serial port (TX0 / RX0).

### Port 1:

The secondary port on [MT3333-based](#) modules is I<sup>2</sup>C by default, but can be changed to UART (TX1/RX1) or SPI via command. The module will re-boot when the interface is changed.

The secondary port on [MT3337-based](#) modules is UART (TX1 / RX1) and cannot be changed.

### 9.6.1 Port Usage

#### 9.6.1.1 Primary (Port 0) Usage

**TX0**: NMEA message output

**RX0**: NMEA proprietary commands, RTCM SC-104 input and EPO data

TX0 / RX0 is also used to re-flash the module ([MT3333-based modules only](#)).

#### 9.6.1.2 Secondary (Port 1) Usage

**TX1**: NMEA message output

**RX1**: DGPS input using the RTCM SC-104 protocol and NMEA commands.

I<sup>2</sup>C and SPI support the same data streams as UART.



The interface is selected via the **\$PMTK258** command.  
Note that the module will reset when the interface is changed.

### 9.6.2 UART Port Operation

UART ports are full-duplex and support configurable baud rates.

Frame is 8 bits, no parity bit, and 1 stop bit.

The default rate of 9600 bps can be changed via the following commands -

Primary port: **\$PMTK251**

Secondary port: **\$PMTK250**

The idle state of UART interface lines is logic high.

UART TX logic levels are shown in **Table 9-4 Output Logic Levels**.

UART RX logic levels are shown in **Table 9-3 Input Logic Levels**



Note that the RX pins have a maximum input voltage of 3.4 V (which is lower than the maximum for Vcc or Vbatt).



Care must be used to prevent backdriving the RX lines when the module is powered down or in a low-power state.

### 9.6.3 I<sup>2</sup>C Port Operation (MT3333-based modules only)

MT3337-based modules do not support I<sup>2</sup>C interface.

MT3333-based modules 2<sup>nd</sup> serial port (port 1) is configured to use the I<sup>2</sup>C interface by default but can be changed to UART or SPI via command: **\$PMTK258**

The I<sup>2</sup>C\_Clock and I<sup>2</sup>C\_Data lines require external pullups (example value: 10 KΩ).

#### Features -

- Slave mode only (default address = 0x10)
- Fast mode (up to 400 Kbps)
- 7-bit address
- 255-byte buffer
- The module operates in the polled mode (with the host as the master)

#### Transmit -

The host must be able to read several packets each report cycle. A minimum pause of 2 ms is required between reads to allow the module to fill the buffer. A longer delay is permissible. For example, if the report cycle is 1 second, set the polling sleep time to 500 ms for the next output interval to start.

The buffer will contain up to 254 data bytes plus an <LF> (x'0A') character.

Each NMEA sentence will be terminated by the (standard) <CR-LF> (x'0D, x'0A') characters, and a NMEA sentence can span buffers.

If necessary, the buffer is padded with x'0A' characters. x'0A' is also used for idle characters.

#### Receive -

The maximum length for commands sent to the module is 255 bytes.

A minimum of 10 ms is required between packets.

Further details and sample code are available under NDA from the **MediaTek MT3339/MT3333 I<sup>2</sup>C Application Note**.

### 9.6.4 SPI Port Operation (MT3333-based modules only)

The MT3333-based modules support SPI data rate 700 kbit/s in slave mode only.

To configure the second port for SPI, send a **\$PMTK258f** command:

Two methods are supported for receiving NMEA messages: Polling mode and Interrupt mode.

During a SPI transmission, data is transmitted (shifted out serially) and received (shifted in serially) simultaneously by the module. If no PMTK command is ready to be transmitted, the host (master) still needs to send padding bytes. It is suggested to set the value of the padding byte to "0xFF" since the module will ignore these padding bytes.

Further details and sample code are available under NDA from the **MediaTek MT3339/MT3333 SPI Application Note**.

## 10 RF FRONT-END DESIGN

### 10.1 RF Signal Requirements

The receiver can achieve Cold Start acquisition with a signal level above the specified minimum at its input. This means that it can acquire and track visible satellites, download the necessary navigation data (e.g. time and ephemeris) and compute its position within a period of 5 minutes. In the GNSS signal acquisition process, decoding the navigation message data is the most difficult task, which is why Cold Start acquisition requires a higher signal level than navigation or tracking. For the purposes of this discussion, autonomous operation is assumed, which makes the Cold Start acquisition level the dominant design constraint. If assistance data in the form of time and/or ephemeris aiding is available, lower signal levels may be sufficient for acquisition.

The GPS signal is defined by the Interface Specification IS-GPS-200. This document states that the signal level received by a linearly polarized antenna having 3 dBi gain will be a minimum of -130 dBm when the antenna is in the worst-case orientation and the satellite is 5 degrees or more above the horizon.

In actual practice, the GPS satellites transmit slightly more power than specified by the IS, and the signal level typically increases if a satellite has higher elevation angles.

The GLONASS signal is defined by GLONASS ICD (currently 2008 Version 5.1). This document states that the power level of the received RF signal from a GLONASS satellite at the output of a 3dBi linearly polarized antenna is not less than -131dBm for L1 sub-band provided that the satellite is observed at an angle of 5 degrees or more above the horizon.

The receiver will display a reported C/No of 40 dB-Hz for a GPS signal level of -130 dBm at the RF input. This assumes a system equivalent noise (SEN) of the receiver of 4dB. System Equivalent Noise includes the Noise Figure of the receiver plus signal processing or digital noise. For an equivalent GLONASS signal level, the GLONASS signal will report a C/No of approximately 39 dB-Hz. This is due to the receiver's higher losses (NF) and a higher signal processing noise for GLONASS.

Each GNSS satellite presents its own signal to the receiver, and best performance is obtained when the signal levels are between -130 dBm and -125 dBm. These received signal levels are determined by:

- Satellite transmit power
- Satellite elevation angle
- Free space path loss
- Extraneous path loss (e.g. rain)
- Partial or total path blockage (such as foliage or buildings)
- Multipath interference (caused by signal reflection)
- GNSS antenna characteristics
- Signal path after the GNSS antenna

The satellite transmit power is specified in each constellation's reference documentation, which is readily available online.

The GNSS signal is relatively immune to attenuation from rainfall. However, it is heavily influenced by attenuation due to foliage (such as tree canopies, etc.) as well as outright blockage caused by buildings, terrain or other objects near the line of sight to each specific GNSS satellite. This variable attenuation is highly dependent upon satellite location. If enough satellites are blocked, say at a lower elevation, or all in one general direction, the geometry of the remaining satellites will be worse (higher DOP) and will result in a lower position accuracy. The receiver reports this geometry effect in the form of PDOP, HDOP and VDOP numbers.

For example, in a vehicular application, the GNSS antenna may be placed on the dashboard or rear package tray of an automobile. The metal roof of the vehicle will cause significant blockage. Also, any thermal coating applied to the vehicle glass can attenuate the GNSS signal by as much as 15 dB. Again, both of these factors will affect the performance of the receiver.

Multipath interference results when the signal from a particular satellite is reflected from a surface (e.g. a building or the roof of a car) and is received by the GNSS antenna either in addition to or in place of the line of sight signal. The reflected signal has a path length that is longer than the line of sight path so it can either attenuate the original signal, or if received in place of the original signal, can add error in determining a solution because the distance to the particular satellite is actually shorter than measured. It is this phenomenon that makes GNSS navigation in urban canyons (narrow roads surrounded by high-rise buildings) so challenging. In general, the reflection of a GNSS signal causes its polarization to reverse. The implications of this are covered in the next section.

## 10.2 External GNSS Antenna

An external antenna may be connected to the EXT\_ANT\_RF\_IN pin.

It is selected by the ANT\_SEL antenna select pin.

This should be an active antenna (with its own SAW filter and LNA). Power should be supplied via an external Bias-T.

## 10.3 Onboard GNSS Antenna (included in the module)

Note that these modules include an RF input switch which allows an external antenna to be connected and provide the GNSS signal instead of the onboard antenna.

The SE878Kx-Ax modules include an Amotech 17mm x 17 mm ceramic patch antenna shown in the following table:

| Antenna                                    | Module     | GNSS Constellations supported |
|--------------------------------------------|------------|-------------------------------|
| Amotech 17mm x 17 mm ceramic patch antenna | SE878K3-Ax | GPS, Galileo, GLONASS, BeiDou |
|                                            | SE878K7-Ax | GPS                           |



**In order to optimize antenna performance, it is strongly recommended to design a 25 mm by 25 mm ground plane under the module on the application PCB.**


***If the ground plane size is smaller than 25 mm by 25 mm, center frequency detuning may occur.***

Please refer to the next section for the Ground Plane drawing.

## 10.4 Ground Plane

It is recommended to include a 25mm by 25mm FR-4 ground plane around the module in the PCB design as shown below in order to optimize antenna performance.

The ground plane should be on the top layer of the PCB (directly under the module) with the module centered on it.

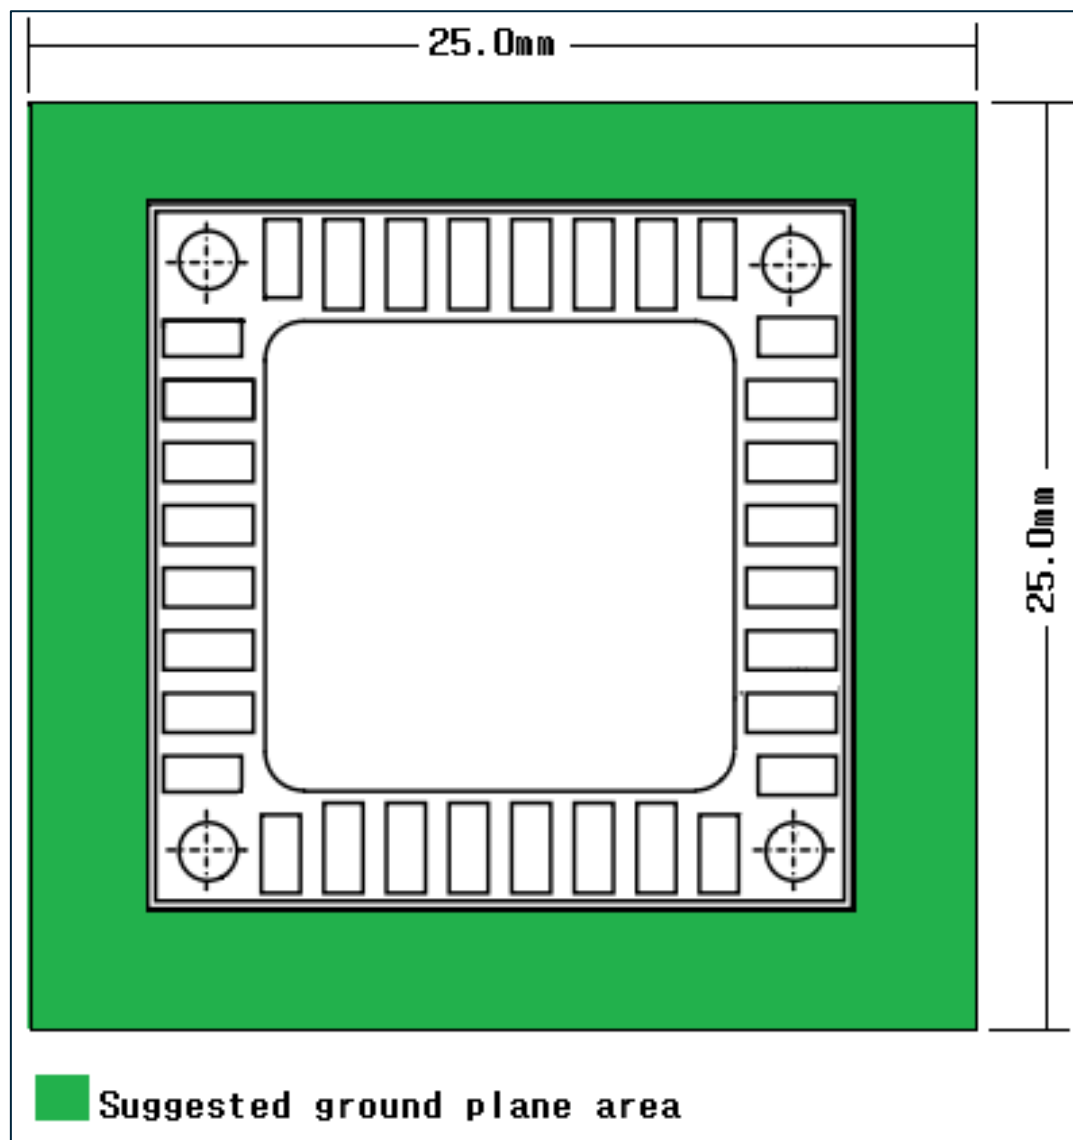

**Figure 10-1 SE878Kx-Ax Ground Plane**

## 10.5 System Noise Floor

The receiver will display a reported C/No of 40 dB-Hz for an input signal level of -130 dBm. The C/No number means the carrier (or signal) is 40 dB greater than the noise floor measured in a one Hz bandwidth. This is a standard method of measuring GNSS receiver performance.

The simplified formula is:

|                                                                                    |
|------------------------------------------------------------------------------------|
| $\text{C/No} = \text{GNSS Signal level} - \text{Thermal Noise} - \text{System NF}$ |
|------------------------------------------------------------------------------------|

### Equation 10-1 Carrier to Noise Ratio

Thermal noise is -174 dBm/Hz at 290 K.

We can estimate a typical system noise figure of 4 dB for the module, consisting of the pre-select SAW filter loss, the LNA noise figure, and implementation losses within the digital signal processing unit. The DSP noise is typically 1.0 to 1.5 dB.

However, if a good quality external LNA is used, the noise figure of that LNA (typically better than 1dB) could reduce the overall system noise figure from 4 dB to approximately 2 dB.

## 10.6 RF Interference

RF interference into the GNSS receiver tends to be the biggest problem when determining why the system performance is not meeting expectations. As mentioned earlier, the GNSS signals are at -130 dBm and lower. If signals higher than this are presented to the receiver, the RF front end can be overdriven. The receiver is capable of rejecting CW jamming signals in each band (GPS/Galileo, GLONASS, and BeiDou), but would still be affected by non-CW signals.

The most common source of interference is digital noise, often created by the fast rise and fall times and high clock speeds of modern digital circuitry. For example, a popular netbook computer uses an Atom processor clocked at 1.6 GHz. This is only 25 MHz away from the GNSS signal, and depending upon temperature of the SAW filter, can be within its passband. Because of the nature of the address and data lines, this would be broadband digital noise at a relatively high level.


Such devices are required to adhere to a regulatory standard for emissions such as FCC Part 15 Subpart J Class B or CISPR 22. However, these regulatory emission levels are far higher than the GNSS signal.

## 10.7 Shielding

Shielding the RF circuitry generally is ineffective because the interference is received by the GNSS antenna itself, which is the most sensitive portion of the RF path. The antenna cannot be shielded because it could not then receive the GNSS signals.

There are two solutions, one is to move the antenna away from the source of interference, and the other is to shield the digital interference source to prevent it from getting to the antenna.

## 11 REFERENCE DESIGN

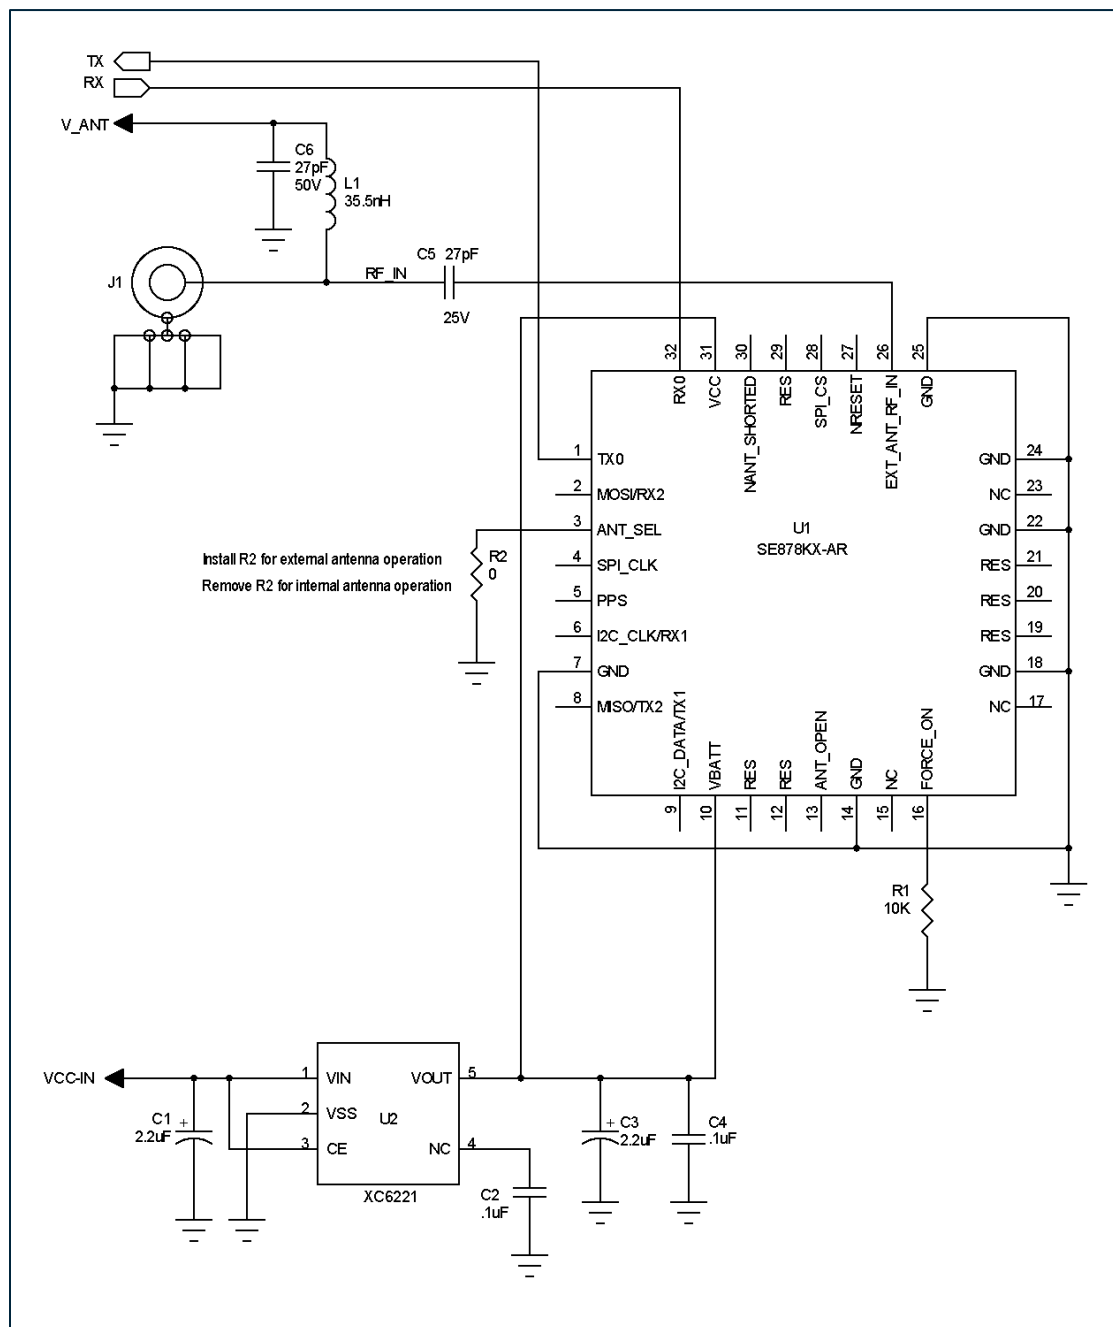

**Figure 11-1 SE878Kx-Ax Reference Design**


Along with power and grounds, the minimum signals required to operate the receiver properly are the RF input signal and two digital I/O signals (TX and RX).

TX and RX are UART lines with a default of 9600-8-N-1. They are used for message output and command input. Be careful not to drive the RX line if the module is turned off.





See Section 9 **Electrical Interface** for important details.

## 12 MECHANICAL DRAWING

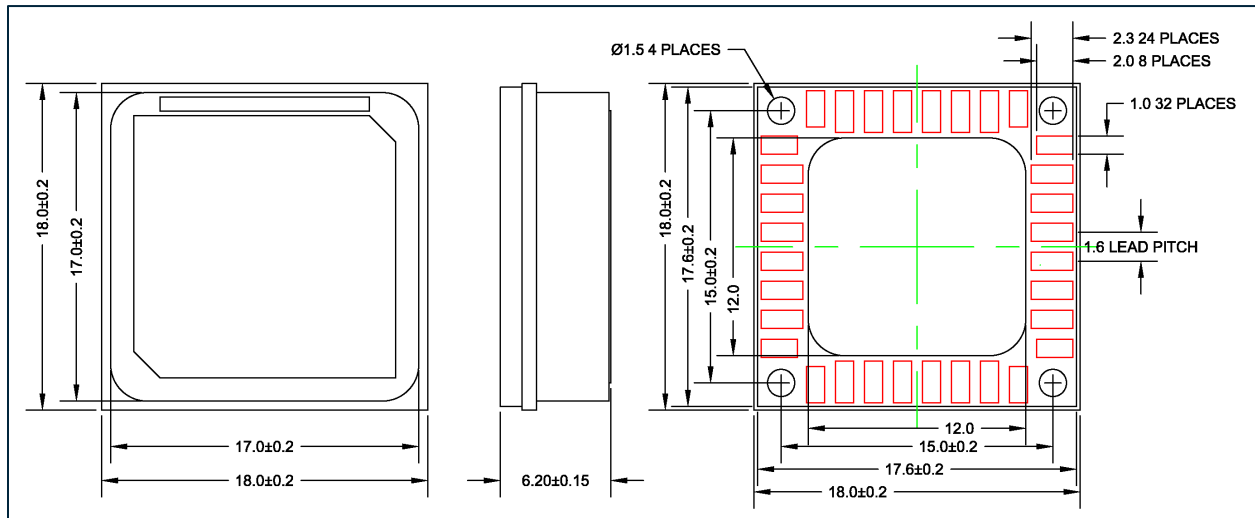

**Figure 12-1 SE878Kx-A Mechanical Drawing**

## 13 PCB FOOTPRINT

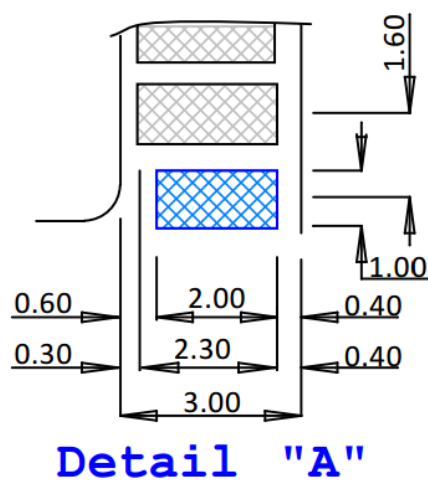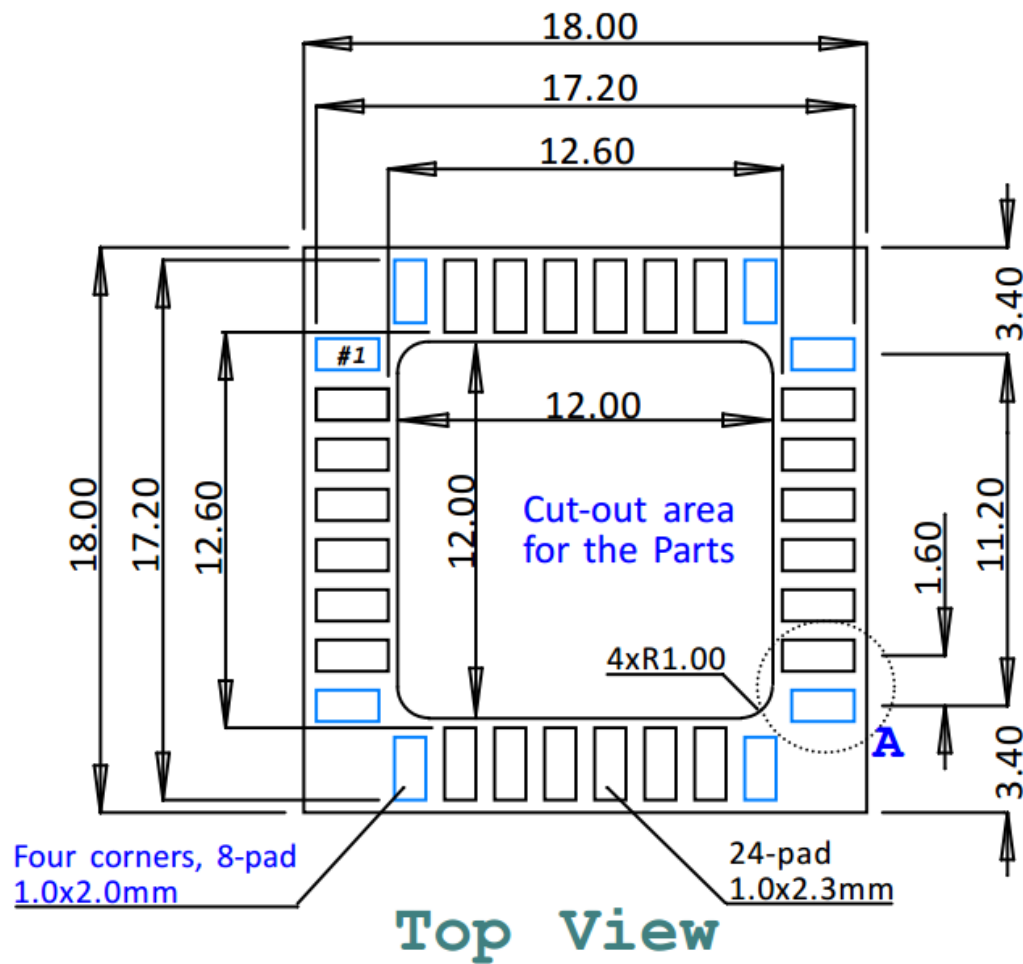


**Figure 13-1 SE878Kx-Ax PCB Footprint**

## 14 PACKAGING AND HANDLING

### 14.1 Product Marking and Serialization

The SE878Kx-Ax module label has a 2D Barcode identifying the module and its serial number. Contact a Telit representative for information on specific module serial numbers.

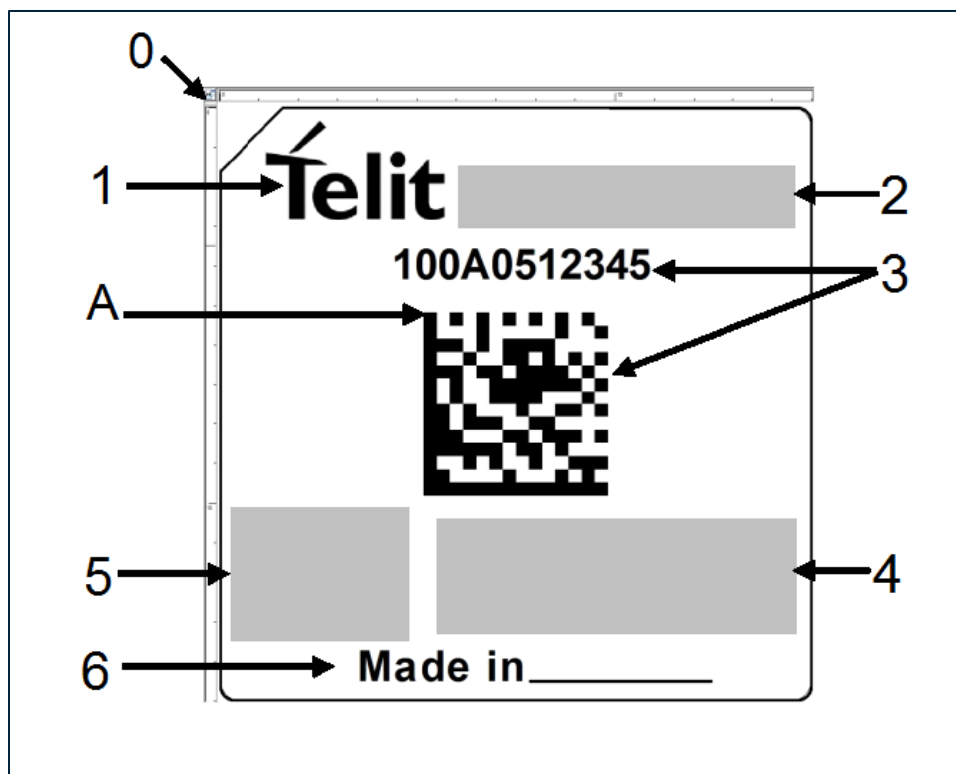

**Figure 14-1 Product Label**

| Key | Description                                                                                        |
|-----|----------------------------------------------------------------------------------------------------|
| 1   | Telit logo                                                                                         |
| 2   | Product Name                                                                                       |
| 3   | Telit Serial Number barcode (type 2D datamatrix)<br>11 digit (base 36 – 0 to 9 followed by A to Z) |
| 4   | Special identification or blank                                                                    |
| 5   | CE mark                                                                                            |
| 6   | Country of origin                                                                                  |

**Table 14-1 Product Label Description**


## 14.2 Product Packaging

SE878Kx-Ax modules are shipped in Tape and Reel and Tray form. The reeled modules are shipped in 24mm reels with 400 units per reel. Each reel is 'dry' packaged and vacuum sealed in a Moisture Barrier Bag (MBB) with two silica gel packs and placed in a carton.


The minimum order quantity for shipping is 250 units.

All packaging is ESD protective lined.

The receivers are Moisture Sensitive Devices (MSD). Please follow the MSD and ESD handling instructions on the labels of the MBB and exterior carton.

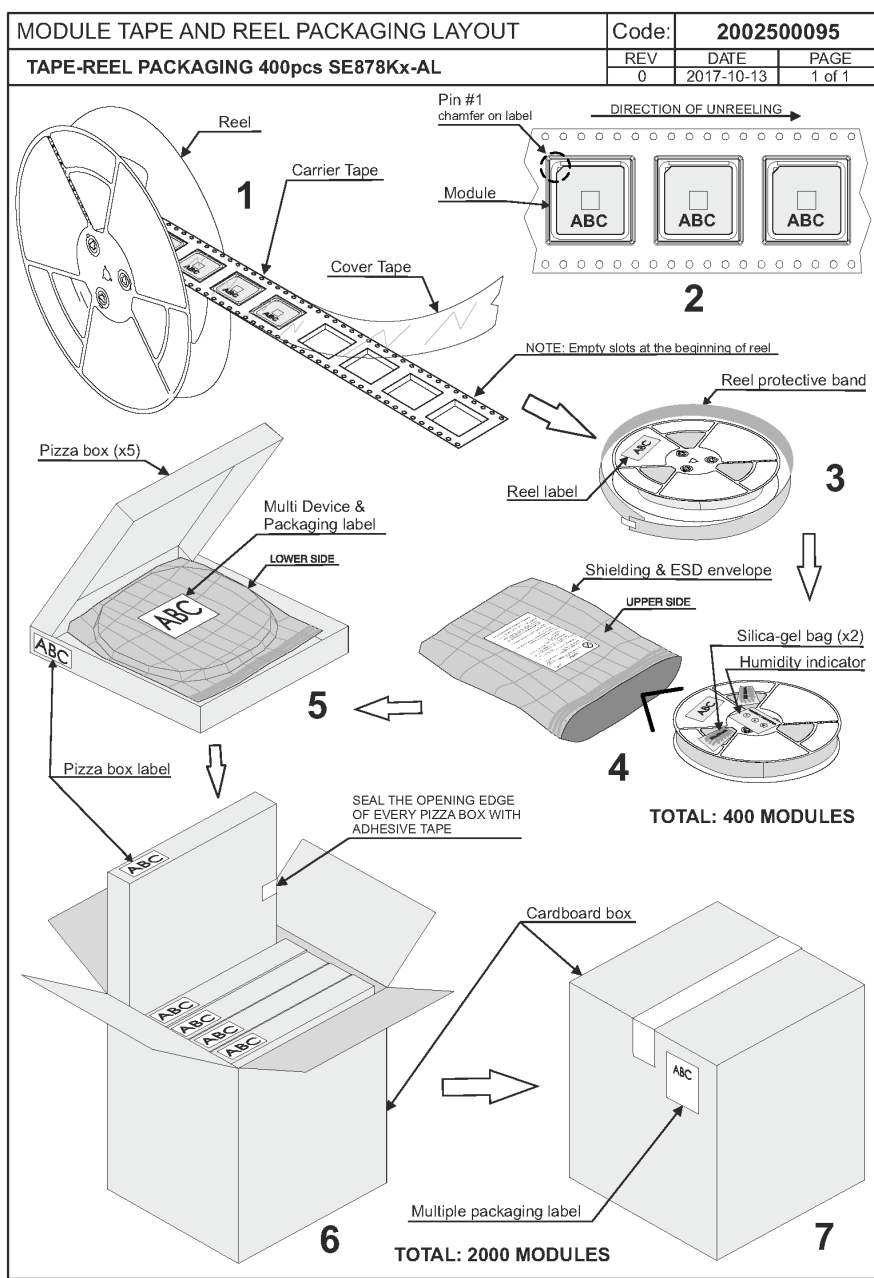

**Figure 14-2 SE878Kx-Ax Tape & Reel Packaging**

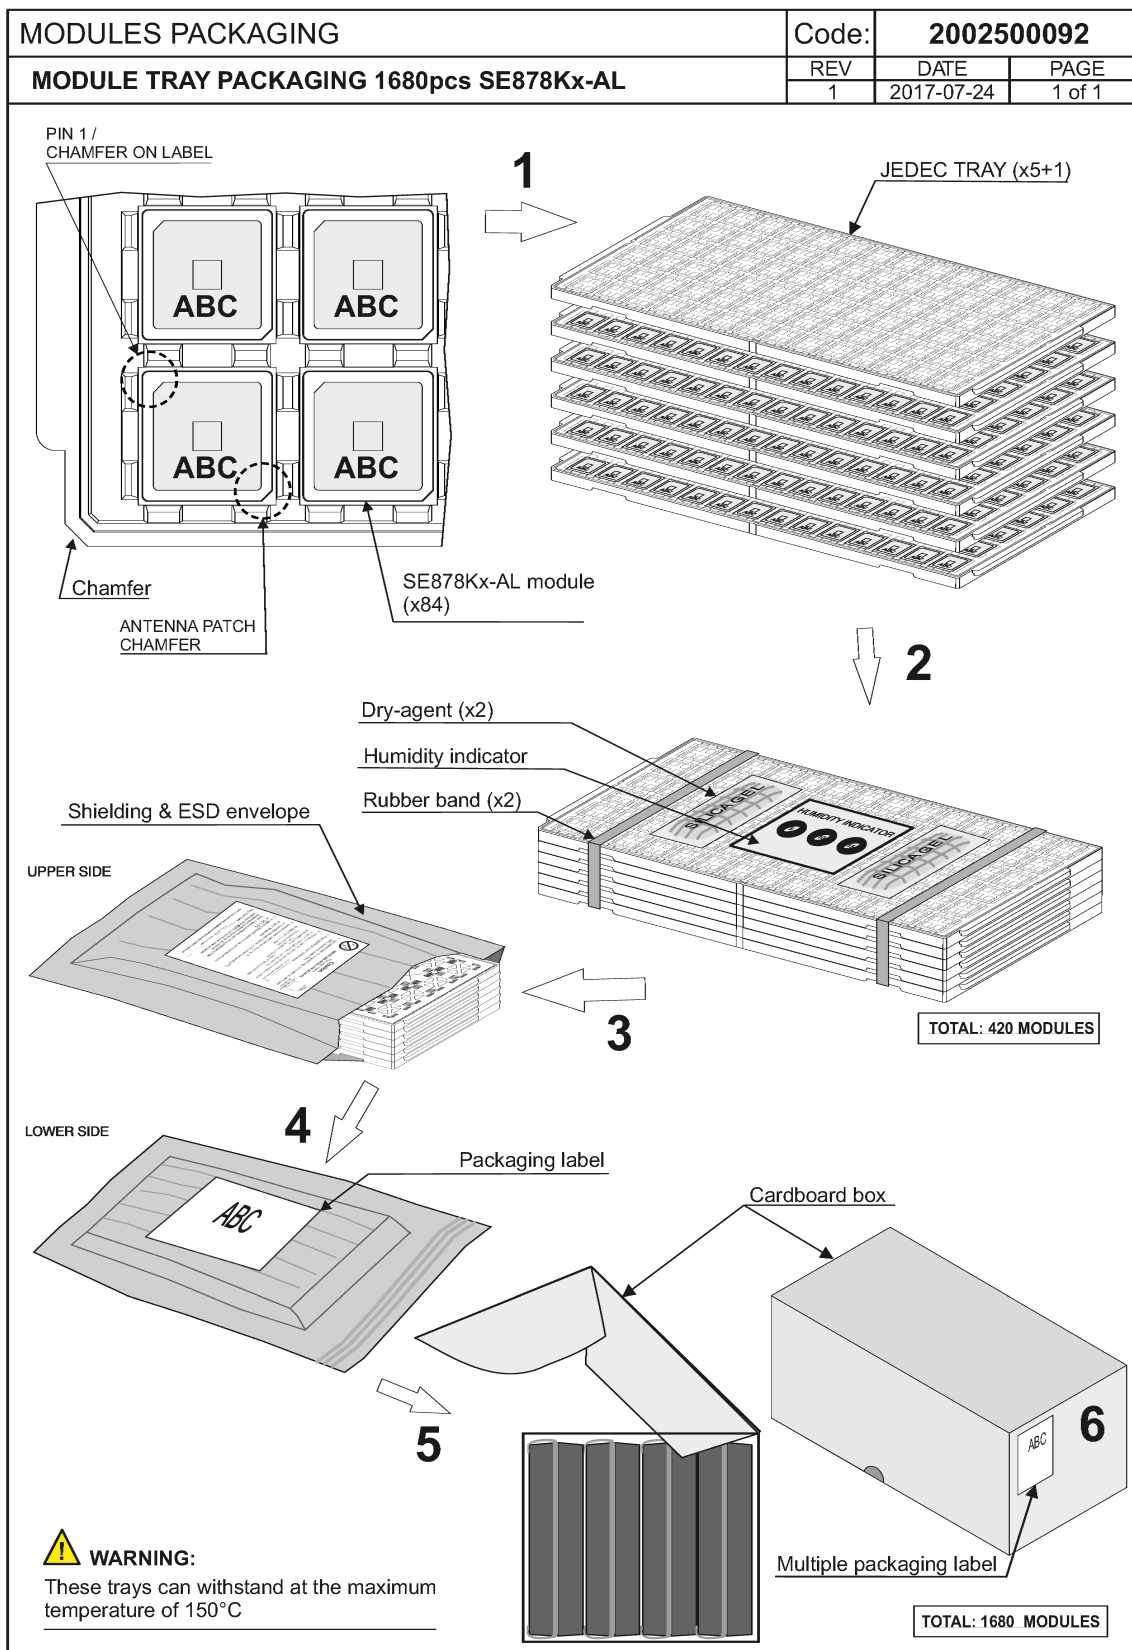

**Figure 14-3 SE878Kx-Ax Tray Packaging**

## 14.3 Moisture Sensitivity

Precautionary measures are required in handling, storing and using these electronic devices to avoid damage from moisture absorption. If localized heating is required to rework or repair the device, precautionary methods are required to avoid exposure to solder reflow temperatures that can result in performance degradation or damage.



The module has a moisture sensitivity level rating of 3 as defined by **IPC/JEDEC J-STD-020**. This rating is assigned due to some of the components used within the module.

Please follow the MSD and ESD handling instructions on the labels of the MBB and exterior carton.

The modules are supplied in a hermetically sealed bag with desiccant and humidity indicator cards. The parts must be placed and reflowed within 168 hours of first opening the hermetic seal provided the factory conditions are less than 30°C and less than 60% and the humidity indicator card indicates less than 10% relative humidity.

If the package has been opened or the humidity indicator card indicates above 10%, then the parts will need to be baked prior to reflow. The parts may be baked at  $+125^{\circ}\text{C} \pm 5^{\circ}\text{C}$  for 48 hours.



However, the packaging materials (tape and reel or trays) can NOT withstand that temperature. Lower temperature baking is feasible if the humidity level is low and time is available.

Additional information can be found on the MSL tag affixed to the outside of the hermetically sealed bag and **IPC/JEDEC J-STD-033**.

NOTE: JEDEC standards are available free of charge from the JEDEC website <http://www.jedec.org>.

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                |                                                                                                                                                                                           |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | <p><b><u>CAUTION</u></b></p> <p>This bag contains</p> <p><b>MOISTURE-SENSITIVE DEVICES</b></p> | <p>LEVEL</p> <div style="border: 2px solid black; padding: 10px; display: inline-block;"> <p style="font-size: 2em; margin: 0;">3</p> </div> <p>If Blank, see adjacent bar code label</p> |
| <p>1. Calculated shelf life in sealed bag: 12 months at <math>&lt; 40^{\circ}\text{C}</math> and <math>&lt; 90\%</math> relative humidity (RH)</p> <p>2. Peak package body temperature: _____ <math>^{\circ}\text{C}</math><br/>             If Blank, see adjacent bar code label</p> <p>3. After bag is opened, devices that will be subjected to reflow solder or other high temperature process must</p> <p style="margin-left: 20px;">a) Mounted within: <u>168</u> hours of factory<br/>             If Blank, see adjacent bar code label<br/>             conditions <math>\leq 30^{\circ}\text{C}/60\%</math></p> <p style="margin-left: 20px;">b) stored at <math>&lt;10\%</math> RH</p> <p>4. Devices require bake, before mounting, if:</p> <p style="margin-left: 20px;">a) Humidity Indicator Card is <math>&gt; 10\%</math> when read at <math>23 \pm 5^{\circ}\text{C}</math></p> <p style="margin-left: 20px;">b) 3a or 3b not met.</p> <p>5. If baking is required, devices may be baked for 48 hours at <math>125 \pm 5^{\circ}\text{C}</math></p> <p style="margin-left: 40px;">Note: If device containers cannot be subjected to high temperature or shorter bake times are desired,<br/>             reference IPC/JEDEC J-STD-033 for bake procedure</p> <p>Bag Seal Date: _____<br/>             If Blank, see adjacent bar code label</p> <p style="margin-left: 40px;">Note: Level and body temperature defined by IPC/JEDEC J-STD-020</p> |                                                                                                |                                                                                                                                                                                           |

**Figure 14-4 Moisture Sensitive Device Label**

## 14.4 ESD Sensitivity



The module contains class 1 devices and is Electro-Static Discharge Sensitive (ESDS).

Telit recommends the two basic principles of protecting ESD devices from damage:

- Handle sensitive components only in an ESD Protected Area (EPA) under protected and controlled conditions;
- Protect sensitive devices outside the EPA using ESD protective packaging.

All personnel handling ESDS devices have the responsibility to be aware of the ESD threat to the reliability of electronic products.



The RF-IN pin is considered to be ESD sensitive

Further information can be obtained from the JEDEC standard **JESD625-A Requirements for Handling Electrostatic Discharge Sensitive (ESDS) Devices**.

## 14.5 Assembly Considerations

Since the module contains piezo-electric components, it should be placed near the end of the assembly process to minimize mechanical shock to it.

During board assembly and singulation process steps, pay careful attention to unwanted vibrations, resonances and mechanical shocks, e.g. those introduced by manufacturing equipment.

## 14.6 Washing Considerations

After assembly, the module can be washed with de-ionized water using standard PCB cleaning procedures. The shield does not provide a water seal to the internal components of the module, so it is important that the module be thoroughly dried prior to use by blowing excess water and then baking the module to drive residual moisture out. Depending upon the board cleaning equipment, the drying cycle may not be sufficient to thoroughly dry the module, so additional steps may need to be taken. The exact process details will need to be determined by the type of washing equipment as well as other components on the board to which the module is attached. The module itself can withstand standard JEDEC baking procedures

## 14.7 Reflow

The modules are compatible with lead free soldering processes as defined in **IPC/JEDEC J-STD-020**. The reflow profile must not exceed the profile given **IPC/JEDEC J-STD-020 Table 5-2, "Classification Reflow Profiles"**.




Although **IPC/JEDEC J-STD-020** allows for three reflows, the assembly process for the module uses two of those profiles, therefore the module is limited to one reflow.

When re-flowing a dual-sided SMT board, it is important to reflow the side containing the module last. This prevents heavier components within the module from becoming dislodged if the solder reaches liquidus temperature while the module is inverted.

**Note:** JEDEC standards are available free from the JEDEC website <http://www.jedec.org>.

The recommended reflow profile is shown in the following figure:

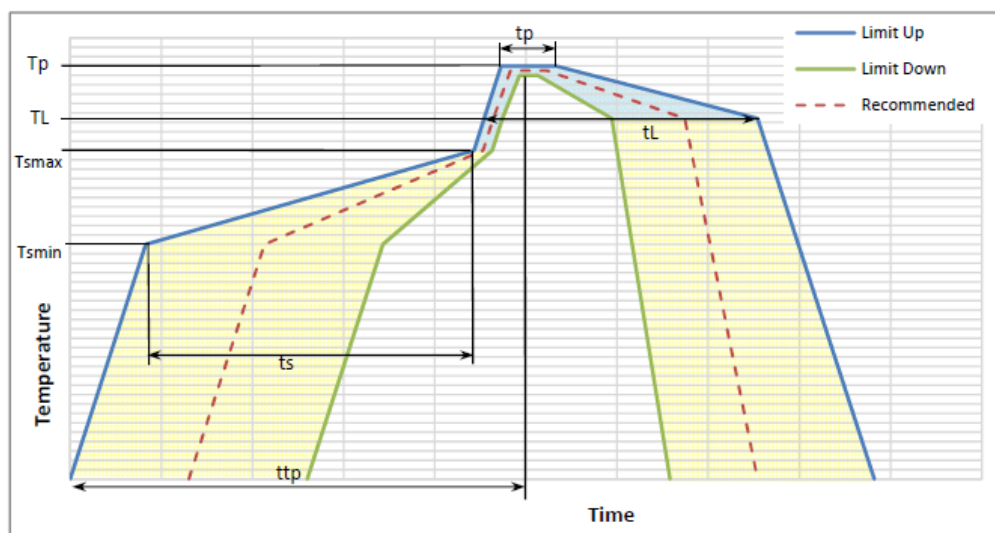

| Profile Feature                                 | Pb-Free Assembly |
|-------------------------------------------------|------------------|
| Average ramp-up rate (TL to Tp)                 | 3°C/second max   |
| Preheat                                         |                  |
| - Temperature Min (Tpsmin)                      | 150°C            |
| - Temperature Max (Tpsmax)                      | 200°C            |
| - Time (Tpsmin to Tpsmax) ts                    | 60-180 seconds   |
| Tpsmax to TL                                    |                  |
| - Ramp-up rate                                  | 3°C/second max   |
| Time maintained above:                          |                  |
| - Temperature (TL)                              | 217°C            |
| - Time (tL)                                     | 60-150 seconds   |
| Peak Temperature (Tp)                           | 245°C +0/-5 °C   |
| Time within 5°C of actual Peak Temperature (tp) | 10-30 seconds    |
| Ramp-down Rate                                  | 6°C/second max   |
| Time 25°C to Peak Temperature Tp (ttp)          | 8 minutes max    |

**Figure 14-5 Recommended Reflow Profile**



Please note that the JEDEC document includes important information in addition to the above figure. Please refer to: <http://www.jedec.org/sites/default/files/docs/jstd020d-01.pdf>

## 14.8 Safety



Improper handling and use of this module can cause permanent damage to the receiver. There is also the possible risk of personal injury from mechanical trauma or choking hazard.

Please refer to Section **17 Safety Recommendations** for further safety recommendations.

## 14.9 Disposal

Telit recommends that this product should not be treated as household waste. For more detailed information about recycling this product please contact your local waste management authority or the reseller from whom you purchased the product.

## 15 ENVIRONMENTAL REQUIREMENTS

### 15.1 Operating Environmental Limits

|                            |                                                                                |
|----------------------------|--------------------------------------------------------------------------------|
| Temperature                | -40°C to +85°C                                                                 |
| Temperature Rate of Change | ±1°C / minute maximum                                                          |
| Humidity                   | Up to 95% non-condensing or a wet bulb temperature of +35°C, whichever is less |
| Maximum Vehicle Dynamics   | 600 m/sec (acquisition and navigation)<br>2G acceleration                      |

**Table 15-1 SE878Kx-Ax Operating Environmental Limits**

### 15.2 Storage Environmental Limits

|                               |                                                                                |
|-------------------------------|--------------------------------------------------------------------------------|
| Temperature                   | -40°C to +85°C                                                                 |
| Humidity                      | Up to 95% non-condensing or a wet bulb temperature of +35°C, whichever is less |
| Shock                         | 18 G peak, 5 millisecond duration                                              |
| Shock (in shipping container) | 10 drops from 75 cm onto concrete floor                                        |

**Table 15-2 SE878Kx-Ax Storage Environmental Limits**

## 16 COMPLIANCES

The SE878Kx-Ax modules comply with the following:

- Directive 2002/95/EC on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)
- Manufactured in an ISO 9000: 2008 accredited facility
- Manufactured to TS 16949 requirement (upon request)

The module conforms to the following European Union Directives:

- Low Voltage Directive 2006/95/EEC and product safety test
- Directive EMC 2004/108/EC for conformity for EMC

## 16.1 CE Declarations of Conformity

DocuSign Envelope ID: B8CFF44C-9317-47EB-91EA-3B5C16F7EAD9



### EU DECLARATION OF CONFORMITY [20553DOC00132A]

- SE878K3-A** (product name)
- Telit Wireless Solutions -3131 RDU Center Dr. Suite 135 Morrisville, NC 27560 USA R&D Center -27422 Portola Parkway Suite 320 Foothill Ranch, CA 92610 (manufacturer)
- This declaration of conformity is issued under the sole responsibility of the manufacturer
- GNSS L1 receiver Wireless Module  
SW Version(s) Ver3.8.13\_3333\_0100800



Operating frequency bands and related max radio-frequency power transmitted:  
1559-1607 MHz Receiver Only

- The object of the declaration described above is in conformity with the relevant Community harmonisation:  
European Directive 2014/53/EU (RED)
- The conformity with the essential requirements set out in Art.3 of the 2014/53/EU has been demonstrated against the following harmonized standards:

 
| Harmonized Standard reference                     | Article of Directive 2014/53/EU          |
|---------------------------------------------------|------------------------------------------|
| EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013 | 3.1 (a): Health and Safety of the User   |
| Draft ETSI 301 489-1 v2.2.0 & 301 489-19 v2.1.0   | 3.1 (b): Electromagnetic Compatibility   |
| ETSI 303 413 v1.1.1                               | 3.2: Effective use of spectrum allocated |

- The conformity assessment procedure referred to in Article 17 and detailed in Annex III of Directive 2014/53/EU has been followed with the involvement of the following Notified Body:  
Compatible electronics, Inc., 114 Olinda Drive - Brea, California 92823 - United States, Notified Body No: 1925  
Thus,  is placed on the product.
- The product can be considered compliant to the essential requirements set out in Art.3 of 2014/53/EU only in combination with the above-mentioned SW version(s).
- The Technical Documentation (TD) relevant to the product described above and which supports this Declaration of Conformity, is held at: Telit Communications S.p.A., Via Stazione di Prosecco, 5/b - 34010 Sgonico - TRIESTE - ITALY  
Trieste, **2018-04-18**

DocuSigned by:



**Group CFO, Corporate**  
Eran Edri



**VP R&D GNSS**  
Georgia Frousiakis

EU-Type Examination Certificate No. 20180413085347      Technical Documentation: 30553TCF00122A  
www.Telit.com/RED

Telit Communications S.p.A.  
Via Stazione di Prosecco n. 5/B  
34010 Sgonico (TS) - ITALY  
Phone +39 040 4192 111  
Fax +39 040 4192 333

Cap. Soc. € 3.000.000  
Partita IVA 03711600266  
Cod.Fisc. 03711600266  
Nr. R.E.A. TS-120027

Società soggetta all'attività  
di direzione e coordinamento  
da parte di Telit Communications PLC  
con sede in Londra (art.2497 bis C.C.)

Società con socio unico  
(Telit Communications PLC)

Mod 243 2017-02 Rev.1- This declaration is issued according to 768/2008/EC

**Figure 16-1 SE878K3-A CE Declaration of Conformity**

DocuSign Envelope ID: B8CFF44C-9317-47EB-91EA-3B5C16F7EAD9



## EU DECLARATION OF CONFORMITY [20553DOC00133A]

- 1 **SE878K7-A** (product name)
- 2 Telit Wireless Solutions -3131 RDU Center Dr. Suite 135 Morrisville, NC 27560 USA R&D Center -27422 Portola Parkway Suite 320 Foothill Ranch, CA 92610 (manufacturer)
- 3 This declaration of conformity is issued under the sole responsibility of the manufacturer
- 4 GPS L1 receiver Wireless Module  
SW Version(s) Ver2.3.2\_3337\_\_15010801



Operating frequency bands and related max radio-frequency power transmitted:  
1574-1576 MHz Receiver Only

- 5 The object of the declaration described above is in conformity with the relevant Community harmonisation:  
European Directive 2014/53/EU (RED)
- 6 The conformity with the essential requirements set out in Art.3 of the 2014/53/EU has been demonstrated against the following harmonized standards:

| Harmonized Standard reference                     | Article of Directive 2014/53/EU          |
|---------------------------------------------------|------------------------------------------|
| EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013 | 3.1 (a): Health and Safety of the User   |
| Draft ETSI 301 489-1 v2.2.0 & 301 489-19 v2.1.0   | 3.1 (b): Electromagnetic Compatibility   |
| ETSI 303 413 v1.1.1                               | 3.2: Effective use of spectrum allocated |

- 7 The conformity assessment procedure referred to in Article 17 and detailed in Annex III of Directive 2014/53/EU has been followed with the involvement of the following Notified Body:

Compatible electronics, Inc., 114 Olinda Drive - Brea, California 92823 - United States, Notified Body No: 1925

Thus, **CE** is placed on the product.

- 8 The product can be considered compliant to the essential requirements set out in Art.3 of 2014/53/EU only in combination with the above-mentioned SW version(s).
- 9 The Technical Documentation (TD) relevant to the product described above and which supports this Declaration of Conformity, is held at: Telit Communications S.p.A., Via Stazione di Prosecco, 5/b - 34010 Sgonico - TRIESTE - ITALY

Trieste, **2018-04-18**

DocuSigned by:  
  
D10038F7A8544F8...  
**Group CFO, Corporate**  
Eran Edri

  
**VP R&D GNSS**  
Georgia Frousiakis

EU-Type Examination Certificate No. 20180413085646

Technical Documentation: 30553TCF00123A  
[www.Telit.com/RED](http://www.Telit.com/RED)

Telit Communications S.p.A.  
Via Stazione di Prosecco n. 5/B  
34010 Sgonico (TS) - ITALY  
Phone +39 040 4192111  
Fax +39 040 4192333

Cap. Soc. € 3.000.000  
Partita IVA 03711600296  
Cod.Fisc. 03711600296  
Nr. R.E.A. TS-120027

Società soggetta all'attività  
di direzione e coordinamento  
da parte di Telit Communications PLC  
con sede in Londra (art.2497 bis C.C.)

Società con socio unico  
(Telit Communications PLC)

Mod 243 2017-02 Rev.1- This declaration is issued according to 768/2008/EC

**Figure 16-2 SE878K7-A CE Declaration of Conformity**

## 17 SAFETY RECOMMENDATIONS



### PLEASE READ CAREFULLY

Be sure that the use of this product is allowed in the country and in the environment required. The use of this product may be dangerous and must be avoided in the following areas:

- Where it can interfere with other electronic devices in environments such as hospitals, airports, aircraft, etc.
- Where there is risk of explosion such as gasoline stations, oil refineries, etc.

It is the responsibility of the user to enforce the country regulations and specific environmental regulations.

Do not disassemble the product. Evidence of tampering will invalidate the warranty.

- Telit recommends following the instructions in product user guides for correct installation of the product.
- The product must be supplied with a stabilized voltage source and all wiring must conform to security and fire prevention regulations.
- The product must be handled with care, avoiding any contact with the pins because electrostatic discharges may damage the product itself.

Since the modules are intended to be built-in, the system integrator is responsible for the functioning of the final product; therefore, care must be taken with components external to the module, as well as for any project or installation issue. Should there be any doubt, please refer to the technical documentation and the regulations in force. The integrator must take adequate precautions to avoid electrical, mechanical, and fire hazards.

Non-antenna modules must be equipped with a proper antenna with specific characteristics.

The European Community provides some Directives for electronic equipment introduced on the market. All the relevant information is available on the European Community website:

<http://ec.europa.eu/enterprise/sectors/rte/documents/>

The text of the Directive 99/05 regarding telecommunication equipment is available, while the applicable Directives (Low Voltage and EMC) are available at:

<http://ec.europa.eu/enterprise/sectors/electrical/>

The power supply used shall comply the clause 2.5 (Limited power sources) of the EN 60950-1 standard and the module shall be mounted on a PCB which complies with V-0 flammability class.

Since the module must be built-in to a system, it is intended only for installation in a RESTRICTED ACCESS LOCATION. Therefore, the system integrator must provide an enclosure which protects against fire, electrical shock, and mechanical shock in accordance with relevant standards.

## 18 GLOSSARY AND ACRONYMS

**AGPS:** Assisted (or Aided) GPS

AGPS provides ephemeris data to the receiver to allow faster **cold start** times than would be possible using only broadcast data. This extended ephemeris data could be either server-generated or locally-generated. See **Local Ephemeris prediction data** and **Server-based Ephemeris prediction data**

**Almanac:**

A reduced-precision set of orbital parameters for the entire GPS constellation that allows calculation of approximate satellite positions and velocities. The almanac may be used by a receiver to determine satellite visibility as an aid during acquisition of satellite signals. The almanac is updated weekly by the Master Control Station. See **Ephemeris**.

**BeiDou (BDS) - formerly COMPASS:**

The Chinese **GNSS**, currently being expanded towards full operational capability.

**Cold Start:**

A cold start occurs when a receiver begins operation with unknown position, time, and ephemeris data, typically when it is powered up after a period on inactivity. This typically occurs at powerup or being sent a restart command. Almanac information may be used to identify previously visible satellites and their approximate positions. See **Restart**.

**Cold Start Acquisition Sensitivity:**

The lowest signal level at which a GNSS receiver is able to reliably acquire satellite signals and calculate a navigation solution from a Cold Start. Cold start acquisition sensitivity is limited by the data decoding threshold of the satellite messages.

**EGNOS:** European Geostationary Navigation Overlay Service

The European **SBAS** system.

**Ephemeris** (plural ephemerides):

A set of precise orbital parameters that is used by a GNSS receiver to calculate satellite position and velocity. The satellite position is then used to calculate the navigation solution. Ephemeris data is updated frequently (normally every 2 hours for GPS) to maintain the accuracy of the position calculation. See **Almanac**.

**ESD:** Electro-Static Discharge

Large, momentary, unwanted electrical currents that can cause damage to electronic equipment.

**GAGAN:**

The Indian **SBAS** system.

**Galileo:**

The European **GNSS** currently being built by the European Union (EU) and European Space Agency (ESA).

**GDOP:** Geometric Dilution of Precision

A factor used to describe the effect of satellite geometry on the accuracy of the time and position solution of a **GNSS** receiver. A lower value of GDOP indicates a smaller error in the solution. Related factors include PDOP (position), HDOP (horizontal), VDOP (vertical) and TDOP (time).

**GLONASS:** ГЛОбальная НАвигационная Спутниковая Система

GLObal'naya NAvigatsionnaya Sputnikovaya Sistema

(Global Navigation Satellite System)

The Russian **GNSS**, which is operated by the Russian Aerospace Defense Forces

**GNSS:** Global Navigation Satellite System

Generic term for a satellite-based navigation system with global coverage. The current or planned systems are: **GPS**, **GLONASS**, **BDS**, and **Galileo**.

**GPS:** Global Positioning System

The U.S. **GNSS**, a satellite-based positioning system that provides accurate position, velocity, and time data. GPS is operated by the US Department of Defense.

**Hot Start:**

A hot start occurs when a receiver begins operation with known time, position, and ephemeris data, typically after being sent a restart command. See **Restart**.

**LCC:** Leadless Chip Carrier

A module design without pins. In place of the pins are pads of bare gold-plated copper that are soldered to the printed circuit board.

**LNA:** Low Noise Amplifier

An electronic amplifier used for very weak signals which is especially designed to add very little noise to the amplified signal.

**Local Ephemeris prediction data:**

Extended Ephemeris (i.e. predicted) data, autonomously calculated by the receiver from broadcast data received from satellites, which is stored in memory. It is usually useful for up to three days. See **AGPS**.

**MSAS:** **MTSAT** Satellite Augmentation System

The Japanese **SBAS** system.

**MSD:** Moisture sensitive device.**MTSAT:** Multifunctional Transport Satellites

The Japanese system of geosynchronous satellites used for weather and aviation control.

**Navigation Sensitivity:** The lowest signal level at which a GNSS receiver is able to reliably continue navigation after the satellite signals have been acquired.

**NMEA:** National Marine Electronics Association**QZSS:** Quasi-Zenith Satellite System

The Japanese **SBAS** system.

**Reacquisition:** A receiver, while in normal operation, losing the RF signal (perhaps due to the antenna cable being disconnected or a vehicle entering a tunnel), and re-establishing a valid fix after the signal is restored. Contrast with **Reset** and **Restart**.

**Restart:** A receiver beginning operation after being sent a restart command, generally used for testing rather than normal operation. A restart can also result from a power-up. See **Cold Start**, **Warm Start**, and **Hot Start**. Contrast with **Reset** and **Reacquisition**.

**Reset:** A receiver beginning operation after a (hardware) reset signal on a pin, generally used for testing rather than normal operation. Contrast with **Restart** and **Reacquisition**.

**RoHS:** The Restriction of Hazardous Substances

Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment, which was adopted in February 2003 by the European Union.

**RTC:** Real Time Clock

An electronic device (chip) that maintains time continuously while powered up.

**SAW:** Surface Acoustic Wave filter

Electromechanical device used in radio frequency applications. SAW filters are useful at frequencies up to 3 GHz.

**SBAS:** Satellite Based Augmentation System

A system that uses a network of ground stations and geostationary satellites to provide differential corrections to GNSS receivers. These corrections are transmitted on the same frequency as navigation signals, so the receiver can use the same front-end design to process them. Current examples are **WAAS**, **EGNOS**, **MSAS**, and **GAGAN**.

**Server-based Ephemeris prediction data:**

Extended Ephemeris (i.e. predicted) data, calculated by a server and provided to the receiver over a network. It is usually useful for up to 14 days. See **AGPS**.

**TCXO:** Temperature-Compensated Crystal Oscillator**Tracking Sensitivity:**

The lowest signal level at which a **GNSS** receiver is able to maintain tracking of a satellite signal after acquisition is complete. The receiver may stop navigating since it cannot decode the navigation message at this signal level.

**TTFF:** Time to First Fix

The elapsed time required by a receiver to achieve a valid position solution from a specified starting condition. This value will vary with the operating state of the receiver, the length of time since the last position fix, the location of the last fix, and the specific receiver design.

A standard reference level of -130 dBm is used for testing.

**UART:** Universal Asynchronous Receiver/Transmitter

An integrated circuit (or part thereof) which provides a serial communication port for a computer or peripheral device.

**WAAS:** Wide Area Augmentation System

The North American **SBAS** system developed by the US Federal Aviation Administration (FAA).

**Warm Start:**

A warm start occurs when a receiver begins operation with known (at least approximately) time and position, but unknown ephemeris data, typically after being sent a restart command.

See **Restart**.

## 19 DOCUMENT HISTORY

| Revision | Date       | Changes                                                                                                                                                                                                                                                                                                         |
|----------|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0        | 2018-03-12 | First edition (with revised pin numbers & QZSS default)                                                                                                                                                                                                                                                         |
| 1        | 2018-03-16 | Changed “3337” to “3333” in 4.14.2 Force-on note<br>Corrected the pinout diagram & tables and reference schematic<br>Made I/O port names consistent                                                                                                                                                             |
| 2        | 2018-05-18 | Added information about enabling BDS disables GLONASS and Galileo<br>Corrected descriptions of serial ports<br>Changed pin name from SPI_CS to nSPI_CS<br>Removed restriction prohibiting use of an LDO with fast discharge<br>Added RED Documents of Conformity<br>Updated module photos<br>Minor text changes |