


A compact starter kit with your favorite microcontroller and two mikroBUS[™] sockets





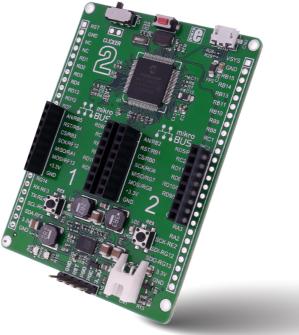

TO OUR VALUED CUSTOMERS

I want to express my thanks to you for being interested in our products and for having confidence in MikroElektronika.

The primary aim of our company is to design and produce high quality electronic products and to constantly improve the performance thereof in order to better suit your needs.

CH#

Nebojsa Matic General Manager

The dsPIC* and Windows* logos and product names are trademarks of Microchip Technology* and Microsoft* in the U.S.A. and other countries.

Table of contents

Introduction to clicker 2 for dsPIC33	4
Key features	5
Schematic	6
1. Power supply	7
2. dsPIC33EP512MU810 microcontroller	8
3. Programming the microcontroller	9
3.1 Programming with mikroBootloader	10
step 1 – Connecting clicker 2 for dsPIC	10
step 2 – Browsing for .HEX file	11
step 3 – Selecting .HEX file	11
step 4 – Uploading .HEX file	12
step 5 – Finish upload	13

3.2 Programming with mikroProg programmer	14
mikroProg Suite for PIC [®] software	15
4. Buttons and LEDs	16
5. Power management and battery charger	17
6. Oscillators	18
7. USB connection	19
8. Pinout	20
8.1 mikroBUS™ pinout	21
9. click boards [™] are plug and play!	22
10. Dimensions	23

Introduction to clicker 2 for dsPIC33


clicker 2 for dsPIC33 is a compact development kit with two mikroBUS[™] sockets for click hoard[™] connectivity. You can use it to quickly build your own gadgets with unique functionalities and features. It carries the dsPIC33EP512MU810. a 16-bit microcontroller, two indication LEDs. two general purpose buttons, a reset button, an ON/OFF switch, a li-polymer battery connector, a micro USB connector and two mikroBUS™ sockets. A mikroProg connector and a 2x26 pinout for interfacing with external electronics are also provided. The mikroBUS[™] connector consists of two 1x8 female headers with SPI. I 2C, UART, RST, PWM, Analog and Interrupt lines as well as 3.3V, 5V and GND power lines. clicker 2 for dsPIC33 board can be powered over a USB cable.






Key features

- 1 ON/OFF switch
- 2 8 MHz crystal oscillator
- 3 two 1x26 connection pads
- 4 mikroBUS™ sockets 1 and 2
- 5 Pushbuttons
- 6 Additional LEDs
- 7 LTC3586 USB power manager IC
- 8 Power and Charge indication LEDs
- 9 RESET button
- 10 Micro USB connector
- 11 dsPIC33EP512MU810 MCU
- 12 Li-Polymer battery connector
- 13 mikroProg programmer connector
- 14 32.768 KHz crystal oscillator

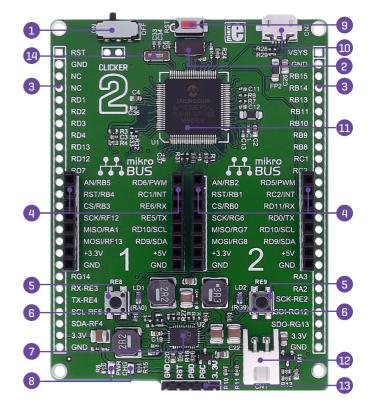

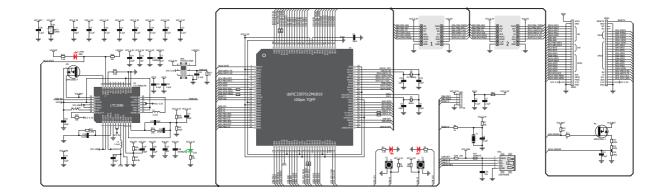

clicker 2 for dsPIC33 schematic

1. Power supply



You can supply power to the board with a micro USB cable provided in the package. On-board voltage regulators provide the appropriate voltage levels to each component on the board. Power LED [GREEN] will indicate the presence of power supply.

Battery power supply

You can also power the board using a Li-Polymer battery, via onboard battery connector. On-board battery charger circuit enables you to charge the battery over USB connection. LED diode [RED] will indicate when battery is charging. Charging current is ~300mA and charging voltage is 4.2V DC.t

Figure 1-2: Connecting Li-Polymer battery



NOTE Some click boards need more current than the USB connection can supply. For 3.3V clicks, the upper limit is 750 mA; for 5V clicks, it's 500 mA. In those cases you would need to use the battery as the power supply, or the vsys pin on the side of the board.

2. dsPIC33EP512MU810 microcontroller


The clicker 2 for dsPIC33 development tool comes with the dsPIC33EP512MU810 device. This 16-bit low power high performance microcontroller is rich with on-chip peripherals and features 512 KB of program memory and 53,248 bytes of RAM. It has integrated full speed USB 2.0. support.

Key MCU features

- CPU speed: 70 MIPS
- 3568 Bytes Data SRAM
- Architecture: 16-bit
- Program memory: 512KB
- Pin count: 100
- RAM memory: 53,248 KB



3. Programming the microcontroller

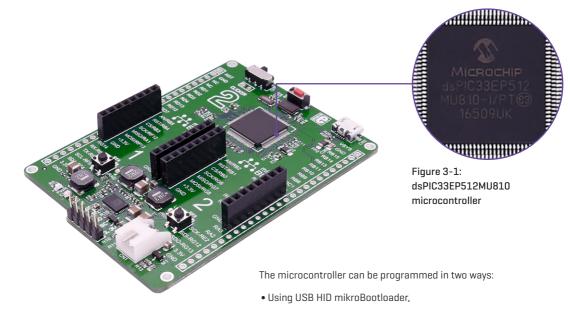

• Using external mikroProg for dsPIC33 programmer

3.1 Programming with mikroBootloader

You can program the microcontroller with a bootloader which is preprogrammed by default. To transfer .hex file from a PC to MCU you need bootloader software (mikroBootloader USB HID) which can be downloaded from:

https://download.mikroe.com/examples/starter-boards/ clicker-2/dspic33/clicker-2-dspic33-usb-hid-bootloader.zip

After the mikroBootloader software is downloaded, unzip it to desired location and start it.



step 1 - Connecting clicker 2 for dsPIC33

mikroBo	otloade	Device		
1 Wait for USB link	4	MCU Type		
2 Connect to MCU	Conne	History Win Attach USB HID	dow device or reset if attach	ed
3 Choose HEX file	Browse for HEX	1		
4 Start bootloader	Begin uploading			
Bootloading progress bar				

Figure 3-2: USB HID mikroBootloader window

To start, connect the USB cable, or if already connected press the Reset button on your clicker 2 for dsPIC33. Click the Connect button within 5s to enter the bootloader mode, otherwise existing microcontroller program will execute.

step 2 - Browsing for .HEX file

💶 mikroElektronika l	JSB HID Bootloader	v2.7.0.0		x
mikroBo	otioade	Device	Clicker 2 for dsPIC33	•
1 Wait for USB link	*	МСИ Туре	dsPIC33	•
2 Connect to MCU	Disconnect		dow device or reset if attached. reenter bootloader mode.	*
3 Choose HEX file	Browse for HEX	Waiting MCU res		
4 Start bootloader	Begin uploading			-
Bootloading progress bar				
: No files opened.				

Figure 3-3: Browse for HEX

01	Click the Browse for HEX button and from a
-	pop-up window (Figure 3.4) choose the .HEX file
	which will be uploaded to MCU memory.

step 3 - Selecting .HEX file

	 Documents 	- 49	Search Docum	ents	
Organize 🔻 New folde	er			II • 🔟	•
Favorites	Documents lib Includes: 2 locations	rary	Arrang	e by: Folder 🔻	
Downloads	Name	Date modified	Туре	Size	
Sales and Market Recent Places	clicker2 for dsPIC33.hex	22.3.2017 15:41	HEX.file		
🔚 Libraries 🗉					
Documents		01			
Music					
Pictures					
Videos					
🖳 💭 Computer					
🛛 🚢 System (C:)					
🗅 💼 Data (D:)					
🖻 👝 GSP1RMCPRXFRI 🛫	٠				
File na	ime:	-	HEX files		+
The De		·	ries rines		-

Figure 3-4: Selecting HEX



01 Select .HEX file using open dialog window.

02 Click the Open button.

step 4 – Uploading .HEX file

mikroElektronika U			
mikroBo	otloadei	Device Clicker 2 for dsPIC33	-
1 Wait for USB link	*	MCU Type dsPIC33 🗸	-
2 Connect to MCU	Disconnect	History Window Attach USB HID device or reset if attached.	
3 Choose HEX file	Browse for HEX	Waiting MCU response Connected. Opened: C:\Users\srdjan.saric\Desktop \Clicker 2 for dsPIC32.hex	
4 Start bootloader	Begin uploading	-01	
Bootloading progress bar			ו
: C:\Users\srdjan.saric\D	esktop\Clicker 2 for ds	PIC32.hex	

Figure 3-5: Begin uploading

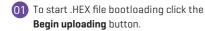




Figure 3-6: Progress bar



01 Progress bar enables you to monitor .HEX file uploading.





Figure 3-7: Restarting MCU



Click **OK** button after the uploading process is finished.

02 Press **Reset button** on clicker 2 for dsPIC33 board and wait

for 5 seconds. Your program will run automatically.

mikroBo	otioade	Device	Ŧ
1 Wait for USB link	4	МСИ Туре	Ŧ
2 Connect to MCU	Connect	History Window \Clicker 2 for dsPIC32.hex Udloading:	*
3 Choose HEX file	Browse for HEX	Flash Erase Flash Write Completed successfully. Disconnected.	
4 Start bootloader	Begin uploading	Reset Reset device to reenter bootloader mode.	-
Bootloading progress bar			_

Figure 3-8: mikroBootloader ready for next job

3.2 Programming with mikroProg programmer

The microcontroller can be programmed with external **mikroProg for PIC programmer** and **mikroProg Suite for PIC software**. The external programmer is connected to the development system via 1x5 connector **Figure 3-9**. **mikroProg** is a fast USB 2.0 programmer with hardware debugger support. It supports PIC10®, dsPIC30/33®, PIC24® and PIC32® devices in a single programmer. It supports over 570 microcontrollers from Microchip®. Outstanding performance, easy operation and elegant design are its key features.

You can also program it with ICD2® or ICD3® if you reroute the wires like shown here.

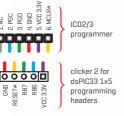


Figure 3-9: mikroProg connector

mikroProg Suite for dsPIC[®] software



mikroProg programmer requires special programming software called mikroProg Suite for dsPIC[®]. This software is used for programming of ALL Microchip® microcontroller families, including PIC10®, PIC12®, PIC16°, PIC18°, dsPIC30/33°, PIC24° and PIC32[®]. Software has intuitive interface and SingleClick[™] programming technology. Just by downloading the latest version of mikroProg Suite your programmer is ready to program new devices. mikroProg Suite is updated regularly, at least four times a year, so your programmer will be more and more powerful with each new release.

Family		Configuration Bits			^
C18F-J ·		Clear Watchdog Timer		-	
	CONFIG	PLL Oscillator Selection	No divide - oscillator used directly (4 MHz input)	-	
18F87350 ·	8	Stack Overflow/Underflow Reset	Enabled	-	
		Extended instruction Set	Enabled	-	
Read Write	PO I	Background Debugger	Disabled	-	
Verify Blank	MCU INFO	Code Protection	Program memory is NOT code-protected	-	
Venity Diank	M	CPU System Clock	No CPU system clock divide	-	
Erase Reset		Oscillator Selection	EC oscillator with PLL; CLKO on RA6; ECPLL oscillator used by USB	-	
X File Options		Fail-Safe Clock Monitor	Enabled	-	
		Int./Ext. Oscillator Switchover	Enabled	-	
Load Save		Watchdog Timer Postscaler	1:32768	-	
Reload HEX		External Address Bus Shift	Address shifting Enabled	-	
Load/Save CODE		External Memory Bus	Disabled	-	
Load/Save DATA		Data Bus Width	16-Bit External Bus mode	-	
		External Bus Wait	Disabled	-	
CODE			and the second	H	~
DATA UNIT ID		Program Memory Size: 128 kB D	Address: Oh Revision		
Options					
gress:					
0%					

Figure 3-10: Main window of mikroProg Suite for dsPIC[®] programming software


4. Buttons and LEDs

The board also contains a **01** reset button and a pair of 02 buttons and 03 LEDs, as well as an ON/OFF switch. The RESET button is used manually reset tn the microcontrollergenerates a low it voltade level nn the microcontroller's reset pin. LEDs can be used for visual indication of the logic state on two pins (RAO and RG9). An active LED indicates that a logic high [1] is present on the pin. Pressing any of the two buttons can change the logic state of the microcontroller pins (T2 and T3) from logic high (1) to logic low (0).

> Figure 4-1: Two LEDs, two buttons and a reset button

RE9

5. Power management and battery charger

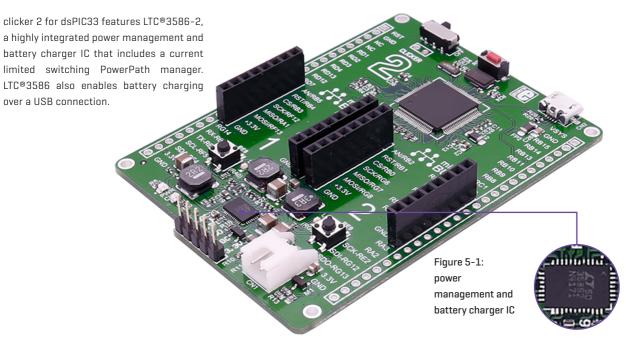

6. Oscillators

Board is equipped with 8MHz crystal oscillator [X1] circuit that provides external clock waveform to the microcontroller OSC1 and OSC2 pins. This base frequency is suitable for further clock multipliers and ideal for generation of necessary USB clock, which ensures proper operation of bootloader and your custom USB-based applications. And the 32. TK MHz oscillator [X2], a Real-Time Clock and Calendar [RTCC] module.

Figure 6-1: 8MHz crystal oscillator module (X1) and 32.768 KHz crystal oscillator


7. USB connection

dsPIC33 microcontrollers has an integrated USB module, which enables you to implement USB communication functionality to your clicker 2 board. Connection with target USB host is done over a micro USB connector which is positioned next to the battery connector.

> Figure 7-1: Connecting USB cable to clicker 2

A A A A

8. Pinout

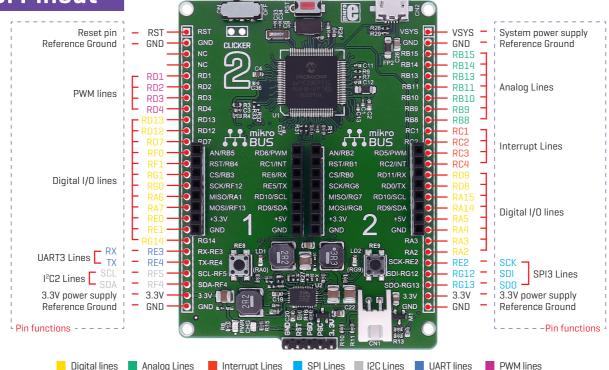

8.1 mikroBUS[™] pinouts

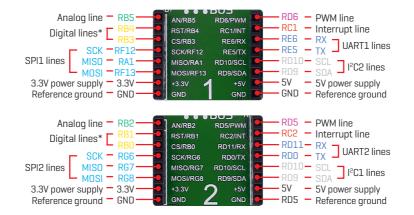


Figure 9-1: mikroBUS[™] individual and shared lines

9. click boards[™] are plug and play!

Up to now, MikroElektronika has released more than 300 mikroBUSTM compatible click boardsTM. On the average, three click boards are released per week. It is our intention to provide you with as many add-on boards as possible, so you will be able to expand your development board with additional functionality. Each board comes with a set of working example code. Please visit the click boardsTM webpage for the complete list of currently available boards:

https://shop.mikroe.com/click

Contraction of the second


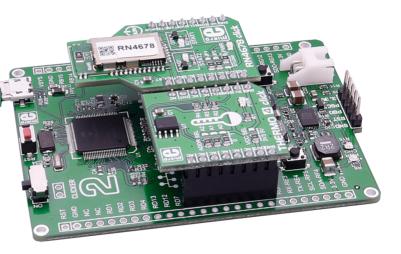


Figure 10-1: clicker 2 for dsPIC33 driving click boards[™]

10. Dimensions

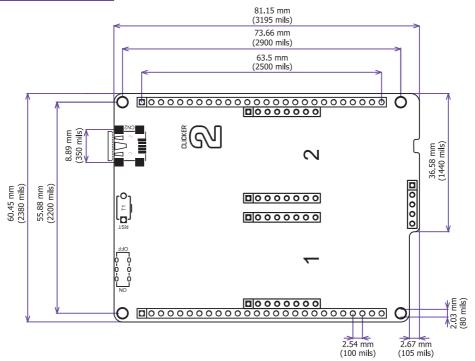

DISCLAIMER

All the products owned by MikroElektronika are protected by copyright law and international copyright treaty. Therefore, this manual is to be treated as any other copyright material. No part of this manual, including product and software described herein, may be reproduced, stored in a retrieval system, translated or transmitted in any form or by any means, without the prior written permission of MikroElektronika. The manual PDF edition can be printed for private or local use, but not for distribution. Any modification of this manual is prohibited.

MikroElektronika provides this manual 'as is' without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties or conditions of merchantability or fitness for a particular purpose.

MikroElektronika shall assume no responsibility or liability for any errors, omissions and inaccuracies that may appear in this manual. In no event shall MikroElektronika, its directors, officers, employees or distributors be liable for any indirect, specific, incidental or consequential damages (including damages for loss of business profits and business information, business interruption or any other pecuniary loss) arising out of the use of this manual or product, even if MikroElektronika has been advised of the possibility of such damages. MikroElektronika reserves the right to change information contained in this manual at any time without prior notice, if necessary.

HIGH RISK ACTIVITIES

The products of MikroElektronika are not fault – tolerant nor designed, manufactured or intended for use or resale as on – line control equipment in hazardous environments requiring fail – safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines or weapons systems in which the failure of Software could lead directly to death, personal injury or severe physical or environmental damage ('High Risk Activities'). MikroElektronika and its suppliers specifically disclaim any expressed or implied warranty of fitness for High Risk Activities.

TRADEMARKS

The MikroElektronika name and logo, mikroC, mikroBasic, mikroPascal, Visual TFT, Visual GLCD, mikroProg, Ready, MINI, mikroBUS[™], EasyAVR, EasyA051, click boards[™] and mikromedia are trademarks of MikroElektronika. All other trademarks mentioned herein are property of their respective companies. All other product and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are only used for identification or explanation and to the owners' benefit, with no intent to infringe.

Copyright © 2017 MikroElektronika. All Rights Reserved.



If you want to learn more about our products, please visit our web site at www.mikroe.com If you are experiencing some problems with any of our products or just need additional information, please place your ticket at www.mikroe.com/support If you have any questions, comments or business proposals, do not hesitate to contact us at office@mikroe.com