


# CLICKER 2

the possibilities are endless

A compact starter kit with your  
favorite microcontroller and  
two mikroBUS™ sockets

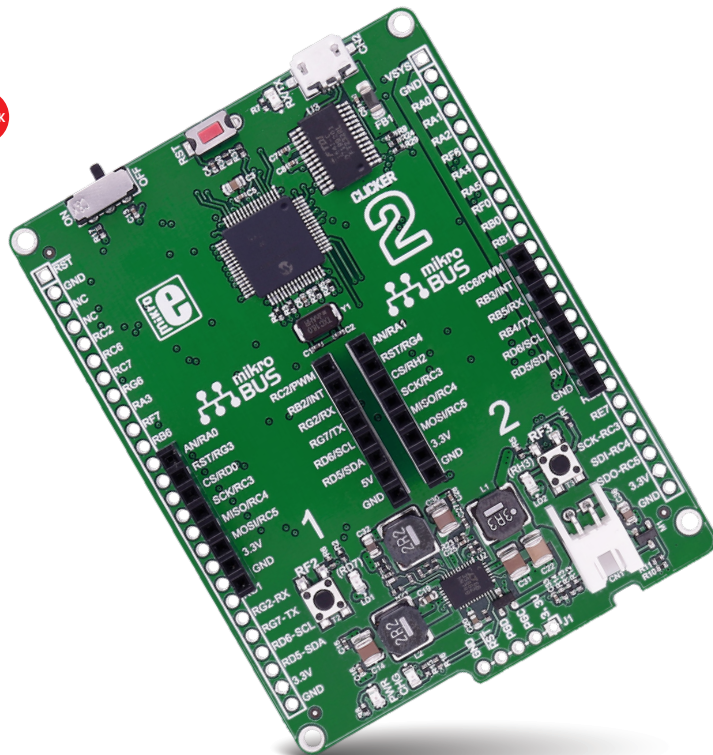

MIKROE

# TO OUR VALUED CUSTOMERS

I want to express my thanks to you for being interested in our products and for having confidence in MikroElektronika.

The primary aim of our company is to design and produce high quality electronic products and to constantly improve the performance thereof in order to better suit your needs.

A stylized, handwritten signature in white ink, consisting of a large 'C' followed by several loops and a long horizontal stroke.

Nebojsa Matic  
General Manager

# Table of Contents

Introduction to clicker 2 for PIC18FK	4
Key features	5
Schematic	6
<b>1.</b> Power supply	7
<b>2. PIC18F67K40</b> microcontroller	8
<b>3.</b> Programming the microcontroller	9
<b>3.1</b> Programming with mikroBootloader	10
<b>3.2</b> Xpress programmer	14
<b>3.3</b> Programming with mikroProg programmer	15
<b>3.4</b> mikroProg Suite for PIC software	16
<b>4.</b> Buttons and LEDs	17
<b>5.</b> Power management and battery charger	18
<b>6.</b> Oscillators	19
<b>7.</b> USB connection	20
<b>8.</b> Pinout	21
<b>8.1</b> mikroBUS™ pinout	22
<b>9.</b> Click boards™ are plug and play!	23
<b>10.</b> Dimensions	24

# Introduction to clicker 2 for PIC18FK

Clicker 2 for PIC18FK is a compact development kit with two mikroBUS™ sockets for click board connectivity. You can use it to quickly build your own gadgets with unique functionalities and features. It carries the **PIC18F67K40**, a 8-bit microcontroller, two indication LEDs, two general purpose buttons, a reset button, an on/off switch, a li-polymer battery connector, a micro USB connector and two mikroBUS™ sockets. A mikroProg connector and a 2x26 pinout for interfacing with external electronics are also provided. The mikroBUS™ connector consists of two 1x8 female headers with SPI, I2C, UART, RST, PWM, Analog and Interrupt lines as well as 3.3V, 5V and GND power lines. clicker 2 for PIC18FK board can be powered over a USB cable.



power supply  
via USB cable [5V DC]




board dimensions  
60.4 x 81 mm [2.4 x 3.2 inch]




weight  
26 g [0.057 lbs]

# Key features

- 1 ON/OFF switch
- 2 8 MHz crystal oscillator
- 3 two 1x26 connection pads
- 4 mikroBUS™ sockets 1 and 2
- 5 Pushbuttons
- 6 Additional LEDs
- 7 LTC3586 USB power manager IC
- 8 Power and Charge indication LEDs
- 9 RESET button
- 10 Micro USB connector
- 11 PIC18F67K40 MCU
- 12 Li-Polymer battery connector
- 13 mikroProg programmer connector
- 14 PIC16F1454

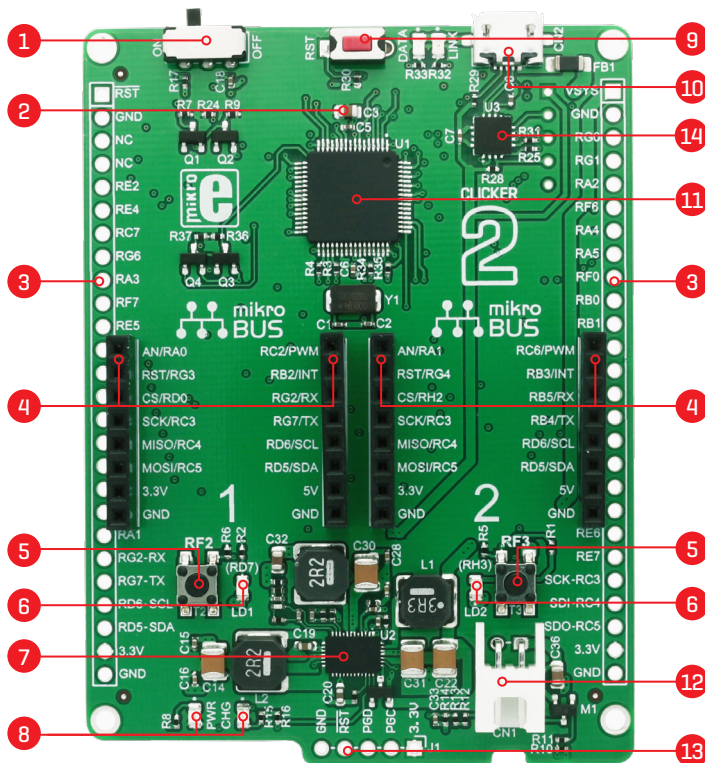

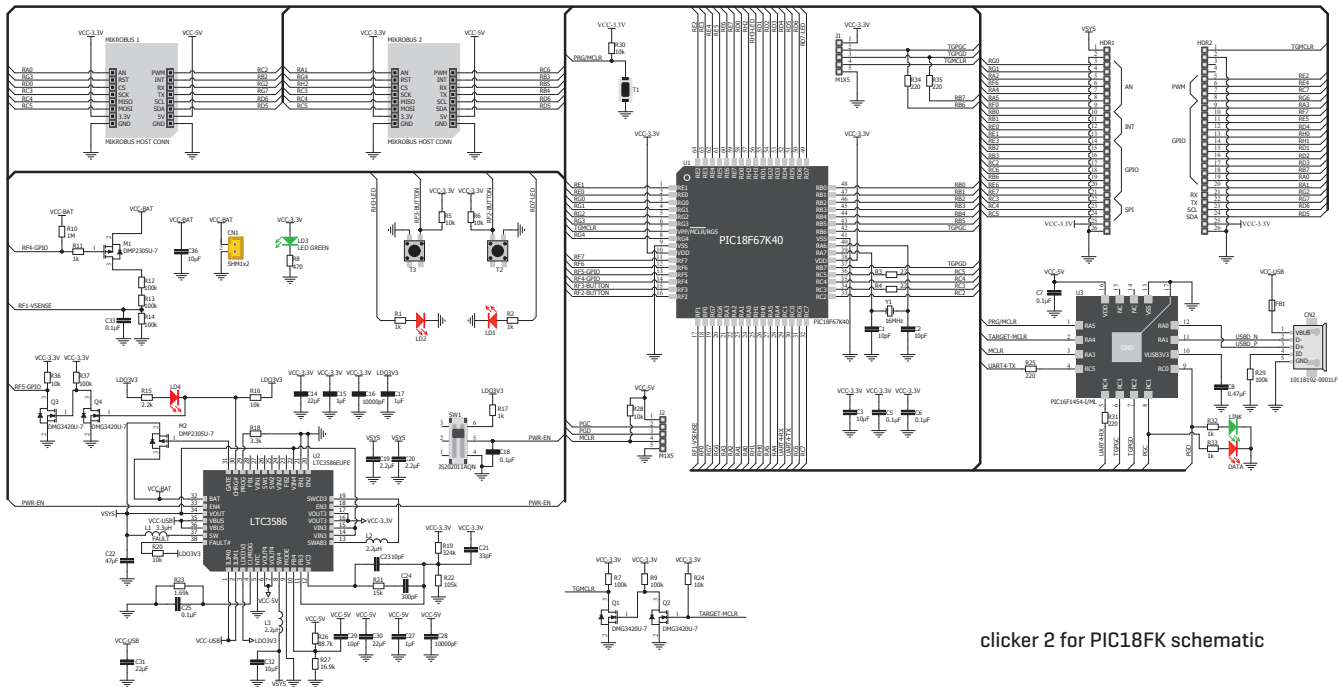

clicker 2 for PIC18FK schematic

# 1. Power supply

## USB power supply

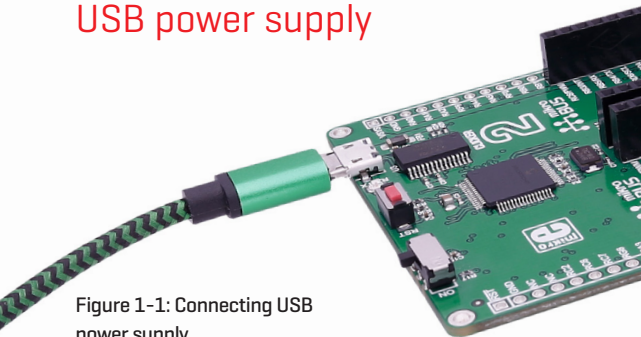


Figure 1-1: Connecting USB power supply

You can supply power to the board with a micro USB cable provided in the package. On-board voltage regulators provide the appropriate voltage levels to each component on the board. Power LED [GREEN] will indicate the presence of power supply.

**NOTE** | Some click boards need more current than the USB connection can supply. For 3.3V clicks, the upper limit is 750 mA; for 5V clicks, it's 500 mA. In those cases you would need to use the battery as the power supply, or the vsys pin on the side of the board.

## Battery power supply

You can also power the board using a Li-Polymer battery, via onboard battery connector. On-board battery charger circuit enables you to charge the battery over USB connection. LED diode [RED] will indicate when battery is charging. Charging current is ~300mA and charging voltage is 4.2V DC.t

Figure 1-2: Connecting Li-Polymer battery




## 2. PIC18F67K40 microcontroller

The clicker 2 for PIC18FK development tool comes with the **PIC18F67K40** device. This 16-bit low power high performance microcontroller is rich with on-chip peripherals and features 512 KB of program memory and 53,248 bytes of RAM. It has integrated full speed USB 2.0. support.

### Key microcontroller features

- 128K bytes Program Flash
  - 3568 Bytes Data SRAM
  - 1024 Bytes Data EEPROM
- Sleep mode: Lowest Power Consumption

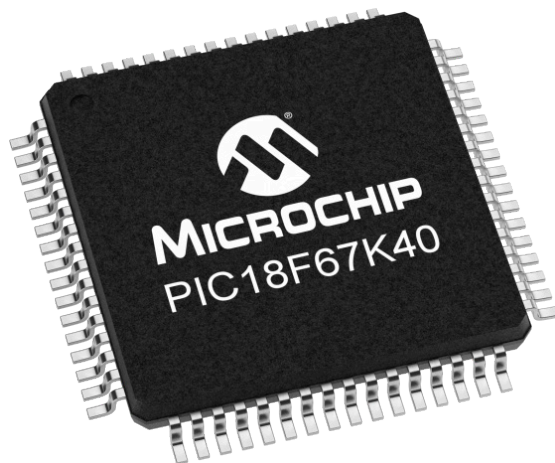



# 3. Programming the microcontroller

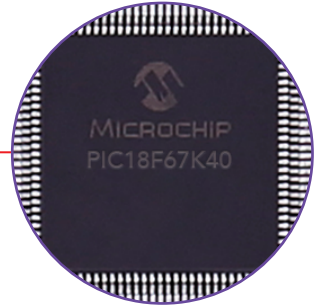
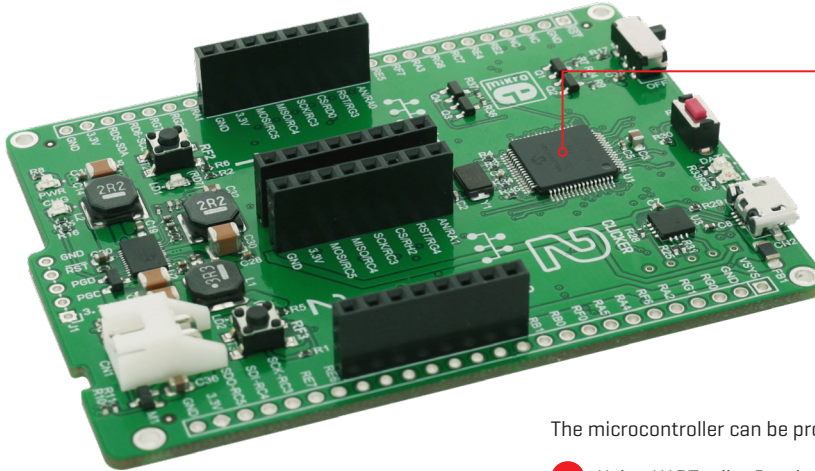


Figure 3-1:  
PIC18F67K40  
microcontroller

The microcontroller can be programmed in three ways:


- 01 Using UART mikroBootloader
- 02 Using external mikroProg for PIC18FK programmer
- 03 Using Xpress bootloader

## 3.1 Programming with mikroBootloader

You can program the microcontroller with a bootloader which is preprogrammed by default. To transfer .hex file from a PC to MCU you need bootloader software [mikroBootloader USB HID] which can be downloaded from:

<https://download.mikroe.com/examples/starter-boards/clicker-2/dspic33/clicker-2-dspic33-usb-hid-bootloader.zip>

After the mikroBootloader software is downloaded, unzip it to desired location and start it.

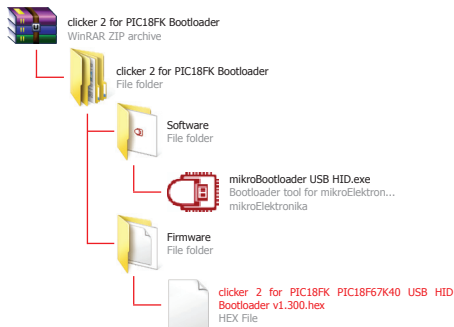

### step 1 – Connecting clicker 2 for PIC18FK

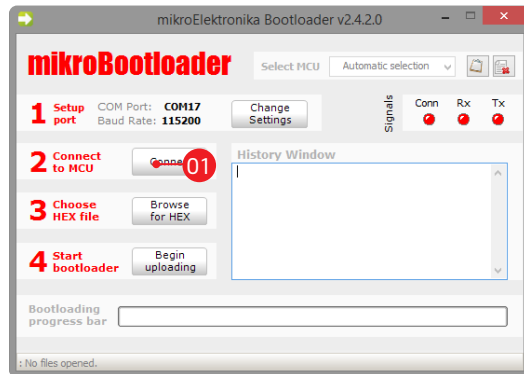


Figure 3-2: USB HID mikroBootloader window

- 01** To start, connect the USB cable, or if already connected press the Reset button on your clicker 2 for PIC18FK. Click the Connect button within 5s to enter the bootloader mode, otherwise existing microcontroller program will execute.

## step 2 – Browsing for .HEX file

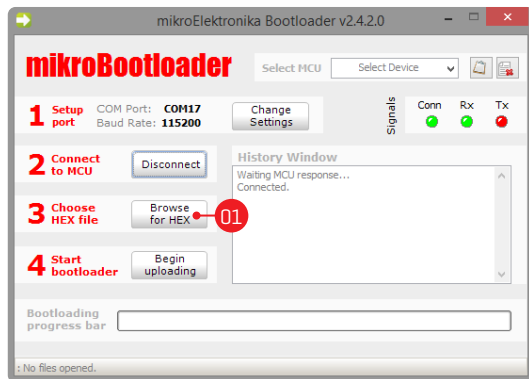


Figure 3-3: Browse for HEX

- 01 Click the Browse for HEX button and from a pop-up window [Figure 3.4] choose the .HEX file which will be uploaded to MCU memory.

## step 3 – Selecting .HEX file

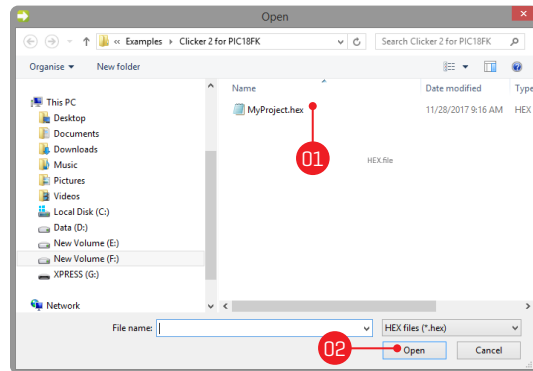


Figure 3-4: Selecting HEX

- 01 Select .HEX file using open dialog window.
- 02 Click the Open button.

## step 4 – Uploading .HEX file

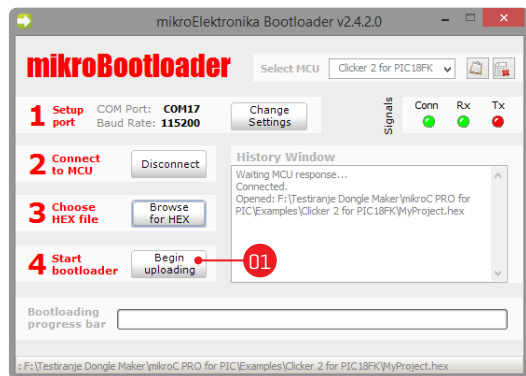


Figure 3-5: Begin uploading

**01** To start .HEX file bootloading click the **Begin uploading** button.

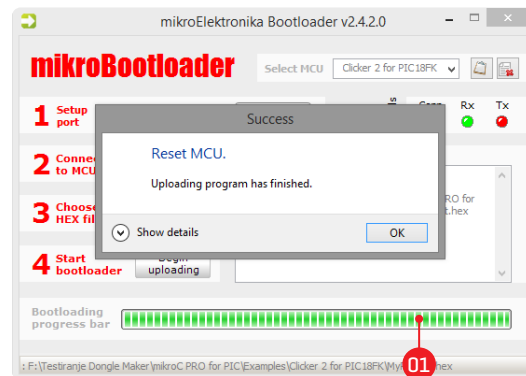


Figure 3-6: Progress bar

**01** Progress bar enables you to monitor .HEX file uploading.

## step 5 – Finish upload

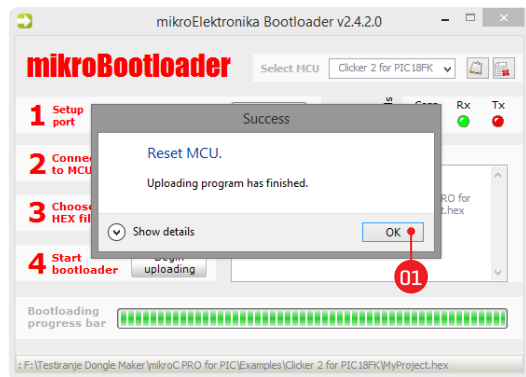


Figure 3-7: Restarting MCU



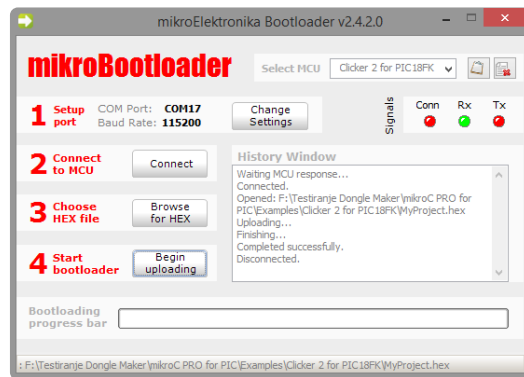


Figure 3-8: mikroBootloader ready for next job

- 01 Click **OK** button after the uploading process is finished.
- 02 Press **Reset button** on clicker 2 for PIC18FK board and wait for 5 seconds. Your program will run automatically.

## 3.2 XPRESS bootloader


The XPRESS bootloader allows easy drag and drop programming. When plugged into the USB it will show itself as a flash drive onto which you can simply drag a hex file for your MCU. The hex file can be generated by any compiler. After the hex file is placed onto the clicker 2 for PIC18FK it will program the main MCU. This functionality is enabled by the PIC16F1454 which acts both as a drag and drop programmer and Virtual COM port. The additional bootloader in the main MCU is not needed for this to work.

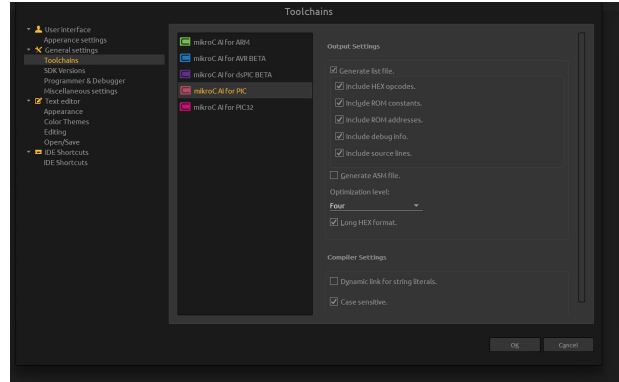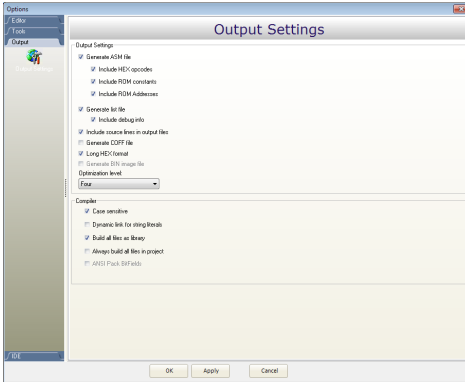

**NOTE** | When generating HEX files from NECTO Studio or mikroC PRO for PIC compilers, make sure that the “Long HEX format” box is checked.

## 3.3 Programming with mikroProg programmer

The microcontroller can be programmed with external **mikroProg for PIC programmer** and **mikroProg Suite for PIC software**. The external programmer is connected to the development system via 1x5 connector **Figure 3-9. mikroProg** is a fast USB 2.0 programmer with hardware debugger support. It supports PIC10®, dsPIC30/33®, PIC24® and PIC32® devices in a single programmer. It supports over 570 microcontrollers from Microchip®. Outstanding performance, easy operation and elegant design are its key features.

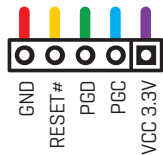

clicker 2 for  
PIC18FK 1x5  
programming  
headers

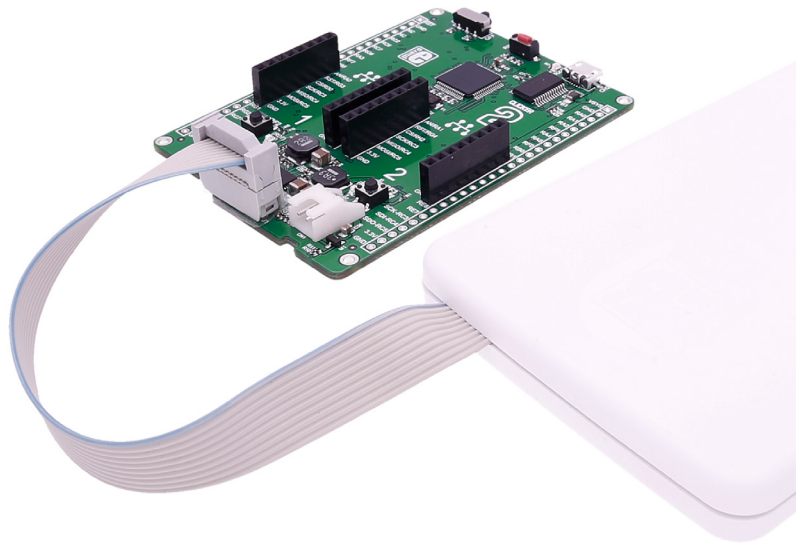


Figure 3-9: mikroProg connector

## 3.4 mikroProg Suite for PIC software

**mikroProg** programmer requires special programming software called **mikroProg Suite for PIC®**. This software is used for programming of ALL Microchip® microcontroller families, including PIC10®, PIC12®, PIC16®, PIC18®, dsPIC30/33®, PIC24® and PIC32®. Software has intuitive interface and SingleClick™ programming technology. Just by downloading the latest version of **mikroProg Suite** your programmer is ready to program new devices. **mikroProg Suite** is updated regularly, at least four times a year, so your programmer will be more and more powerful with each new release.

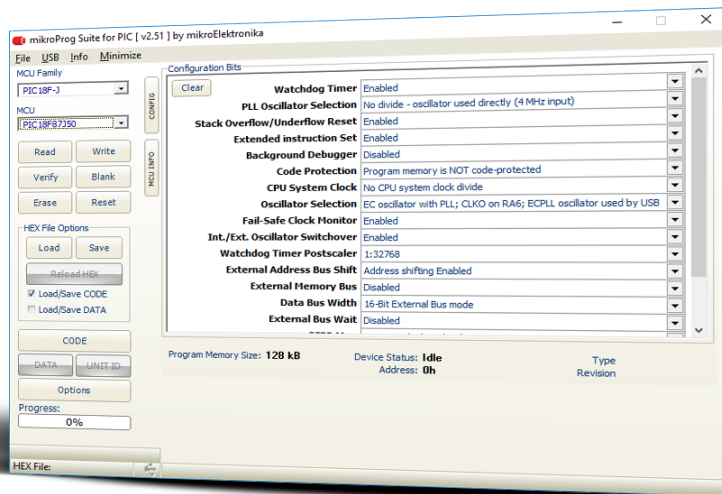


Figure 3-10: Main window of mikroProg Suite for PIC® programming software



## 4. Buttons and LEDs

The board also contains a **01 reset button** and a pair of **02 buttons** and **03 LEDs**, as well as an ON/OFF switch. The RESET button is used to manually reset the microcontroller—it generates a low voltage level on the microcontroller's reset pin. LEDs can be used for visual indication of the logic state on two pins [RH3 and RD7]. An active LED indicates that a logic high [1] is present on the pin. Pressing any of the two buttons can change the logic state of the microcontroller pins [T2 and T3] from logic high [1] to logic low [0].

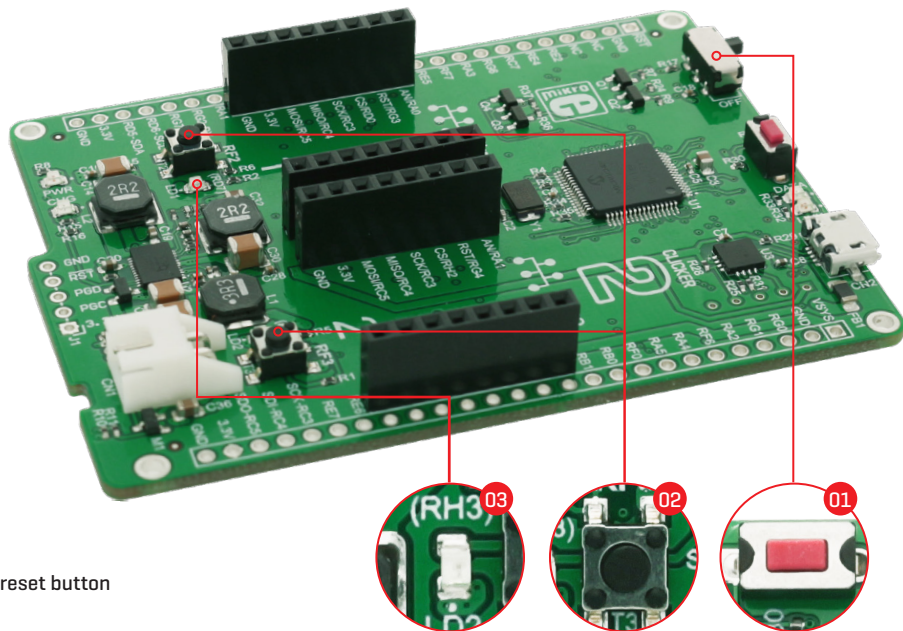


Figure 4-1: Two LEDs, two buttons and a reset button

## 5. Power management and battery charger

Clicker 2 for PIC18FK features LTC®3586-2, a highly integrated power management and battery charger IC that includes a current limited switching PowerPath manager. LTC®3586 also enables battery charging over a USB connection.


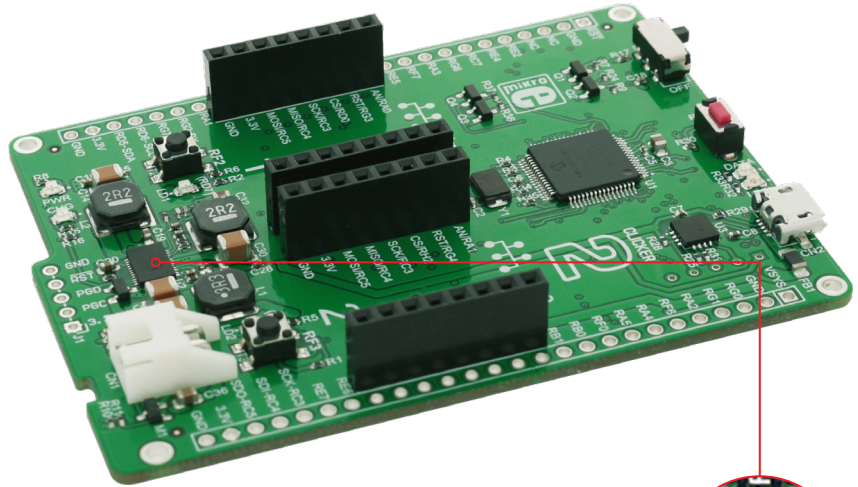


Figure 5-1:  
power  
management and  
battery charger IC

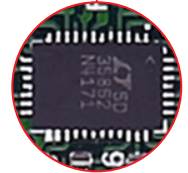

## 6. Oscillators

Board is equipped with 8MHz crystal oscillator [X1] circuit that provides external clock waveform to the microcontroller **OSC1** and **OSC2** pins. This base frequency is suitable for further clock multipliers and ideal for generation of necessary USB clock, which ensures proper operation of bootloader and your custom USB-based applications.


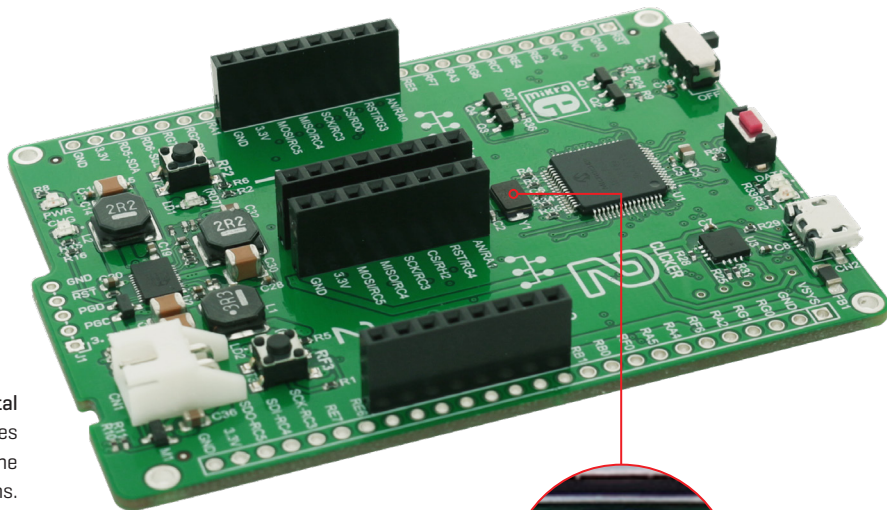


Figure 6-1:  
8MHz crystal oscillator  
module [X1]

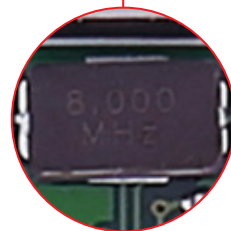

## 7. USB connection

PIC18FK microcontrollers has an integrated USB module, which enables you to implement USB communication functionality to your clicker 2 board. Connection with target USB host is done over a micro USB connector which is positioned next to the battery connector.


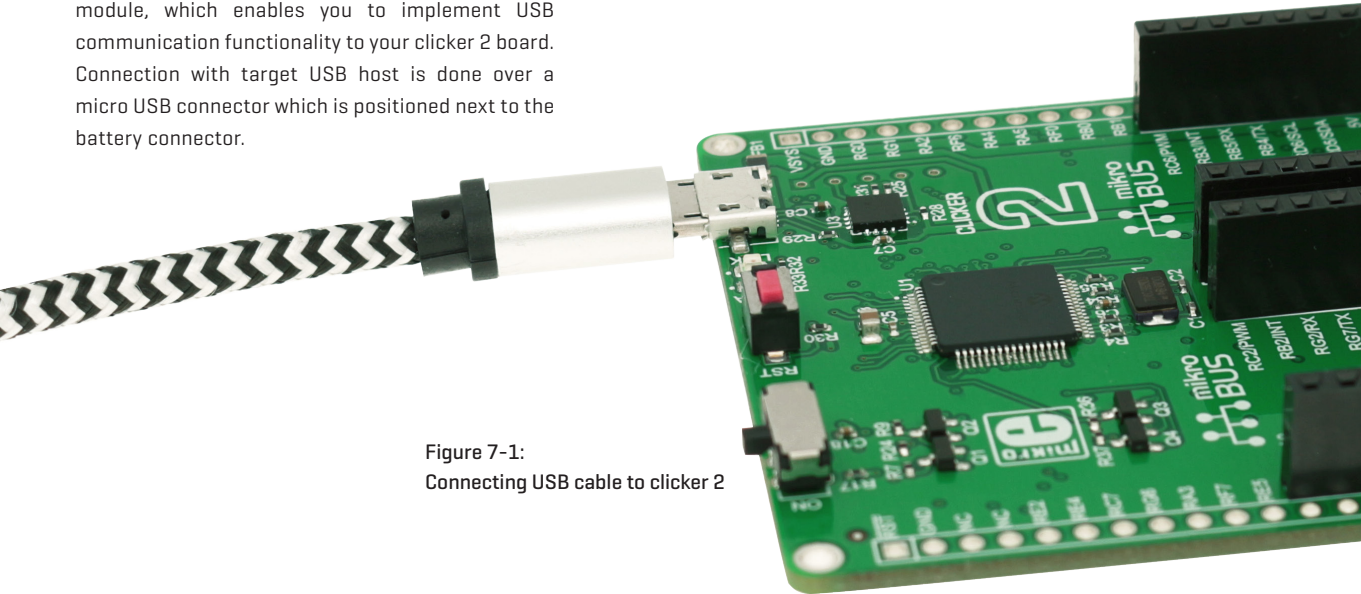


Figure 7-1:  
Connecting USB cable to clicker 2

# 8. Pinout

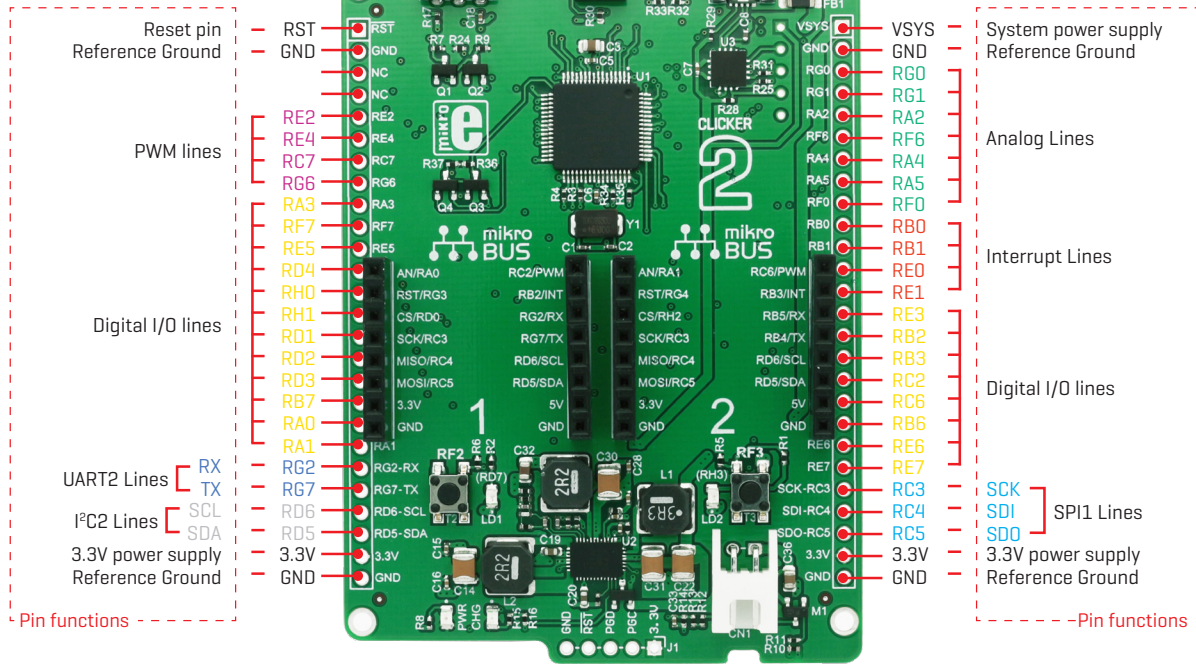

# 8.1 mikroBUS™ pinouts

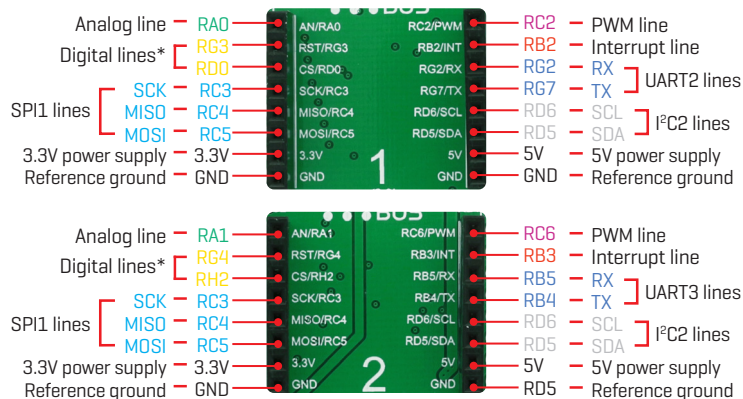


Figure 9-1: mikroBUS™ individual and shared lines

■ Digital lines 
 ■ Analog Lines 
 ■ Interrupt Lines 
 ■ SPI Lines 
 ■ I2C Lines 
 ■ UART lines 
 ■ PWM lines



## 9. Click boards™ are plug and play!


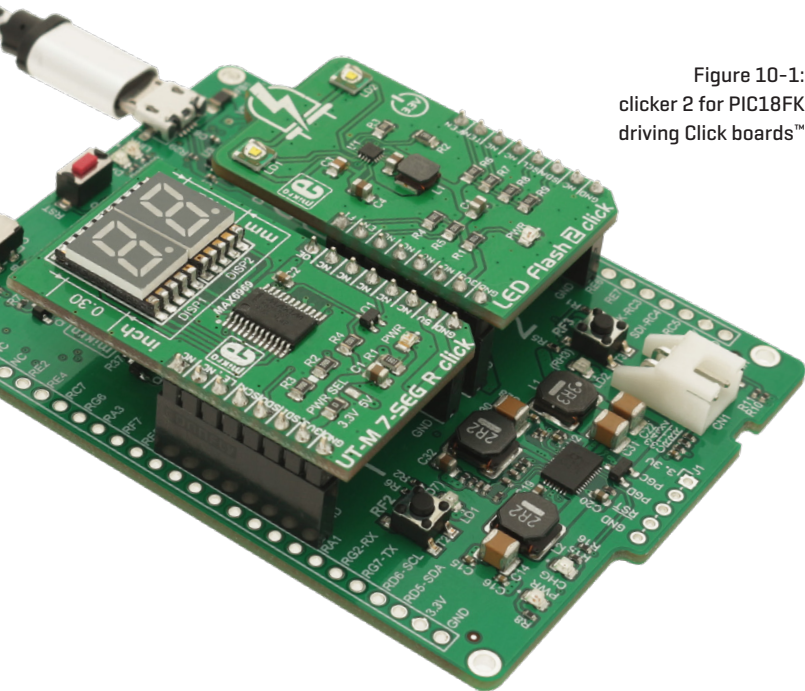


Figure 10-1:  
clicker 2 for PIC18FK  
driving Click boards™

Up to now, MikroElektronika has released more than 1000 Click boards™. It is our intention to provide you with as many add-on boards as possible, so you will be able to expand your development board with additional functionality. Each board comes with a set of working example code. Please visit the Click boards™ webpage for the complete list of currently available boards: [mikroe.com/click](http://mikroe.com/click)

# 10. Dimensions



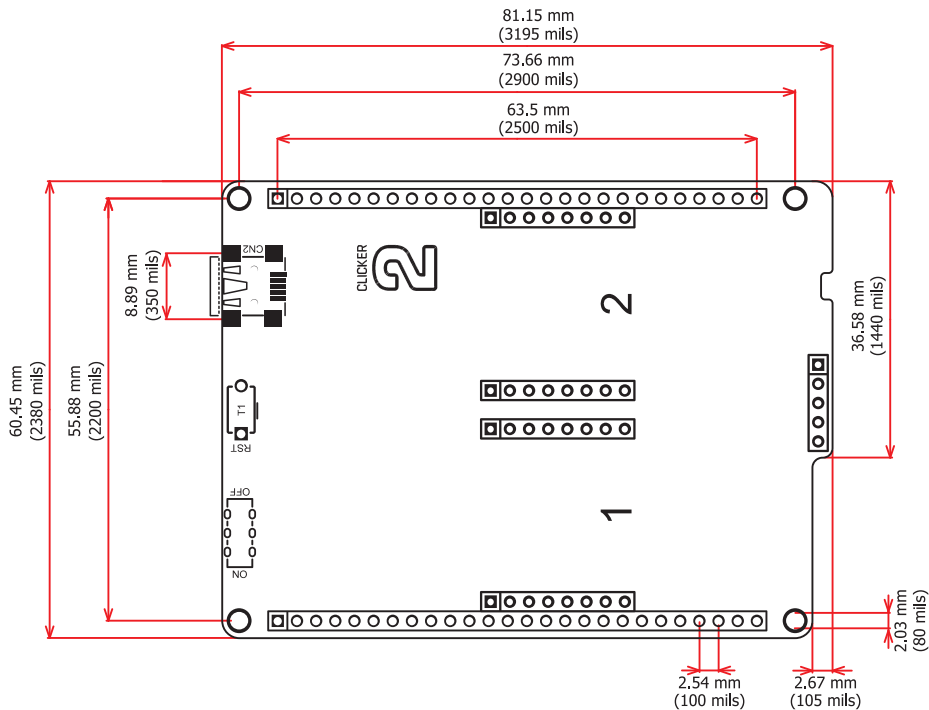

# DISCLAIMER

All the products owned by MikroElektronika are protected by copyright law and international copyright treaty. Therefore, this manual is to be treated as any other copyright material. No part of this manual, including product and software described herein, may be reproduced, stored in a retrieval system, translated or transmitted in any form or by any means, without the prior written permission of MikroElektronika. The manual PDF edition can be printed for private or local use, but not for distribution. Any modification of this manual is prohibited. MikroElektronika provides this manual 'as is' without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties or conditions of merchantability or fitness for a particular purpose. MikroElektronika shall assume no responsibility or liability for any errors, omissions and inaccuracies that may appear in this manual. In no event shall MikroElektronika, its directors, officers, employees or distributors be liable for any indirect, specific, incidental or consequential damages (including damages for loss of business profits and business information, business interruption or any other pecuniary loss) arising out of the use of this manual or product, even if MikroElektronika has been advised of the possibility of such damages. MikroElektronika reserves the right to change information contained in this manual at any time without prior notice, if necessary.

## HIGH RISK ACTIVITIES

The products of MikroElektronika are not fault – tolerant nor designed, manufactured or intended for use or resale as on – line control equipment in hazardous environments requiring fail – safe performance, such as in the operation of nuclear facilities, aircraft navigation or communication systems, air traffic control, direct life support machines or weapons systems in which the failure of Software could lead directly to death, personal injury or severe physical or environmental damage ('High Risk Activities'). MikroElektronika and its suppliers specifically disclaim any expressed or implied warranty of fitness for High Risk Activities.

## TRADEMARKS

The MikroElektronika name and logo, mikroC, mikroBasic, mikroPascal, Visual TFT, Visual GLCD, mikroProg, Ready, MINI, mikroBUS™, EasyPIC, EasyAVR, Easy8051, Click boards™ and mikromedia are trademarks of MikroElektronika. All other trademarks mentioned herein are property of their respective companies. All other product and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are only used for identification or explanation and to the owners' benefit, with no intent to infringe.

If you want to learn more about our products, please visit our web site at **[www.mikroe.com](http://www.mikroe.com)**

If you are experiencing some problems with any of our products or just need additional information, please place your ticket at **<https://helpdesk.mikroe.com/>**

If you have any questions, comments or business proposals, do not hesitate to contact us at **[office@mikroe.com](mailto:office@mikroe.com)**



Designed by MikroElektronika